

30GX080-350, 30GXN,R080-528 Accessory Sound Reduction/Hail Guard Wind Baffle Hoods

Installation Instructions

See Table 1 for Part Numbers

CONTENTS

SAFETY CONSIDERATIONS	1
INTRODUCTION	1-3
Nomenclature	1
INSTALLATION	3-17
Step 1 — Cooler and Oil Separator	
Side Assembly	3
Step 2 — Header End Assembly	4

SAFETY CONSIDERATIONS

When installing this accessory, observe precautions in the literature and on any labels attached to the equipment, and all other safety precautions that may apply.

- · Follow all safety codes.
- Wear safety glasses and work gloves.
- Use care in handling and installing this accessory.



ELECTRIC SHOCK HAZARD

To avoid the possibility of electrical shock, open and tag all disconnects before installing this equipment.

INTRODUCTION

Table 1 lists the part numbers. Table 2 lists the usage for the accessory kits. Table 3 lists the end kit contents. The end kit is used with sound reduction applications only. Table 4 lists the side kit contents. The side kit is used in sound reduction, hail guard, and wind baffle applications.

Table 1 — Part Numbers

PART NO. 30GX-900	DESCRIPTION
015	30GX080-350, 30GXN,R080-350 End
016	30GX080-105, 30GXN,R080, 090* Side
017	30GX106-125, 30GXN,R083, 093-115, 125, 135* Side
018	30GX136, 150, 160, 30GXN,R118, 128, 138, 150, 160* Side
019	30GX151, 161, 175, 30GXN,R153, 174, 175, 204, 205, 225* Side; 30GX205, 225 Cooler Side
020	30GX176; 30GXN,R163, 178, 249, 250, 264* Side; 30GX206, 226, 250 Cooler Side
028	30GX205, 225 Oil Separator Side
029	30GX206, 226, 250 Oil Separator Side
030	30GX251, 265 Cooler Side; 30GXN,R208, 228* Side
031	30GX251, 265 Oil Separator Side
039	30GX281-350 Cooler Side; 30GXN,R253, 268-350* Side
040	30GX281-350 Oil Separator Side

^{*}And associated modular sizes (see Table 5 for Duplex Combinations).

The 30GX sound reduction hood is designed to muffle compressor noise, protect against hail, and provide wind baffling (when used with the low ambient Motormaster® control accessory). The enclosure kits contain all of the parts and hardware necessary to assemble this accessory. For hail guard protection, only the vertical coil side of the unit requires hoods to be installed. Wind baffling requires hoods on both sides, but not on the ends of the unit. For sound reduction, the unit should have hoods installed on the end and both sides.

Check each item for shipping damage. If any damage is found, file a claim with the shipping agent immediately. If any item is missing or if any part does not assemble properly, notify your Carrier distributor.

Nomenclature — In these instructions, descriptions of units and locations of panels are identified as follows:

UNIT

- Cooler Side Viewed facing the cooler/compressor side of the unit.
- Oil Separator Side Viewed facing the oil separator side of the unit.
- Control Box/Power End Viewed facing the control box end on 30GX, 30GXN,R080-178, and the power box end on 30GX, 30GXN,R204-350.
- Header End Viewed facing the header end of the unit opposite of the control/power box end of the unit.

PANELS

- Support Bracket Used to support side panels, except on corner posts.
- Side Panel Triangular panel installed on the unit.
- Top Panel Panel installed on top of the side panels.

Table 2 — Accessory Hood Usage

	(Quantity of) 30GX-900		
UNIT	For Hail Guard Only, Order	For Wind Baffle, Add	For Sound Reduction, Add
30GX080-105 30GXN,R080, 090	(1) 016	(1) 016	(1) 015
30GX106-125 30GXN,R083, 093-115, 125, 135	(1) 017	(1) 017	(1) 015
30GX136,150,160 30GXN,R118, 128, 138, 150, 160	(1) 018	(1) 018	(1) 015
30GX151,161,175 30GXN,R153, 174, 175, 204, 205, 225	(1) 019	(1) 019	(1) 015
30GX176 30GXN,R163, 178, 249, 250, 264	(1) 020	(1) 020	(1) 015
30GX205,225	(1) 028	(1) 019	(1) 015
30GX206,226,250	(1) 029	(1) 020	(1) 015
30GX251,265	(1) 031	(1) 030	(1) 015
30GX281,350	(1) 040	(1) 039	(1) 015
30GXN,R253, 268-350	(1) 039	(1) 039	(1) 015
30GXN,R208, 228	(1) 030	(1) 030	(1) 015

Table 3 — End Kit Contents

ACCESSORY KIT PART NO. DESCRIPTION		QTY	ITEM PART NO.
30GX-900015	Top Panel (76-in.)	2	30GX501122
	Side Panel	4	30GX501118
	Screw	36	AL48AM307
	Seal Strip (76-in.)	1	QR09-19

Table 4 — Side Kit Contents

ACCESSORY KIT PART NO.	UNIT SIZE 30GX (30GXN,R)*	DESCRIPTION	QTY	ITEM PART NO.
		Top Panel	6	30GX501124
	000 105	Side Panel	12	30GX501118
30GX-900016	080-105 (080, 090)	Support Bracket	1	30GX501117
	(555, 555)	Screw	112	AL48AM307
		Seal Strip (46-in.)	2	QR09-19
		Top Panel	6	30GX501123
	106-125	Side Panel	12	30GX501118
30GX-900017	(083, 093-115, 125, 135)	Support Bracket	1	30GX501117
		Screw	112	AL48AM307
		Seal Strip (55-in.)	2	QR09-19
		Top Panel	6	30GX501123
		Top Panel Side Panel	3 18	30GX501125
30GX-900018	136, 150, 160	Support Bracket	2	30GX501118 30GX501117
30GX-900016	(118, 128, 138, 150, 160)	Screw	170	AL48AM307
	-	Seal Strip (55-in.)	2	QR09-19
		Seal Strip (32-in.)	1	QR09-19
		Top Panel	6	30GX501123
		Top Panel	6	30GX501124
	154 404 475	Side Panel	24	30GX501124 30GX501118
30GX-900019	151, 161, 175, 205, 225	Support Bracket	3	30GX501117
334, 300 - 013	(153, 174, 175, 204, 205, 225)	Screw	228	AL48AM307
	' ' ' ' ' ' ' ' ' '	Seal Strip (55-in.)	2	QR09-19
		Seal Strip (46-in.)	2	QR09-19
		Top Panel	3	30GX501119
		Top Panel	3	30GX501123
		Top Panel	9	30GX501124
		Side Panel	30	30GX501118
30GX-900020	176, 206, 226, 250	Support Bracket	4	30GX501117
	(163, 178, 249, 250, 264)	Screw	286	AL48AM307
		Seal Strip (55-in.)	1	QR09-19
		Seal Strip (46-in.)	3	QR09-19
		Seal Strip (41-in.)	1	QR09-19
		Top Panel	3	30GX501124
		Top Panel	3	30GX502171
		Top Panel	3	30GX502172
		Side Panel	18	30GX501118
30GX-900028	205, 225	Support Bracket	3	30GX501117
		Screw	174	AL48AM307
		Seal Strip (46-in.)	1	QR09-19
		Seal Strip (58-in.)	1	QR09-19
	<u> </u>	Seal Strip (74-in.)	1	QR09-19
		Top Panel	6	30GX501124
	Ţ	Top Panel	6	30GX502171
	Ţ	Top Panel	3	30GX502173
	Ţ	Side Panel	24	30GX501118
30GX-900029	206, 226, 250	Support Bracket	4	30GX501117
		Screw	232	AL48AM307
		Seal Strip (46-in.)	2	QR09-19
		Seal Strip (44-in.)	1	QR09-19
		Seal Strip (74-in.)	1	QR09-19
	<u> </u>	Top Panel	12	30GX502172
	<u> </u>	Top Panel	3	30GX502174
30GX-900030	251, 265	Side Panel	30	30GX501118
	(208, 228)	Support Bracket	4	30GX501117
	(200, 220)	Screw	286	AL48AM307
		Seal Strip (37-in.)	1	QR09-19
		Seal Strip (58-in.)	4	QR09-19
30GX-900031		Top Panel	12	30GX501124
		Top Panel	3	30GX502172
	054 555	Side Panel	30	30GX501118
	251, 265	Support Bracket	5	30GX501117
		Screw	290	AL48AM307
		Seal Strip (46-in.)	4	QR09-19
		Seal Strip (58-in.)	1	QR09-19

	`
_	$\overline{}$

ACCESSORY KIT PART NO.	UNIT SIZE 30GX (30GXN,R)*	DESCRIPTION	QTY	ITEM PART NO.
		Top Panel	6	30GX502172
		Top Panel	6	30GX502171
		Top Panel	3	30GX501119
		Side Panel	30	30GX501118
30GX-900039	281-350 (253, 268-350)	Support Bracket	4	30GX501117
		Screw	286	AL48AM307
		Seal Strip (58-in.)	2	QR09-19
		Seal Strip (74-in.)	2	QR09-19
		Seal Strip (41-in.)	1	QR09-19
	281-350	Top Panel	15	30GX501124
		Top Panel	3	30GX502173
		Side Panel	36	30GX501118
30GX-900040		Support Bracket	6	30GX501117
		Screw	312	AL48AM307
		Seal Strip (46-in.)	5	QR09-19
		Seal Strip (44-in.)	1	QR09-19

^{*}And associated modular units (see Table 5 for Duplex Combinations).

INSTALLATION

NOTE: The unit has the necessary holes pre-drilled to accept the screws that come in the accessory package. The exception is the attachment for the top of the vertical support bracket. Holes must be drilled into the top edge of the unit at the correct location to accept the screws that secure the bracket. Correct location and orientation of the vertical support brackets is necessary in order to install this accessory. The support bracket must be vertical for the panels to fit properly. When installing this accessory, use the screws supplied with the accessory kit. Figures 1 and 2 detail the location and orientation of the supports. Use the screws provided with this kit for installation. Proper installation of the vertical support brackets is the first and most important step of this process. When the panels are properly mounted, the insulated side of each panel will face inward, toward the unit.

NOTE: When properly installed, the insulated side of each panel faces the unit.

30GXN,R220-528 duplex chillers are shipped as two independent units (see Table 5 for duplex unit designations). The chiller is to be rigged and placed according to the rigging instructions for each individual module.

Step 1 — Cooler and Oil Separator Side Assembly

- a. Join 3 side panels to the corner posts on the control/power box end of the unit using the screws supplied in the accessory package. See Fig. 3 and 4 and unit assembly (Fig. 5A-5L). The insulated sides of the panels should face inward. Repeat this procedure for the header end of the unit.
- b. Install the vertical support bracket(s) to the middle section(s) of the unit using the screws supplied in the accessory package. Holes have been pre-drilled in the base rail of the unit to accept screws where needed. However, holes must be drilled in the necessary unit location(s) for the top of the support bracket. To ensure proper fit, be sure that the support bracket is vertical. Repeat this procedure when additional support brackets are needed.
- c. Join 6 side panels to each support bracket using the screws supplied in the accessory package. The insulation should face away from the center of the support bracket.
- d. After all the side panels have been secured to the unit, partially drive 5 screws into the outside of each side panel along its longest edge. Be sure not to fully tighten these

- screws until the top panels have been properly secured into place.
- e. Attach the seal strip to the top flange of each top panel that will be used along the top edge of the unit as shown in Fig. 6. Install the seal strip to the flange facing the unit. This seal strip will protect the insulation in the panels from moisture.
- f. Locate the keyways along each top panel. Install the top panels onto the side panels by sliding the keyways over the partially installed screws described in Step 1d. Slide the top panels toward the unit to lock the top panel into place and tighten the screws. These keyways allow for easy removal when maintenance becomes necessary.

→ Table 5 — 30GXN,GXR Duplex Combinations

SIZE 30GXN,GXR	MODULE A	MODULE B
220 (50 Hz only)	125	090
240 (50 Hz only)	125	115
275 (50 Hz only)	135	135
283 (60 Hz & 50 Hz)	153	138
300 (50 Hz only)	160	135
303 (60 Hz & 50 Hz)	163	138
320 (50 Hz only)	160	160
328 (60 Hz & 50 Hz)	178	153
345 (50 Hz only)	175	175
353 (60 Hz & 50 Hz)	178	178
365 (50 Hz only)	250	135
370 (60 Hz only)	225	150
373 (60 Hz & 50 Hz)	253	138
390 (60 Hz only)	264	135
393 (60 Hz & 50 Hz)	253	153
395 (50 Hz only)	264	135
410 (50 Hz only)	225	205
415 (60 Hz only)	264	160
418 (60 Hz & 50 Hz)	268	153
440 (50 Hz only)	225	225
450 (60 Hz only)	225	225
453 (60 Hz & 50 Hz)	228	228
470 (50 Hz only)	250	225
475 (60 Hz only)	249	225
478 (60 Hz & 50 Hz)	253	228
495 (50 Hz only)	250	250
500 (60 Hz only)	249	249
503 (60 Hz & 50 Hz)	253	253
520 (50 Hz only)	264	264
525 (60 Hz only)	264	264
528 (60 Hz & 50 Hz)	268	268

Step 2 — Header End Assembly

- a. Join 2 side panels to each corner post on the header end of the unit using the screws supplied in the accessory package.
 See Fig. 4 and 5A-5L. The insulated sides of the panels should face inward.
- b. After all the side panels have been secured to the unit, partially drive 5 screws into the outside of each side panel along its longest edge. Be sure not to fully tighten these screws until the top panels have been properly secured into place.
- c. Attach the seal strip to the top flange of the top panel that will be used along the top edge of the unit as shown in

- Fig. 6. Install the seal strip to the flange facing the unit. This seal strip will protect the insulation in the panels from moisture.
- d. Locate the keyways along each top panel. Install the top panels onto the side panels by sliding the keyways over the partially installed screws described in Step 2b. Slide the top panels toward the unit to lock the top panel into place and tighten the screws. These keyways allow for easy removal when maintenance becomes necessary.

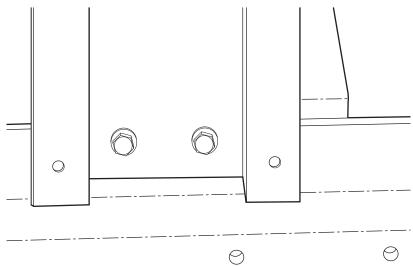


Fig. 1 — Typical Mounting of Vertical Support to Unit Base Rail

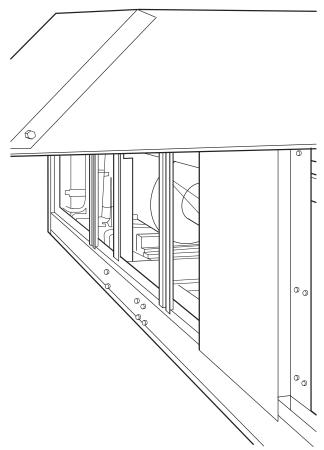


Fig. 2 — Vertical Supports Mounted to Unit

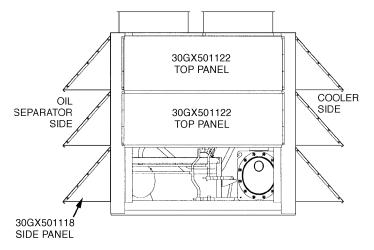


Fig. 3 — End View (30GX, 30GXN,R080-150, 160 Shown)


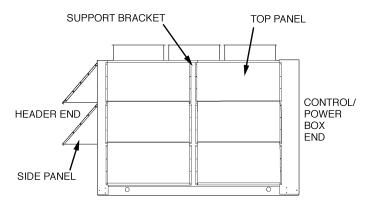


Fig. 4 — Side View (30GX106-125, 30GXN,R083, 093-115, 125, 135 Shown)


5

 \rightarrow

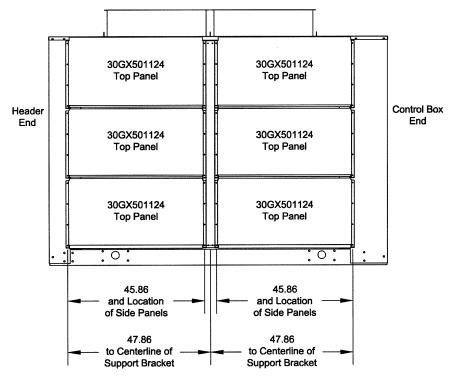

NOTE: All dimensions are in inches.


Fig. 5A — Unit Assembly, 30GX080-105, 30GXN,R080, 090 Both Sides

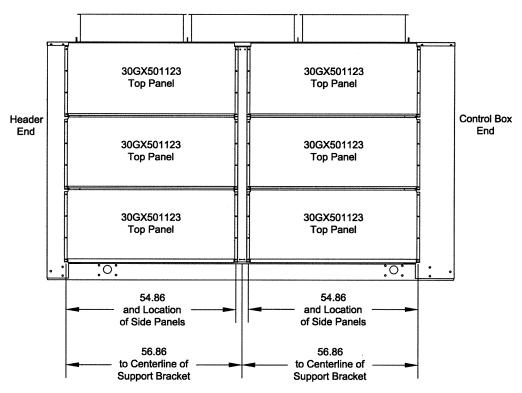

NOTE: All dimensions are in inches.

Fig. 5B — Unit Assembly, 30GX106-125, 30GXN,R083, 093-115, 125, 135 Both Sides

6

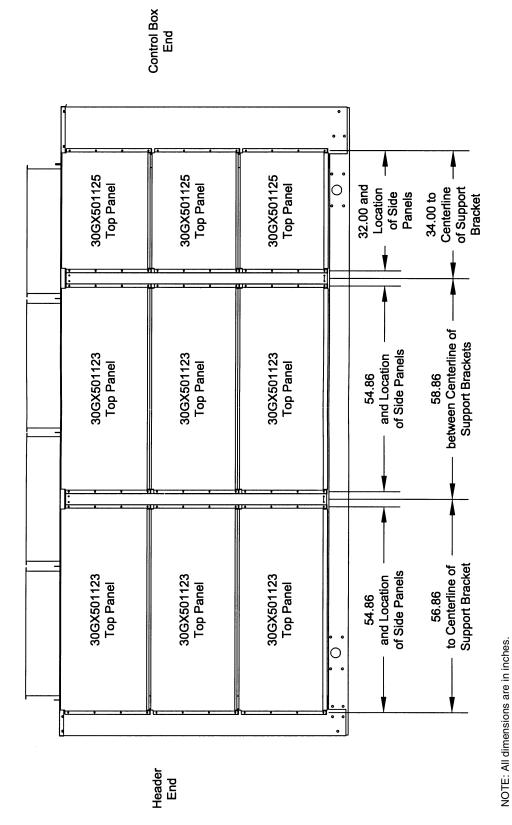

7

Fig. 5C — Unit Assembly, 30GX136,150,160, 30GXN,R118, 128, 138, 150, 160 Both Sides

 \uparrow

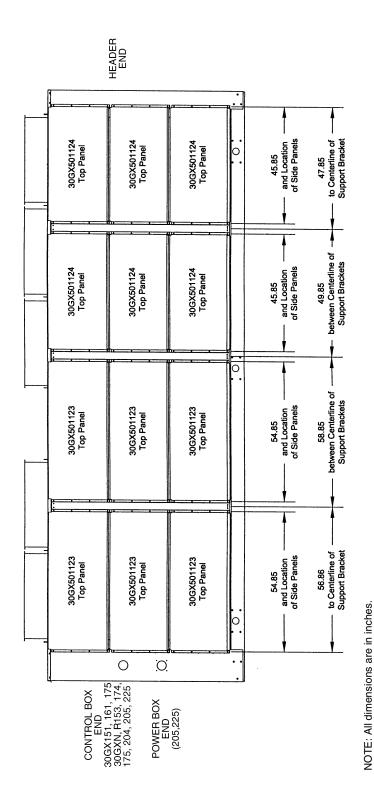


Fig. 5D — Unit Assembly, 30GX151,161,175, 30GXN,R153, 174, 175, 204, 205, 225 Both Sides; 30GX205,225 Cooler Side Only


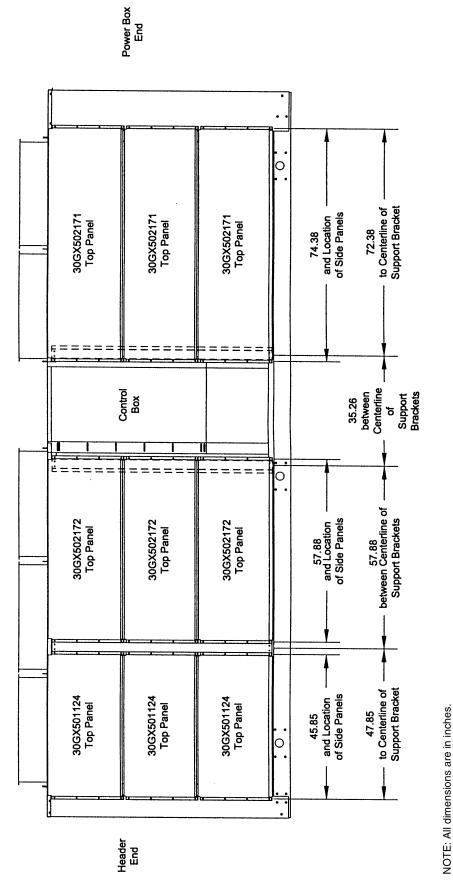


Fig. 5E — Unit Assembly, 30GX205, 225 Oil Separator Side Only



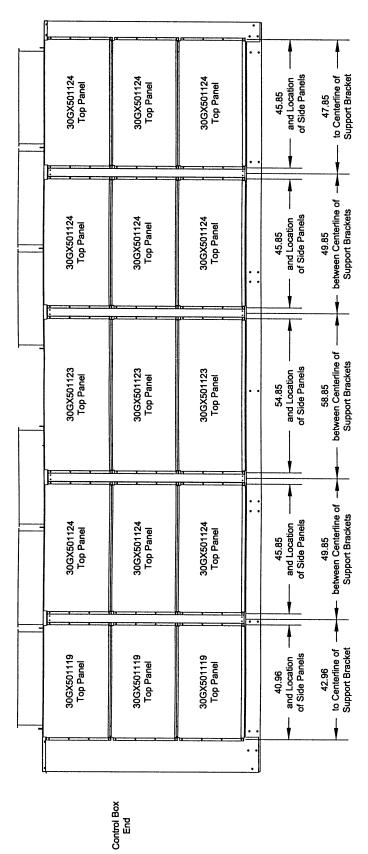

NOTE: All dimensions are in inches.

Fig. 5F — Unit Assembly, 30GX176; 30GXN,R163, 178 Both Sides

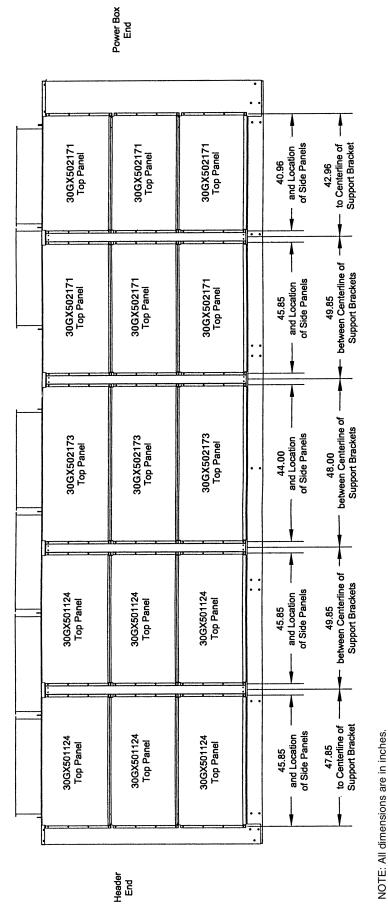


Fig. 5G — Unit Assembly, 30GX206, 226, 250 Oil Separator Side Only

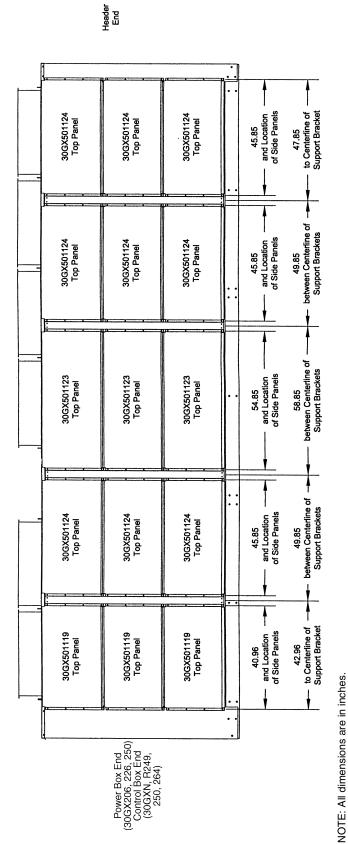


Fig. 5H — Unit Assembly, 30GX206, 226, 250 Cooler Side Only, 30GXN,R249, 250, 264 Both Sides

Power Box End (30GX206, 226, 250) Control Box End (30GXN, R249, 250, 264)

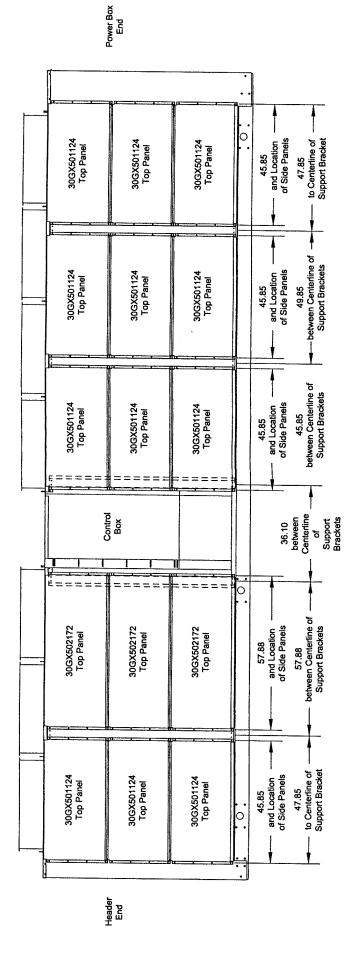


Fig. 51 — Unit Assembly, 30GX251,265 Oil Separator Side Only

NOTE: All dimensions are in inches.

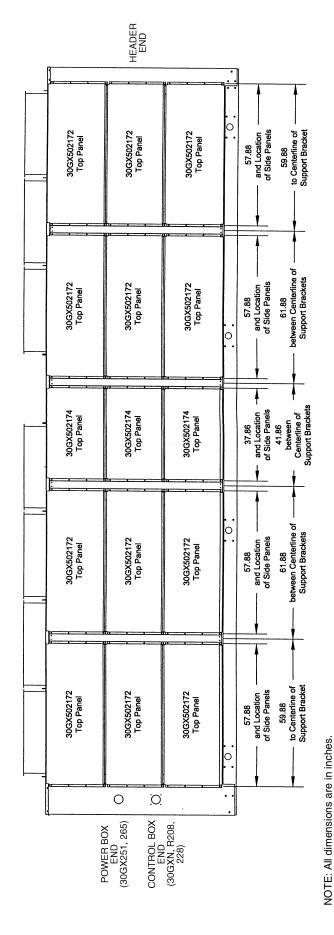


Fig. 5J — Unit Assembly, 30GX251, 265 Cooler Side Only and 30GXN,R208, 228 Both Sides

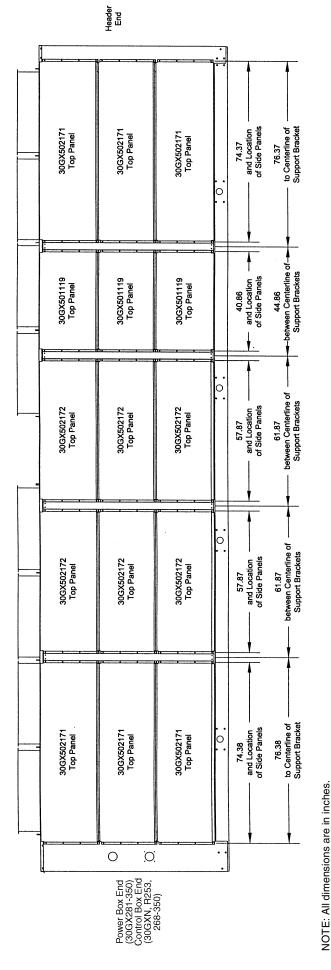


Fig. 5K — Unit Assembly, 30GX281-350 Cooler Side Only, 30GXN,R253, 268-350 Both Sides

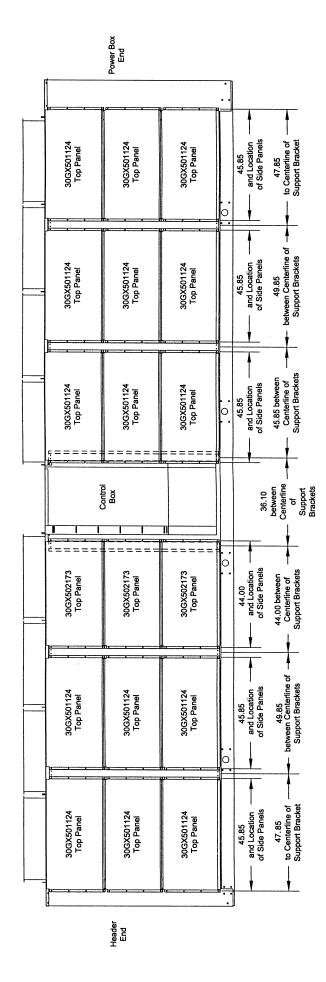


Fig. 5L — Unit Assembly, 30GX281-350 Oil Separator Side Only

NOTE: All dimensions are in inches.

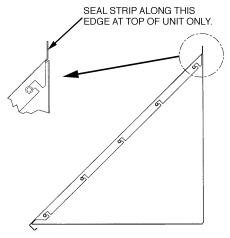


Fig. 6 — Side and Top Panel Configuration

