

## **Universal Controller Installation Instructions**

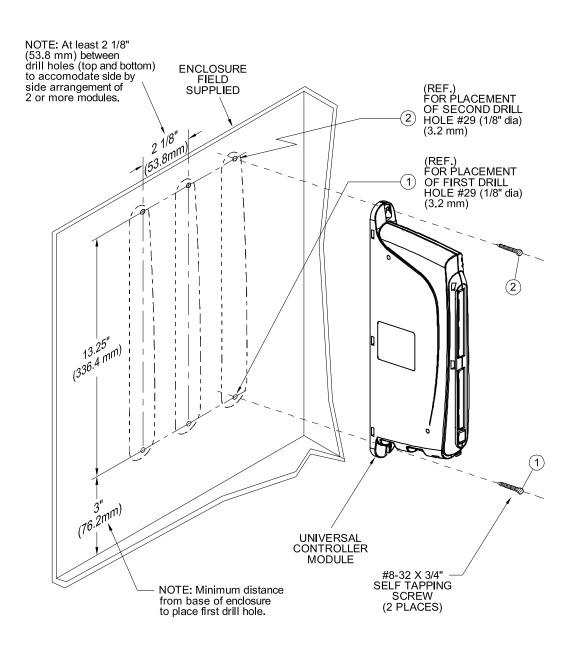


## **Universal Controller Power Connector Location**

**Warning:** If using a 24 Vac power supply to power the Universal Controller, do not use it also to power other non-Universal Controller modules or field devices (for example, actuators).

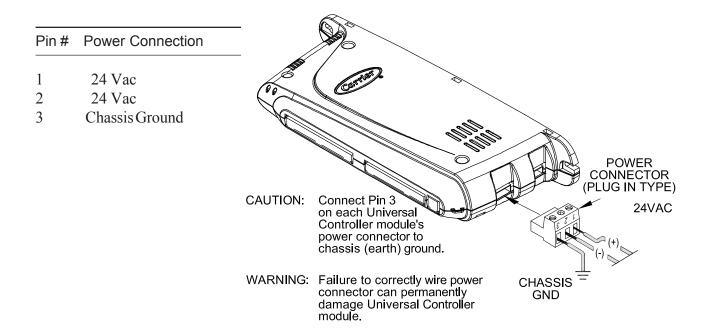

## **Universal Controller Communication Connector Location**

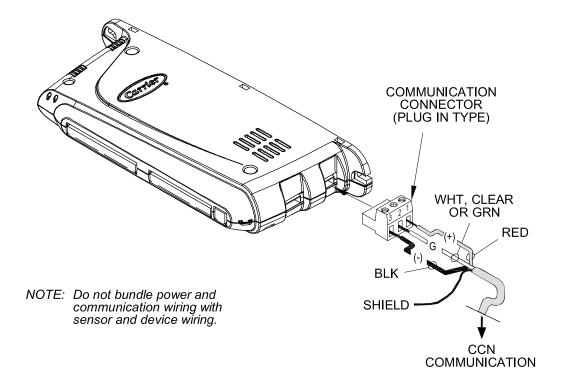

(Carrier)

997-040200-2 Rev. 02/05