



# Installation Instructions

## TABLE OF CONTENTS

PAGE

SAFETY CONSIDERATIONS.....	2
PARTS LIST.....	3
SYSTEM REQUIREMENTS.....	4
WIRING.....	4
CLEARANCES.....	7
INSTALLATION TIPS.....	8
ELECTRICAL DATA.....	10
CONNECTION DIAGRAMS.....	10
START-UP.....	13
TROUBLESHOOTING.....	14

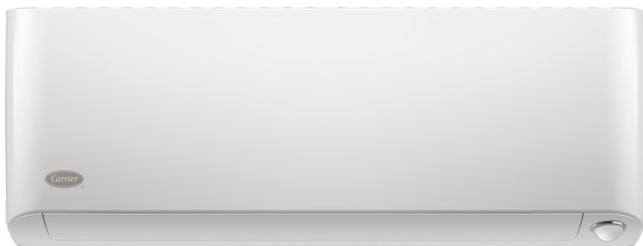


Fig. 1 — Sizes 09K to 12K



Fig. 2 — Sizes 18K to 24K

### NOTES:

Read the entire instruction manual before starting the installation.

Images are for illustration purposes only. Actual models may differ slightly.

## SAFETY CONSIDERATIONS

Installing, starting up, and servicing air-conditioning equipment can be hazardous due to system pressures, electrical components, and equipment location (roofs, elevated structures, etc.).

Only trained, qualified installers and service mechanics should install, start-up, and service this equipment.

Untrained personnel can perform basic maintenance functions such as coil cleaning. All other operations should be performed by trained service personnel only.

When working on the equipment, observe the precautions in the literature and on tags, stickers, and labels attached to the equipment.

Follow all safety codes. Wear safety glasses and work gloves. Keep a quenching cloth and a fire extinguisher nearby when brazing.

Use care in handling, rigging, and setting bulky equipment.

Read these instructions thoroughly and follow all warnings or cautions included in literature and attached to the unit. Consult local building codes and National Electrical Code (NEC) for special requirements.

Recognize safety information.

This is the safety-alert symbol . When you see this symbol on the unit and in instructions or manuals, be alert to the potential for personal injury. Understand these signal words: **DANGER**, **WARNING**, and **CAUTION**. These words are used with the safety-alert symbol.

**DANGER** identifies the most serious hazards which will result in severe personal injury or death. **WARNING** signifies hazards which could result in personal injury or death.

**CAUTION** is used to identify unsafe practices which may result in minor personal injury or product and property damage.

**NOTE** is used to highlight suggestions which will result in enhanced installation, reliability, or operation.



### WARNING

#### ELECTRICAL SHOCK HAZARD

Failure to follow this warning could result in personal injury or death.

Before installing, modifying, or servicing system, main electrical disconnect switch must be in the OFF position. There may be more than 1 disconnect switch. Lock out and tag switch with a suitable warning label.



### WARNING

#### ELECTRICAL SHOCK HAZARD

Failure to follow this warning could result in death, serious personal injury, and/or property damage. Never use air or gases containing oxygen for leak testing or operating refrigerant compressors. Pressurized mixtures of air or gases containing oxygen can lead to an explosion.



### CAUTION

#### EQUIPMENT DAMAGE HAZARD


Failure to follow this caution may result in equipment damage or improper operation.

Do not bury more than 36 in. (914 mm) of refrigerant pipe in the ground. If any section of pipe is buried, there must be a 6 in. (152 mm) vertical rise to the valve connections on the outdoor units. If more than the recommended length is buried, refrigerant may migrate to the cooler buried section during extended periods of system shutdown. This causes refrigerant slugging and could possibly damage the compressor at start-up.

# PARTS LIST

**Table 1: Parts List**

PART NAME	QUANTITY
Indoor Unit	1
Wall Mounting Plate	1
Wall Mounting Screw A ST3.9x25	5
Anchor	5
Air Filter	2
Wireless Remote Controller	1
Wireless Remote Controller Holder	1
Remote Controller Mounting Screw B (ST2.9x10)	1
Battery AAA.LR03	2
Multi-function board (installed on the front panel)	2
Flare nuts for liquid and gas pipes	1
Installation Instructions Manual	1
Owner's manual	1
Warranty Card	1
Drain Adapter	1
Stencil	1
Wi-Fi USB Dongle	1

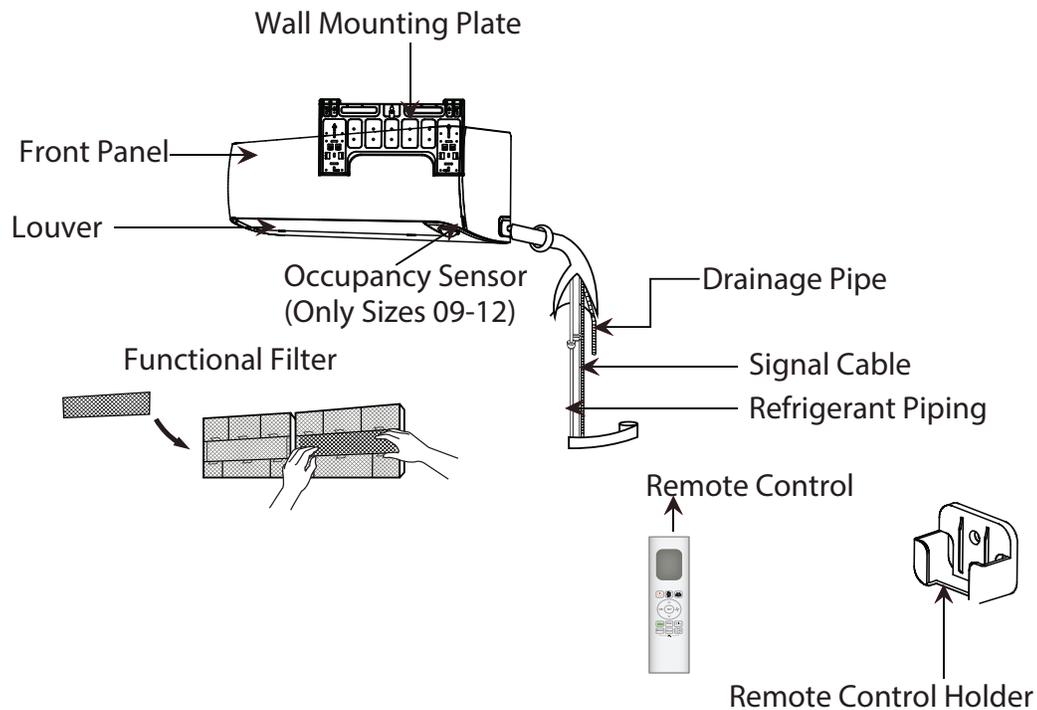

**Fig. 3 — Parts List**

**NOTES:**

If the outdoor unit is higher than the indoor unit, prevent rain from flowing into the indoor unit along the connection pipe by creating a downward arc in the connection pipe before it enters the wall to the indoor unit. This ensures that rain drips from the connection pipe before it enters the wall.

Piping and the interconnecting wiring are field supplied.

Figure 3 is only a sketch. Different models may be slightly different.

The following units are covered in these installation instructions.

**Table 2 — Unit Sizes**

DESCRIPTION	kBTUh	V-Ph-Hz	OUTDOOR MODEL
High Wall Heat Pump	9	208/230-1-60	40MPHAQ09XA3
	12	208/230-1-60	40MPHAQ12XA3
	18	208/230-1-60	40MPHAQ18XA3
	24	208/230-1-60	40MPHAQ24XA3

## SYSTEM REQUIREMENTS

Allow sufficient space for airflow and service of the unit. See Fig. 4 for the required minimum distances between the unit, walls or ceilings.

### Piping

**IMPORTANT: Both refrigerant lines must be insulated separately.**

Table 3 lists the pipe sizes for the indoor unit. Refer to the outdoor unit installation instructions for other allowed piping lengths and refrigerant information.

**Table 3 — Indoor Unit Pipe Sizes**

UNIT SIZE		9K (208-230V)	12K (208-230V)	18K (208-230V)	24K (208-230V)
Gas Pipe	In.	3/8	1/2	5/8	5/8
	(mm)	9.52	12.7	15.9	15.9
Liquid Pipe	In.	1/4	1/4	3/8	3/8
	(mm)	6.35	6.35	9.52	9.52

All outdoor units have an electronic expansion valve to manage the refrigerant flow of the fan coil connected.

## WIRING

All wires must be sized per NEC (National Electrical Code) or CEC (Canadian Electrical Code) and local codes. Use Electrical Data table MCA (minimum circuit amps) and MOCP (maximum over current protection) to correctly size the wires and the disconnect fuse or breakers respectively.

### Recommended Connection Method for Power and Communication Wiring

The main power is supplied to the outdoor unit. The field supplied 14/3 stranded wire with ground with a 600 volt insulation rating, power/communication wiring from the outdoor unit to indoor unit consists of four (4) wires and provides the power for the indoor unit. Two wires are line voltage AC power, one is communication wiring (S) and the other is a ground wire. Wiring between indoor and outdoor unit is polarity sensitive. The use of BX wire is **NOT** recommended.

If installed in a high Electromagnetic field (EMF) area and communication issues exists, a 14/2 stranded shielded wire can be used to replace L2 and (S) between outdoor unit and indoor unit landing the shield onto ground in the outdoor unit only.

 **CAUTION**

**EQUIPMENT DAMAGE HAZARD**  
Failure to follow this caution may result in equipment damage or improper operation.

Wires should be sized based on NEC and local codes.

 **CAUTION**

**EQUIPMENT DAMAGE HAZARD**  
Failure to follow this caution may result in equipment damage or improper operation.

Be sure to comply with local codes while running wire from the indoor unit to the outdoor unit.

Every wire must be connected firmly. Loose wiring may cause the terminal to overheat or result in unit malfunction. A fire hazard may also exist. Ensure all wiring is tightly connected.




No wire should touch the refrigerant tubing, compressor or any moving parts.

Disconnecting means must be provided and shall be located within sight and readily accessible from the air conditioner. Connecting cable with conduit shall be routed through the hole in the conduit panel.


# DIMENSIONS

**Table 4 — Indoor Unit Dimensions**

HIGH WALL UNIT SIZE		9K	12K	18K	24K
Voltage		(208/230V)	(208/230V)	(208/230V)	(208/230V)
Height	In. (mm)	11.7 (298)	11.7 (298)	14.25 (362)	14.25 (362)
Width	In. (mm)	35.2 (895)	35.2 (895)	49.57 (1259)	49.57 (1259)
Depth	In. (mm)	9.8 (248)	9.8 (248)	11.10 (282)	11.10 (282)
Weight-Net	Lbs (kg)	37.48 (17)	37.48 (17)	43.4(19.7)	43.4(19.7)

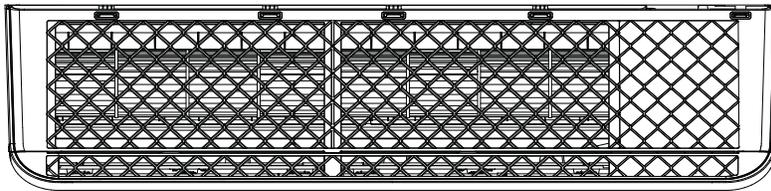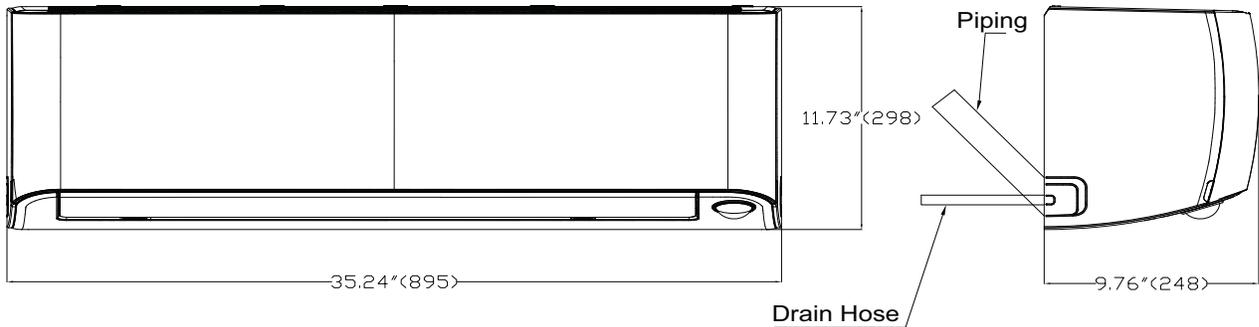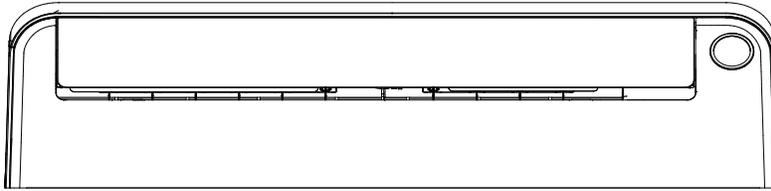

Drain Hose  $\varnothing$ 0.625"(16) L=25.20"(640) Units: Inch (mm)

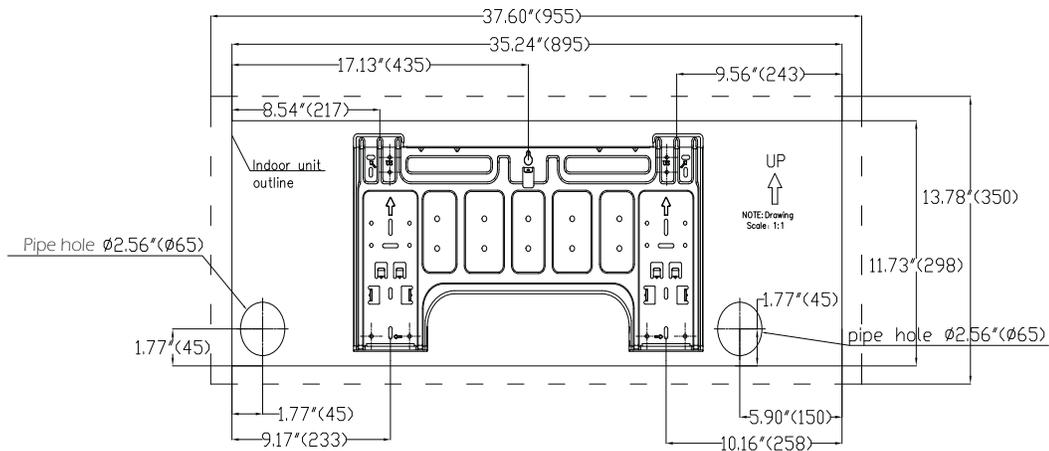

**Fig. 4 — Sizes 9K and 12K**

**NOTE:** Drain adapter included with the indoor unit to allow the use of a 3/4 in. PVC Schedule 40 where the actual outside diameter is 1.05 in.

# DIMENSIONS (CONT)


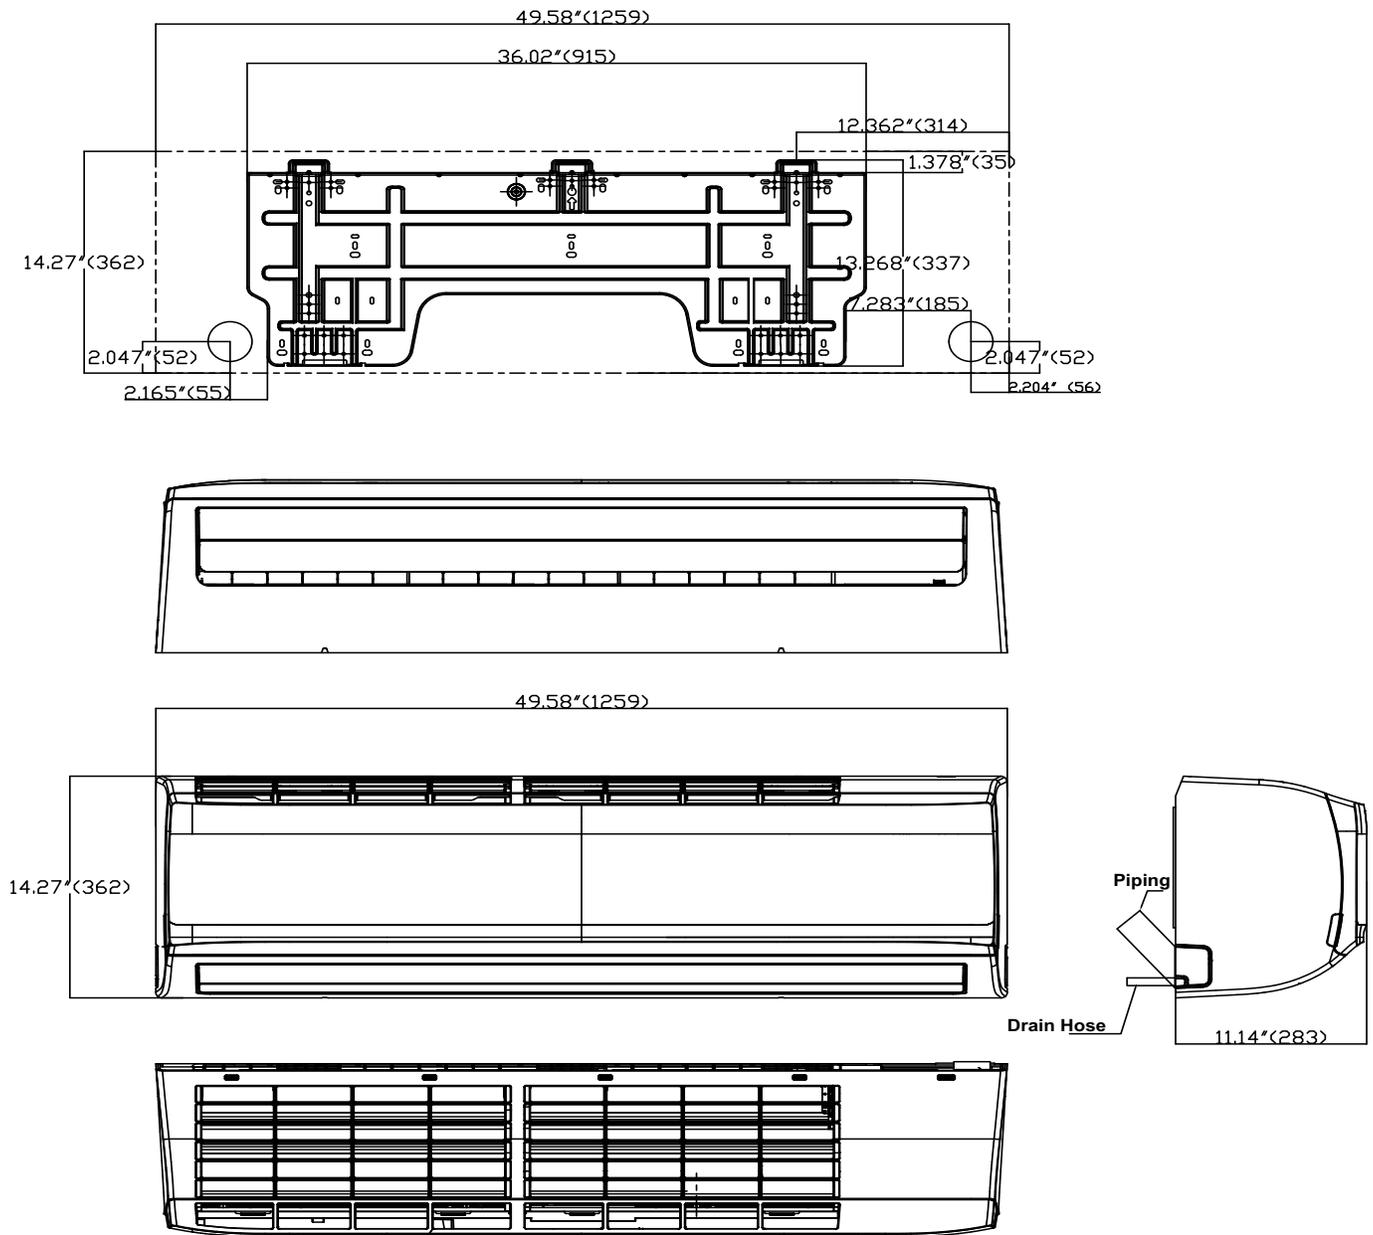


Fig. 5 — Sizes 18K and 24K

# CLEARANCES

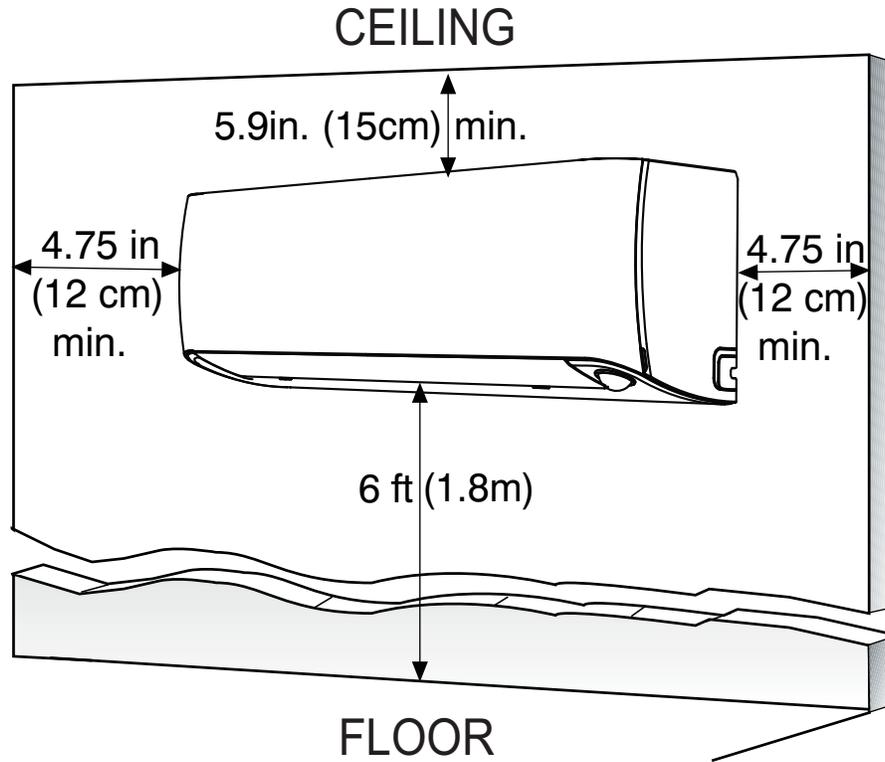

**Fig. 6 —Unit Clearances**

**NOTE:** The top clearance recommended for proper return airflow is 5.9in (15cm). Reduction of this clearance may decrease the performance of these units. This may be reduced to 3.2in (80mm) as long as the right and left clearances are achieved.

## INSTALLATION TIPS

### Ideal installation locations include:

#### Indoor Unit

- A location where there are no obstacles near inlet and outlet area.
- A location which can bear the weight of indoor unit.
- Do not install indoor units near a direct source of heat such as direct sunlight or a heating appliance.
- A location which provides appropriate clearances (see Fig. 6).

## INDOOR UNIT INSTALLATION

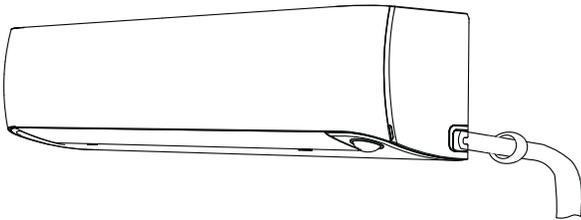


Fig. 7 —High Wall Unit

### Prior to Installation

Before installing the indoor unit, ensure the compatibility with the Outdoor unit using the product data as a reference.

#### Select the Installation Location:

Before installing the indoor unit, choose an appropriate location. The following are standards that should help you choose an appropriate location for the unit. Proper installation locations must meet the following standards:

1. Good air circulation
2. Convenient drainage
3. Noise from the unit will not disturb others
4. Firm and solid—the location will not vibrate
5. A site strong enough to support the weight of the unit
6. A location at least 3.28 ft. (1m) from all other electrical devices (e.g., TV, radio, computer)
7. **DO NOT** install the unit in the following locations:
  - a. Near any source of heat, steam, or combustible gas
  - b. Near flammable items such as curtains or clothing
  - c. Near any obstacle that might block air circulation
  - d. Near the doorway
  - e. In a location subject to direct sunlight

**NOTE: Wall Holes:** If there is no fixed refrigerant piping. While choosing a location, you should leave ample room for a wall hole (refer to the Drill wall hole for connective piping step) for the signal cable and refrigerant piping that connect the indoor and outdoor units. The default position for all piping is the right side of the indoor unit (while facing the unit). However, the unit can accommodate piping to both the left and right.

#### Attach the Mounting Plate to the Wall:

1. Carefully remove the mounting plate, which is attached to the back of the indoor unit.
2. Using the Stencil, determine the wall hole position. The mounting plate should be located horizontally and level on the wall. All minimum spacings shown in Fig. 6 should be maintained.
3. If the wall is block, brick, concrete or similar material, drill 0.2" (5 mm) diameter holes and insert anchors for the appropriate mounting screws.
4. Attach the mounting plate to the wall.

### Mounting Plate Dimensions

Different model sizes have different mounting plates. Ensure there is enough room to mount the indoor unit (refer to Figures 4 and 5). The following measurements can be located on these figures:

- Width of mounting plate
- Height of mounting plate
- Width of indoor unit relative to plate
- Height of indoor unit relative to plate
- Recommended position of wall hole (both to the left and right of mounting plate)
- Relative distances between screw holes.

#### Correct orientation of the Mounting Plate

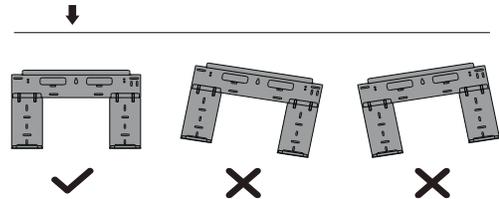


Fig. 8 —Mounting Plate Orientation

## DRILL HOLE IN WALL FOR THE INTERCONNECTING PIPING, DRAIN AND WIRING

### Refrigerant Line Routing

The refrigerant lines may be routed in any of the four directions shown in Fig. 10. For maximum serviceability, it is recommended to have refrigerant line flare connections and the drain connections on the outside of the wall that the fan coil will be mounted on.

#### If piping is going through the back:

- Determine the pipe hole position using the mounting plate as a template. Drill pipe hole diameter per values given in Figures 4 and 5. The outside pipe hole is 1/2-in. (13 mm) min. lower than inside pipe hole, so it slants slightly downward (see Fig. 9).

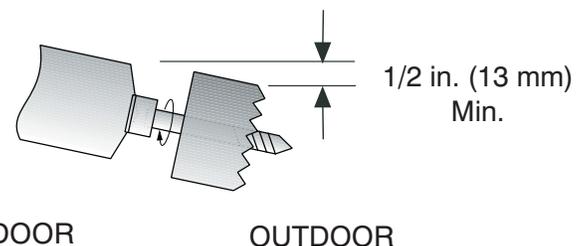


Fig. 9 —Drill Holes

#### If piping is going through the right or left side:

- Use a small saw blade to carefully remove the corresponding plastic covering on side panel and drill the appropriate size hole where the pipe is going through the wall.

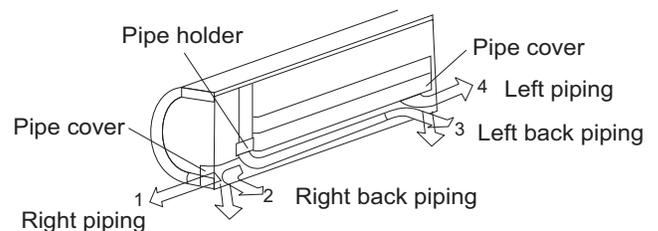



Fig. 10 —Piping Locations

## Prepare the Refrigerant Piping

The refrigerant piping is inside an insulating sleeve attached to the back of the unit. You must prepare the piping before passing it through the hole in the wall.

**NOTE: (Piping Angle) Refrigerant piping can exit the indoor unit from four different angles facing the front of the unit (see Fig. 11):**

1. Left-hand side
2. Left rear
3. Right-hand side
4. Right rear

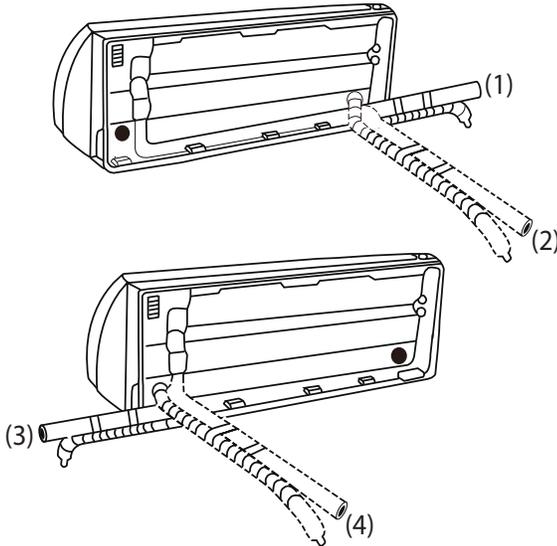

**Fig. 11 —Piping Angle**



## WARNING

### ELECTRICAL OPERATION HAZARD

Be extremely careful not to dent or damage the piping while bending them away from the unit. Any dents in the piping will affect the unit's performance.

If the refrigerant piping is already embedded in the wall, perform the following steps:


1. Hook the top of the indoor unit on the upper hook of the mounting plate. Keep in mind that the hooks on the mounting plate are smaller than the holes on the back of the unit. If you find that you do not have ample room to connect the embedded pipes to the indoor unit, the unit can be adjusted left or right by about 1.25-1.95in. (30-50mm), depending on the model (see Fig. 12).



Move to left or right

### Fig. 12 —Hook Indoor Unit to Mounting Plate

2. Use the holders in the mounting plate to prop up the unit, allowing you enough space to connect the refrigerant piping, signal cable, and the drain hose.

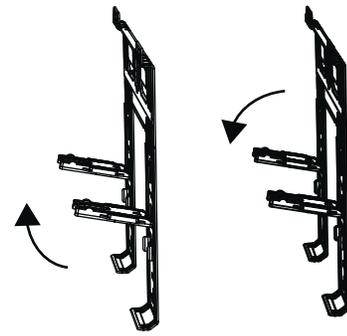


**Fig. 13 —Use Holder to Prop up the Unit**

3. Connect the drain hose and refrigerant piping.
4. Keep the pipe connection point exposed to perform the leak test.
5. After the leak test, wrap the connection point with insulation tape.
6. If the holders (see step 2.) are being used to prop out the unit, be sure to fold and latch them completely into the mounting plate. Remove any other bracket or wedge that is propping out the unit.
7. Using even pressure, push down on the bottom half of the unit. Keep pushing down until the unit snaps onto the hooks along the bottom of the mounting plate.

If there is no refrigerant piping embedded in the wall, perform the following steps:

1. Based on the position of the wall hole relative to the mounting plate, choose the side from which the piping will exit the unit.
2. If the wall hole is behind the unit, keep the knock-out panel in place. If the wall hole is to the side of the indoor unit, remove the plastic knock-out panel from that side of the unit (see Fig. 11). This creates a slot through which your piping can exit the unit. Use needle nose pliers if the plastic panel is too difficult to remove by hand.

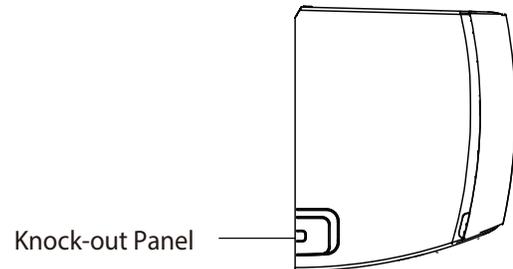

**Fig. 14 —Knock-out Panel**

3. Use scissors to cut down the length of the insulating sleeve to reveal about 1.57in. (40mm) of the refrigerant piping. This serves multiple purposes:
  - a. To facilitate the refrigerant piping connection process
  - b. To facilitate Gas Leak Checks and enable you to check for kinks in the copper tubing.
4. Connect the indoor unit's refrigerant piping to the connective piping (line set) that joins the indoor and outdoor units.
5. Based on the position of the wall hole relative to the mounting plate, determine the necessary angle of your piping.
6. Grip the refrigerant piping at the base of the bend.
7. Slowly, with even pressure, bend the piping towards the hole. Do not kink or damage the piping during the process.

# ELECTRICAL DATA


**Table 5 — Electrical Data**

HIGH WALL UNIT SIZE		INDOOR FAN			MAX FUSE CB AMP
		V-Ph-Hz	FLA	HP	
Heat Pump Models	9K	208/230-1-60	0.34	0.027	Refer to outdoor unit installation instructions – Indoor unit powered by the outdoor unit
	12K		0.34	0.027	
	18K		0.5	0.082	
	24K		0.5	0.082	


## LEGEND

FLA- Full Load Amps

## CONNECTION DIAGRAMS

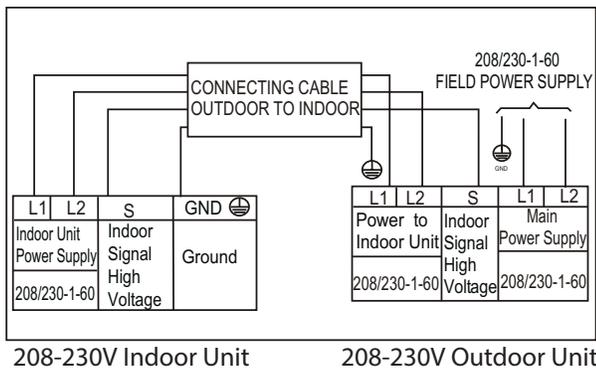

208-230V Indoor Unit      208-230V Outdoor Unit  
**Fig. 15 — Connection Diagram Sizes 9K - 12K**

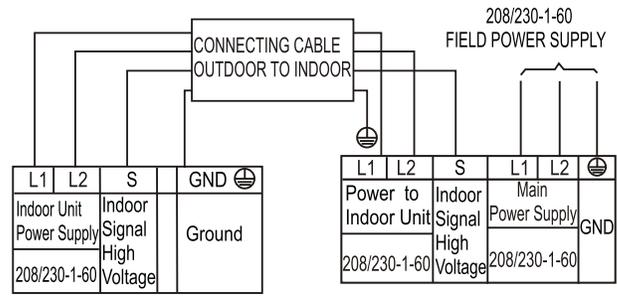

USE COPPER SUPPLY WIRES ONLY.


**Fig. 16 — Connection Diagram Sizes 18K - 24K**

## NOTES:


- Do not use thermostat wire for any connection between indoor and outdoor units.
- All connections between indoor and outdoor units must be as shown in figures 15 and 16. The connections are sensitive to polarity and will result in a fault code.

## TERMINAL BLOCK LOCATION

- Open the front panel of the indoor unit.
- Using a screwdriver, open the wire box cover on the right side of the unit, then open the terminal block cover. This will reveal the terminal block.

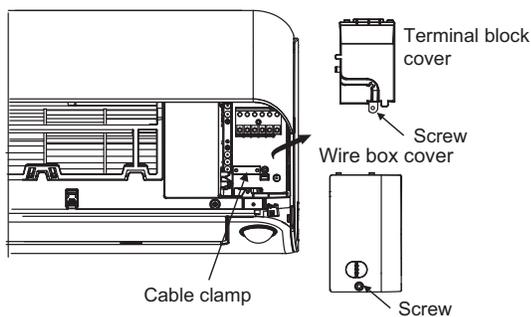


**Fig. 17 — Terminal Block Location**

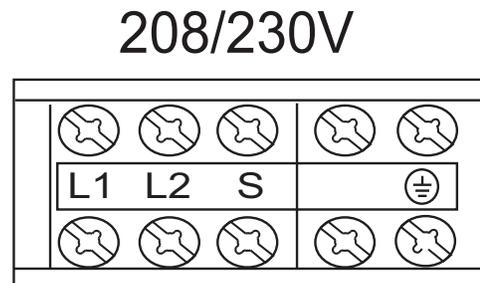

**Fig. 18 — Control and Power Wiring on the Indoor Unit**

## INSTALL ALL POWER, INTERCONNECTING WIRING, AND PIPING TO THE INDOOR UNIT

1. Run interconnecting piping and wiring from outdoor unit to indoor unit.
2. Run interconnecting cable through hole in wall (outside to inside).
3. Lift indoor unit into position and route piping and drain through hole in wall (inside to outside). Fit the interconnecting wiring into back side of indoor unit.
4. Put upper claw at back of indoor unit on upper hook of Mounting Plate, move indoor unit from side to side to see that it is securely hooked.
5. Open the indoor unit's front panel by loosening the screws, which provides a large space for wiring connection.
6. Open the wire box cover to connect the cable.
7. Pull interconnecting wire up from back of indoor unit and position in close to the terminal block on indoor unit.
8. Push lower part of indoor unit up on wall, then move indoor unit from side to side, up and down to check if it is hooked securely (see Fig. 19).

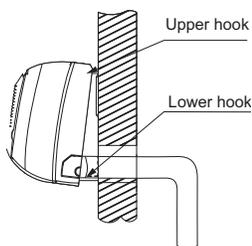


**Fig. 19 —Indoor Unit Installation**

9. Connect wiring from outdoor unit per connection diagram (see Fig. 15 and Fig. 16).
10. Replace the wire cover on the front of the unit, and the plastic panel on the back.

### Piping

- a. Cut the pipe, with a pipe cutter, at 90° degrees (see Fig. 20).
- b. Remove the service connection, if provided with the unit.

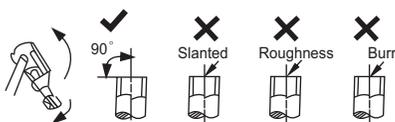


**Fig. 20 —Pipe Cutting**

- c. Remove all the burrs from the cut cross section of the pipe avoiding any burrs inside the tubes.
- d. Remove the flare nuts attached to the indoor and outdoor units.
- e. Install the correct size flare nut onto the tubing and make the flare connection. Refer to Table 6 for flare spacing.


**Table 6 — Flare Spacing**

OUTER DIAM. INCH (MM)	A INCH (MM)	
	MAX.	MIN.
Ø 1/4" (6.35)	0.05 (1.3)	0.03 (0.7)
Ø 3/8" (9.52)	0.06 (1.6)	0.04 (1.0)
Ø 1/2" (12.7)	0.07 (1.8)	0.04 (1.0)
Ø 5/8" (15.88)	0.09 (2.2)	0.08 (2.0)

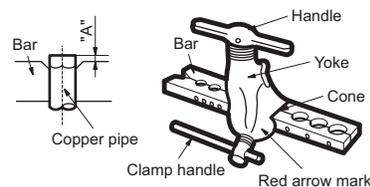

**Fig. 21 —Flare Spacing**

- f. Apply a small amount of refrigerant oil to the flare connection on the tubing.
- g. Align center of the pipes and/or service valve.

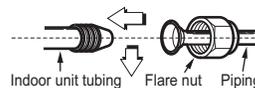


**Fig. 22 —Align Pipe Center**

- h. Connect both the liquid and gas piping to the indoor unit
- i. Tighten the flare nut using a torque wrench as specified in Table 7.

**Table 7 — Tightening Torque**

PIPE DIAMETER INCH (MM)	TIGHTENING TORQUE	
	Ft-lb	N-m
Ø1/4" (6.35)	10 to 13	13.6 to 17.6
Ø3/8" (9.52)	24 to 31	32.5 to 42.0
Ø1/2" (12.7)	37 to 46	50.1 to 62.3
Ø5/8" (15.88)	50 to 60	67.7 to 81.3

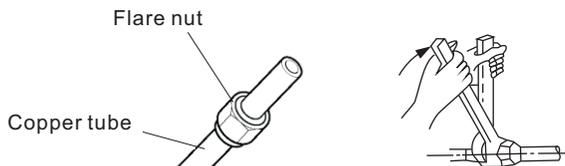

**Fig. 23 —Tighten the Flare Nut**

For additional diagnostic information, refer to the Service Manual.

**! WARNING**

**UNIT DAMAGE HAZARD**  
Failure to follow this caution may result in equipment damage or improper operation.  
Never use the system compressor as a vacuum pump.

Refrigerant tubes and indoor coil should be evacuated using the recommended deep vacuum method of 500 microns. The alternate triple evacuation method may be used if the procedure outlined below is followed. Always break a vacuum with dry nitrogen.

## FINAL TUBING CHECK

**IMPORTANT:** Ensure certain factory tubing on the indoor unit has not shifted during shipment. Ensure tubes are not rubbing against each other or any sheet metal. Pay close attention to feeder tubes, making sure wire ties on feeder tubes are secure and tight.


### DRAIN CONNECTIONS

Connect the drain line. The drain line must not have a trap anywhere in its length, must pitch downwards, and must be insulated up to the outside wall (see Fig. 19). By default, the drain hose is attached to the left-hand side of unit (when facing the back of the unit). However, it can also be attached to the right-hand side.

- To ensure proper drainage, attach the drain hose on the same side that your refrigerant piping exits the unit.
- Attach a drain hose extension (purchased separately) to the end of drain hose.
- Wrap the connection point firmly with Teflon tape to ensure good seal and to prevent leaks.
- For the portion of the drain hose that remains indoors,
- Wrap it with foam pipe insulation to prevent condensation.
- Remove the air filter and pour a small amount of water into the drain pan to ensure that water flows from the unit smoothly.


### Plug the Unused Drain Hole

To prevent unwanted leaks you must plug the unused drain hole with the rubber plug provided.

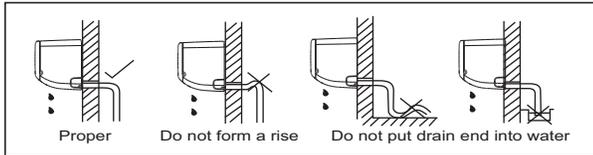

**Fig. 24 —Proper Drain Hose Installation**

**NOTE:** For proper orientation of the refrigerant piping, electrical cable and drain lines, refer to Fig. 24.

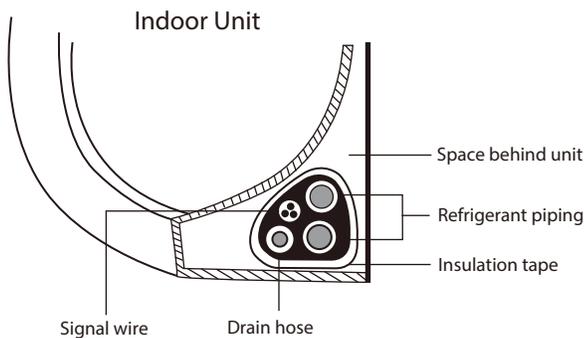

**Fig. 25 —Bundle drain hose, refrigerant pipes, & signal cable**

**NOTE:** For applications where gravity cannot be used for drainage, a condensate pump accessory is available. Consult the condensate pump Installation Instructions for more information.

## WIRELESS REMOTE CONTROL INSTALLATION

### Mounting Bracket (if installed on the wall)


- Use the two screws supplied with the wireless remote controller to attach the mounting bracket to the wall in a location selected by the customer and within operating range.
- Install the batteries in the remote controller.
- Place the remote controller into the remote controller mounting bracket.

**NOTE:** For remote controller operation, refer to the unit Owner's Manual.

## WIRED REMOTE CONTROL INSTALLATION

For setup instructions, refer to the wired controller installation manual.

- Use the multi-function board mounted on the front panel.

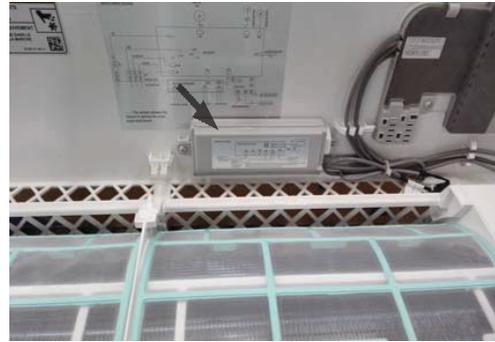

**Fig. 26 —Multi-Function Board**

- Disassemble the Multi-Function Board.




**Fig. 27 —Multi-Function Board**

- Open the multi-function board to make the wiring connection.




**Fig. 28 —Multi-Function Board**

4. Cut the female plug from the cable supplied with the wired remote controller and strip the wires to connect to the Multi-Function board.

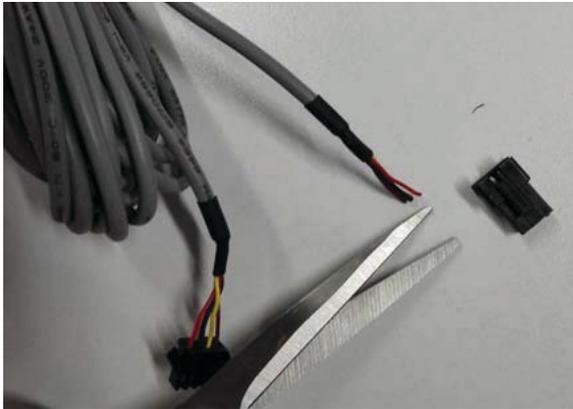


**Fig. 29 —Cut the female plug and strip the wires**

5. Connect the wired remote controller cable to the multi-function board using:
  - a. X—Brown
  - b. (2.) Y—Yellow
  - c. (3.) E—Black (ground)
  - d. (4.) 5V—Red (power)

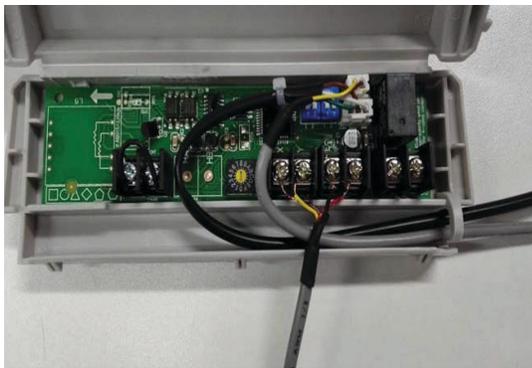

**Fig. 30 —Connect the cable to the board**

6. Re-install the multi-function board on the bracket located on the front panel.

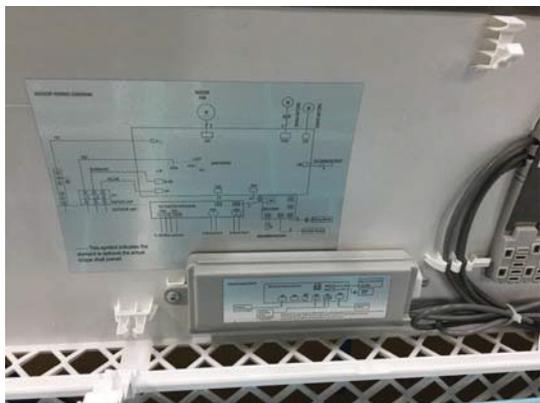

**Fig. 31 —Install the multi-function board**

## START-UP

### Test Operation

Perform a test operation after completing gas leak and electrical safety check (see Fig. 32).


1. Push “ON/OFF” on the remote controller to begin testing.

**NOTE: A protection feature prevents air conditioner from being activated for approximately 3 to 4 minutes.**

2. Push **MODE**, select **COOLING, HEATING, FAN** mode to check that all functions work correctly.
3. To run the test using the **MANUAL** button in the indoor unit:
  - a. Open front panel of the indoor unit;
  - b. Push the manual switch once to energize the unit. The set conditions of manual operation are as follows:
    - Preset set point: 76F (24C)
    - Fan speed: **AUTO**
    - Discharge air direction: Pre-set position based on operation in “COOL” or “HEAT” mode.
4. Be sure to set manual switch to “OFF” (by pushing it twice again) after finishing test operation.

**NOTE: If the ambient temperature is below 63F (17C). The remote controller can not be used to turn on the COOL function when the ambient temperature is below 63F (17C). In this instance, the MANUAL CONTROL button can be used to test the COOL function.**

1. **MANUAL CONTROL** is located on the right-hand side of the display box located on the front panel of the indoor unit (see Fig. 32). Press the button two times to select the **COOL** function. Perform a Test Run as normal.

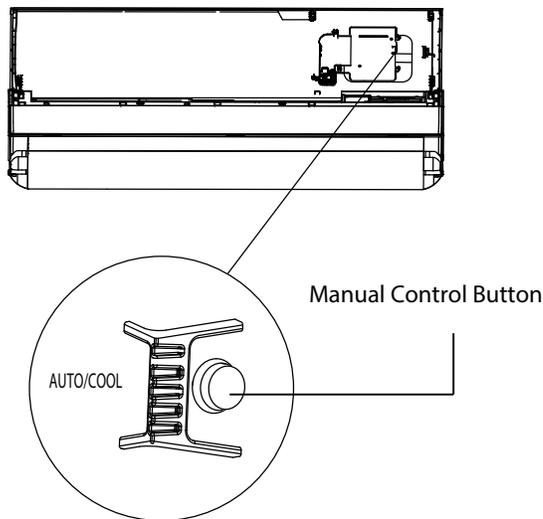

**Fig. 32 —Test operation**

## SYSTEM CHECKS

1. Conceal the tubing where possible.
2. Ensure the drain tube slopes downward along its entire length.
3. Ensure all tubing and connections are properly insulated.
4. Fasten tubes to the outside wall, when possible.
5. Seal the hole through which the cables and tubing pass.

## INDOOR UNIT

1. Do all remote controller buttons function properly?
2. Do the display panel lights work properly?

## TROUBLESHOOTING

For ease of service, the systems are equipped with diagnostic code display LEDs on both the indoor and outdoor units. The indoor diagnostic display is a combination of flashing LEDs on the display panel or the front of the unit.

Some indoor units display error codes specifying failure modes in outdoor units. If possible, always check the diagnostic codes displayed on the indoor unit first.

The diagnostic codes displayed in the indoor and outdoor units are listed in Table 8.

## INDOOR UNIT DIAGNOSTIC GUIDES

**Table 8 — Unit Diagnostic Guides**

DISPLAY	LED STATUS
E0	Indoor unit EEPROM hardware error
E1	Indoor / outdoor units communication error
E2	Zero-crossing signal detection error
E3	Indoor fan speed has been out of control
E4	Indoor room temperature sensor T1 open circuit or short circuit
E5	Evaporator coil temperature sensor T2 open circuit or short circuit
EA	Indoor unit EEPROM parameter error
Eb	Communication error between the indoor PCB and display board
Ec	Refrigerant leakage detection
Ef	Intelligent eye module error
F1	Outdoor ambient temperature sensor T4 open circuit or short circuit
F2	Condenser coil temperature sensor T3 open circuit or short circuit
F3	Compressor discharge temperature sensor TP open circuit or short circuit
F4	Outdoor unit EEPROM parameter error
F5	Outdoor fan speed has been out of control
F6	Temperature sensor T2B (Located on the outdoor pipe) open circuit or short circuit
P0	IPM malfunction or IGBT over-strong current protection
P11/P10	Over voltage or over low voltage protection
P2	High temperature protection of IPM module
P4	Inverter compressor drive error
P6	Low pressure protection (Only for the outdoor unit with pressure switch)

For additional diagnostic information, refer to the Service Manual.

3. Does the air deflection louver function properly?
4. Does the drain work?

### Explain Following Items To Customer (with the aid of the Owner's Manual):

1. How to turn air conditioner on and off; selecting **COOLING**, **HEATING** and other operating modes; setting a desired temperature; setting the timer to automatically start and stop air conditioner operation; and all other features of the remote control and display panel.
2. How to remove and clean the air filter.