

# Installation Manual

Upflow/Horizontal  
Oil-Fired Furnace  
Sizes 075 thru 210

PO8UAA

**NOTE:** Read the entire instruction manual before starting the installation.



## TABLE OF CONTENTS

SAFETY CONSIDERATIONS.....	2
INTRODUCTION.....	2
LOCATION.....	3
INSTALLATION.....	5
VENTING.....	5
INSTALLATION OF FLUE ELBOW ON 075-155 SIZE UNITS.....	5
PRE-INSTALLATION VENT SYSTEM INSPECTION.....	5
MASONRY CHIMNEY.....	5
FACTORY-BUILT CHIMNEYS.....	6
HORIZONTAL VENTING.....	6
OIL BURNER.....	6
OIL CONNECTIONS.....	6
BAROMETRIC DRAFT CONTROL.....	6
ELECTRICAL.....	6
FILTERS.....	7
CHANGING FROM UPFLOW TO HORIZONTAL.....	9
OPERATIONAL CHECKOUT.....	9
START-UP.....	9
RECOMMENDED INSTALLATION PRACTICES AND COMBUSTION CHECK.....	9
FAN ADJUSTMENT CHECK.....	10
LIMIT CONTROL CHECK.....	10
FOR YEAR-ROUND AIR CONDITIONING.....	10
HEATING.....	10
COOLING.....	10
CONSTANT BLOWER SWITCH.....	10
CARE AND MAINTENANCE.....	11
GENERAL.....	11
OIL BURNER.....	11
HEAT EXCHANGER AND FLUE PIPE.....	11
BLOWER OILING AND REMOVAL.....	14
KEEPING FILTERS CLEAN.....	15

## SAFETY CONSIDERATIONS

**⚠ WARNING: FOR YOUR SAFETY, DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS AND LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE DO NOT ATTEMPT TO START THE BURNER WHEN EXCESS OIL HAS ACCUMULATED, WHEN THE FURNACE IS FULL OF VAPOR, OR WHEN THE COMBUSTION CHAMBER IS VERY HOT.**

**⚠ WARNING: For use with grade 2 fuel oil maximum. Do not use gasoline, crankcase oil, or any oil containing gasoline! Failure to follow this warning could lead to sooting, fire, explosion, and/or sever bodily harm.**

**⚠ CAUTION: Never burn garbage or paper in the heating system. Never leave rags, paper, or any flammable items around the unit.**

**⚠ CAUTION: These instructions are intended to be used by qualified personnel who have been trained in installing this type of furnace. Installation of this furnace by an unqualified person may lead to equipment damage and/or a hazardous condition which may lead to bodily harm.**

All local and national code requirements governing installation of oil burning equipment, wiring, and flue connections must be followed. Some of the codes (issued by the Canadian Standards Association, the National Fire Protection Agency, and/or the American National Standards Institute) that may be applicable are:

ANSI/NFPA 31–INSTALLATION OF OIL BURNING EQUIPMENT

ANSI/NFPA 211–CHIMNEYS, FIREPLACES, VENTS, AND SOLID FUEL BURNING APPLIANCES

ANSI/NFPA 90B–WARM AIR HEATING AND AIR CONDITIONING SYSTEMS

ANSI/NFPA 70–NATIONAL ELECTRICAL CODE

CSA B139–INSTALLATION CODE FOR OIL BURNING EQUIPMENT

CSA C22.1–CANADIAN ELECTRICAL CODE

Only the latest issues of above codes should be used, and are available from either The National Fire Protection Agency, Batterymarch Park, Quincy, MA. 02269 or The Canadian Standards Association, 178 Rexdale Blvd., Rexdale, Ontario, M9W 1R3.

Recognize safety information. This is the safety-alert symbol **⚠**. When you see this symbol on the furnace and in instructions or manuals, be alert to the potential for personal injury.

Understand the signal words DANGER, WARNING, or CAUTION. These words are used with the safety-alert symbol. DANGER identifies the most serious hazards which **will** result in severe personal injury or death. WARNING signifies a hazard that **could** result in personal injury or death. CAUTION is used to identify unsafe practices which **would** result in personal injury or product or property damage.

## INTRODUCTION

This furnace is a 3–way multiplies unit that may be operated in upflow, horizontal left, or horizontal right airflow positions. Very few modifications are required to change furnace from one position to another at a job site. The furnace is shipped in the upflow configuration. Instructions for changing to other configurations are found in “Changing from Upflow to Horizontal” section of these instructions.

The furnace is shipped as a packaged unit, complete with burner and controls. It requires a line voltage (115 vac) connection to control box, a thermostat hook-up as shown on wiring diagram, oil line connection(s), adequate duct work, and connection to a properly sized vent.

The air handling capacity of this furnace is designed for cooling airflow. Refer to Table 7 for expected airflows at various external duct static pressures.

**Table 1–Minimum Clearances to Combustible Materials (in.)**

UNIT SIZE		75,000-155,000 BTUH		210,000 BTUH	
Sides	Unit Application	Upflow	Horizontal	Upflow	Horizontal
		Furnace	0	2	2
	Supply Plenum and Warm-Air duct within 6ft. of Furnace	1	1	1	1
<b>Back</b>		1	1	2	2
<b>Top</b>	Furnace Casing or Plenum	2	2	2	2
	Horizontal Warm-Air Duct within 6ft. of Furnace	2	3	2	3
<b>Bottom</b>		0*	0*	0*	0*
<b>Flue Pipe</b>	Horizontally or Below Pipe	4	4	9	9
	Vertically Above Pipe	8	8	9	9
<b>Front</b>		8	24	24	24

\*Floor may be combustible

Adequate service clearance should be provided over and above these dimensions as required.

## LOCATION

---

**⚠ WARNING:** This furnace is not water tight and is not designed for outdoor installation. This furnace shall be installed in such a manner as to protect electrical components from water. Outdoor installation would lead to a hazardous electrical condition and to premature furnace failure.

---

**⚠ WARNING:** Do not use this furnace as a construction heater. Use of this furnace as a construction heater exposes furnace to abnormal conditions, contaminated combustion air, and lack of air filters. Failure to follow this warning can lead to premature furnace failure and/or vent failure which could result in a fire hazard and/or bodily harm.

---

**⚠ CAUTION:** For an attic installation, it is important to keep insulation 12 in. or more away from any furnace openings. Some types of insulating materials may be combustible.

---

This furnace is approved for reduced clearances to combustible construction. The 075–155 size units may be installed in a closet or similar enclosure. It is also approved for attic installation. As this unit may be installed as an upflow or horizontal furnace, it may be located in a basement, on the same level as the area heated, suspended, or in a crawlspace. In any case, unit should always be installed level.

In a basement or when installed on the floor (as in a crawlspace), it is recommended that unit be installed on a concrete pad that is 1 in. to 2 in. thick.

When installed in the horizontal position, furnace may be suspended by using an angle iron frame, as long as total weight of both furnace and frame are allowed for in support calculations. Other methods of suspending are acceptable.

The required minimum clearances for this furnace in all positions are specified in Table 1.

The furnace should be located as close as possible to chimney or vent in order to keep vent connections short and direct. The furnace should also be located as near as possible to center of air distribution system.

### PROCEDURE 1–AIR FOR COMBUSTION AND VENTILATION

---

**⚠ WARNING:** Installation of this furnace in an areas where it will receive contaminated combustion air must be avoided. Such contamination would include the following: ammonia, chlorine, hydrogen sulfide, halogenated hydrocarbons, carbon tetrachloride, cleaning solvents, hydrochloric acid, water softening chemicals, and similar chemicals. Failure to follow this warning will lead to premature rusting of heat exchanger and possible premature furnace failure and/or vent failure which could result in fire hazard and/or bodily harm.

---

This furnace should be installed in a location in which facilities for ventilation permit satisfactory combustion for oil, proper venting, and maintenance of ambient temperature at safe limits under normal conditions of use. The location should not interfere with proper circulation of air within the confined space. See NFPA-31 Section 1.5.

In addition to air needed for combustion, process air shall be provided as required for: cooling of equipment or material, controlling dew point, heating, drying, oxidation or dilution, safety exhaust, and odor control.

In addition, to air needed for combustion, air shall be supplied for ventilation, including all air required for comfort and proper working conditions for personnel.

The barometric draft regulator (included with furnace) shall be installed in same room or enclosure as furnace in such a manner as to prevent any difference in pressure between regulator and combustion air requirements.

Air requirements for operation of exhaust fans, kitchen ventilation systems, clothes dryers, and fireplaces shall be considered in determining the adequacy of a space to provide combustion air requirements.

In unconfined spaces in buildings of conventional frame, brick, or stone construction, infiltration MAY be adequate to provide air for combustion, ventilation, and dilution of flue gasses. This determination must be made on an individual installation basis and must take into consideration the overall volume of unconfined space, the number of windows and ventilation openings, the number of doors to the outside, internal doors which can close off unconfined space, and overall tightness of building construction. Consideration must also be given to the amount of storage items (furniture, boxes, etc.) within the unconfined space which takes away from air volume.

Many new buildings and homes (and older ones that have been weatherized) MUST be considered as being tight of construction, therefore, infiltration will not be sufficient to supply necessary air for combustion and ventilation.

A building can be considered as being of tight construction when:

1. Walls and ceilings exposed to outside atmosphere have a continuous water vapor retarder with a rating of 1 perm or less with openings gasketed or sealed, and/or
2. Weather-stripping has been added on operable windows and doors, and/or
3. Caulking or sealants are applied to areas such as joints around window and door frames; between sole plates and floors; between wall-ceiling joints; between wall panels; at penetrations for plumbing, electrical, and fuel lines; and at other openings.

If combustion and ventilation air must be supplied to an unconfined space from outside; an opening with a FREE AREA of not less than 1 sq. in. per 1000 Btuh of total input of all appliances within unconfined space (but not less than 100 sq. in.) must be provided. This opening must be located such that it can not be blocked at any time.

Furnace sizes listed in table 2 may be installed in a closet or enclosure. Installer must provide 2 ventilation openings, with OPEN AREA as dimensioned in Table 2, for combustion air. The openings should be located about 6 in. from top and bottom of enclosure at front of furnace.

For a confined space, where air is taken from an interior space, 2 permanent openings of equal area are required. One opening must be within 12 in. of ceiling and the other within 12 in. of floor. Each opening must have a free area of at least 1 sq. in. per 1000 Btuh of total input rating but not less than 100 sq. in.

If outside air is supplied to a confined space, then the 2 openings must be equal and located as above. The free area of each must be:

1. One sq. in. per 4000 Btuh of total input rating when air is directly communicated from outdoors.
2. One sq. in. per 4000 Btuh of total input rating when air is brought in through vertical ducts.
3. One sq. in. per 2000 Btuh of total input rating when air is transferred through horizontal ducts.

When ducts are used to supply air, they must be of the same cross-sectional area as free area of openings to which they connect.

The minimum dimension of rectangular air ducts must not be less than 3 in.

In calculating free area, consideration shall be given to blocking effect of louvers, grilles, or screens protecting openings. Screens used shall not be smaller than 1/4in. mesh and shall be readily accessible for cleaning. If free area through a design of louver or grille is known, it shall be used in calculating size design and free area specified. If design and free areas are not known, it may be assumed that wood louvers have 20 percent free area and metal louvers and grilles have 60 percent free area. Louvers shall be fixed in open position or interlocked with furnace so they open automatically at furnace start-up and remain open during furnace operation.

---

**⚠ WARNING: Do not block combustion air openings in the furnace. Any blockage will result in improper combustion which may result in a fire hazard and/or cause bodily harm.**

---

The lack of proper amount of combustion air can lead to serious furnace operational problems. Some of these problems are:

1. Excessive oil burner after drip and oil fumes.
2. Sooting.
3. Melted oil burner couplings and/or ignitor/relay control.
4. A condition where air band or air shutter settings must be open more than normal to achieve proper combustion.
5. Lockouts on start-up.

**PROCEDURE 2—DUCT WORK RECOMMENDATIONS**

The proper sizing of warm air ducts is necessary to ensure satisfactory furnace operation. Duct work should be in accordance with the latest editions of NFPA-90A (Installation of Air Conditioning and Ventilation Systems) and NFPA-90B (Warm Air Heating and Air Conditioning Systems), or Canadian equivalent.

The supply duct work should be attached to flanged opening provided at discharge end of furnace. See Fig. 9 for dimensions of this opening on 075–155 size units, or Fig. 10 for 210 size units.

Knock-outs are provided on both sides and bottom of furnace to facilitate locating panel cut-out required to connect to return-air duct work. Only 1 opening should be used. See Fig. 10 for location and dimensions of 210 size units, and Fig. 9 for all others.

---

**⚠ CAUTION: Furnace cut-outs must be the full size specified by the corner markers. Undersized cut-outs adversely affect airflow capability of furnace and could cause overheating of heat exchanger.**

---

**NOTE: THE BACK MUST NOT BE CUT OUT FOR RETURN-AIR**

When the provided external rack is used, return-air duct should be attached as shown in Fig. 1.

The following recommendations should be followed when installing duct work:

1. Install locking-type dampers in all branches of individual ducts to balance out system. Dampers should be adjusted to impose proper static at outlet of furnace.
2. A flexible duct connector of noncombustible material should be installed at unit on both supply—air and return-air systems. In applications where extremely quiet operation is necessary, the first 10 ft. (if possible) of supply and return ducts should be internally lined with acoustical material.
3. In cases where return-air grille is located close to fan inlet, there should be at least one 90° air turn between fan inlet and grille. Further reduction in sound level can be accomplished by installing acoustical air-turning vanes or lining duct as described in item 2 above.
4. When a single air grille is used, duct between grille and furnace must be the same size as return opening in furnace.

---

**⚠ CAUTION: Return-air grilles and warm air registers must not be obstructed.**

---



---

**⚠ WARNING: When supply ducts carry air circulated by furnace to areas outside spaces containing furnace, return air MUST also be handled by a duct sealed to furnace casing and terminating outside space containing furnace. Incorrect duct work termination and sealing will create a negative pressure leading to a hazardous condition which could cause bodily harm.**

---

When installing furnace with cooling equipment for year-round operation, the following recommendations must be followed for series or parallel airflow:

**Table 2—Ventilation Opening Dimensions For Closet or Enclosure Installation**

UNIT SIZE	LENGTH (IN.)	HEIGHT (IN.)
036075	18	9
036105	18	9
048125	20	10
060155	20	10

Unit size 060210 may not be installed in a closet. Alcove installation is permitted.

1. In series airflow applications, coil is mounted after furnace in an enclosure in supply-air stream. The furnace blower is used for both heating and cooling airflow.

---

**⚠ WARNING: The coil MUST be installed on air discharge side of furnace. Under no circumstances should airflow be such that cooled, conditioned air can pass over furnace heat exchanger. This will cause condensation in heat exchanger and possible failure of heat exchanger which could lead to a fire hazard and/or hazardous condition which may lead to bodily harm. Heat exchanger failure due to improper installation may not be covered by warranty.**

---

2. In parallel airflow applications, dampers must be provided to direct air over furnace heat exchanger when heat is desired and over cooling coil when cooling is desired.

**IMPORTANT:** The dampers should be adequate to prevent cooled air from entering furnace. If manually operated, dampers must be equipped with a means to prevent operation of either cooling unit or furnace unless damper is in full cool or heat position.

## INSTALLATION

### PROCEDURE 1—VENTING

Venting of furnace should be to the outside and in accordance with local codes or requirements of local utility.

**OIL-FIRED APPLIANCES SHALL BE CONNECTED TO FLUES HAVING SUFFICIENT DRAFT AT ALL TIMES TO ENSURE SAFE AND PROPER OPERATION OF APPLIANCE.**

For additional venting information, refer to ANSI/NFPA 211 (Chimney, Fireplaces, Vents, and Solid Fuel Burning Appliances) and/or CSA B139 (Installation Code).

This furnace is certified for use with Type “L”vent (maximum flue gas temperature 575°F).

### PROCEDURE 2—INSTALLATION OF FLUE ELBOW ON 075–155 SIZE UNITS

The 6 in. flue elbow shipped with furnace should be attached with screws to outlet end of heat exchanger. It is a special short radius elbow. The 075, 105, and 125 size units are certified for use with 5 in. pipe if reduction from the 6 in. elbow is desired.

If 075–155 size units are installed in the upflow position, flue pipe clearance knock-out in top panel should be removed. Install flue elbow so that it exits furnace cabinet through that opening. For horizontal installations of these furnace sizes, 1 of the side panel knock-outs is used. The 210 size unit flue pipe exits from the rear of cabinet, and is not shipped with a flue elbow. Refer to the Changing from Upflow to Horizontal section.

### PROCEDURE 3—PRE-INSTALLATION VENT SYSTEM INSPECTION

Before furnace is installed, it is highly recommended that any existing vent system be completely inspected.

For any chimney or vent, this should include the following:

1. Inspection for any deterioration in chimney or vent. If deterioration is discovered, chimney must be repaired or vent must be replaced.
2. Inspection to ascertain that vent system is clear and free of obstructions. Any blockage must be cleared before installing furnace.
3. Clearing chimney or vent if previously used for venting a solid fuel burning appliance or fireplace.
4. Confirming that all unused chimney or vent connections are properly sealed.
5. Verification that chimney is properly lined and sized per the applicable codes. (Refer to list of codes in Safety Considerations section.)

### PROCEDURE 4—MASONRY CHIMNEY

This furnace can be vented into an existing masonry chimney. This furnace must not be vented into a chimney servicing a solid fuel burning appliance. Before venting furnace into a chimney, the chimney **MUST** be checked for deterioration and repaired if necessary. The chimney must be properly lined and sized per local or national codes.

If furnace is vented into a common chimney, the chimney must be of sufficient area to accommodate the total flue products of all appliances vented into chimney.

The following requirements are provided for a safe venting system:

1. Be sure that chimney flue is clear of any dirt or debris.
2. Be sure that chimney is not servicing an open fireplace.
3. Never reduce pipe size below minimum certified furnace pipe size shown in Table 3.

**Table 3—Minimum Certified Furnace Pipe Size**

UNIT SIZE	MINIMUM PIPE DIAMETER (IN.)
036075	5
036105	5
048125	5
060155	6
060210	7

4. All pipe should be supported using proper clamps and/or straps. These supports should be at least every 4 ft.
5. All horizontal runs of pipe should have at least 1/4 in. per ft. of upward slope.
6. All runs of pipe should be as short as possible with as few turns as possible.

7. Seams should be tightly joined and checked for leaks.
8. The flue pipe must not extend into chimney but be flush with the inside wall.
9. The chimney must extend 3 ft. above highest point where it passes through the roof of a building and at least 2 ft. higher than any portion of a building within a horizontal distance of 10 ft. It shall also be extended at least 5 ft. above the highest connected equipment flue collar.
10. Check local codes for any variance.

#### **PROCEDURE 5—FACTORY-BUILT CHIMNEYS**

Listed factory-built chimneys may be used. Refer to chimney manufacturers instructions for proper installation.

#### **PROCEDURE 6—HORIZONTAL VENTING**

This furnace may be vented horizontally through an outside wall when installed with 1 of the following auxiliary inducer blowers:

Tjernlund Products, Inc. Model SS1 (SS1C required in Canada) available from:

Tjernlund Products, Inc.  
1601 Ninth Street  
White Bear Lake, MN. 55110-6795  
(312) 426-2993

or

Fields Controls Model SWGII-5 (with a CK-60 or CK-61 timer) available from:

Fields Controls Company  
2308 Airport Road  
Kinston, NC. 28051  
(919) 522-3031

**NOTE:** In both cases, the 24-v wiring schematic included with the inducer is the recommended wiring setup.

The use of either inducer can create a negative pressure in the area where furnace is located if the proper combustion-air openings are not available. This negative pressure can lead to excessive heat being retained in heat exchanger, coking, and fumes. Refer to NFPA-31 Section 1.5 for proper combustion-air requirements.

---

**⚠ CAUTION: USE METALLIC VENT PIPE ONLY! PLASTIC VENTING MATERIALS ARE PROHIBITED!**

---

#### **PROCEDURE 7—OIL BURNER**

This furnace is supplied with a high-pressure atomizing retention head type burner (for use with not heavier than grade 2 fuel oil). The air tube length, from face of mounting plate to extreme face of end cone, should be as shown in Table 4.

**Table 4—Oil Burner Air Tube Length**

UNIT SIZE	LENGHT (IN.)
036075	5
036105	5
048125	5
060155	7
060210	7

#### **PROCEDURE 8—OIL CONNECTIONS**

Complete instructions for installation of fuel oil piping will be found in oil burner Installation Instructions included with furnace.

Oil line entry holes are provided in side panels and top panel. Two holes are provided in each side panel, and elongated holes are provided in top panel so that a 2-pipe system may be used if desired. (See Fig. 9 for 075-155 size units or Fig. 10 for 210 size unit).

A properly sized oil filter should be used with all oil burners and should be installed as close to burner as possible. For a 2-pipe system, a minimum capacity of 25 gph is needed.

#### **PROCEDURE 9—BAROMETRIC DRAFT CONTROL**

The barometric draft control shipped with furnace **MUST** be used with furnace to ensure proper operation. Instructions for installing control are packed with control. Refer to Fig. 11 for suggested locations.

#### **PROCEDURE 10—ELECTRICAL**

The appliance must be installed in accordance with current ANSI/NFPA 70 (National Electric Code), CSA C22.1 (Canadian Electrical Code Part 1), and/or local codes.

The control system depends on correct polarity of power supply. Connect **HOT** wire (H) and **NEUTRAL** wire (N) as shown in Fig. 12 for 075-155 size units or Fig. 13 for 210 size unit.

A separate line voltage supply **MUST** be used with a fused disconnect switch or HACR-type circuit breaker between main power panel and unit. See Fig. 12 for 075-155 size units or Fig. 13 for 210 size unit. Disconnecting means must be within sight of furnace.

---

**⚠ WARNING: The unit cabinet must have an uninterrupted or unbroken electrical ground to minimize personal injury if an electrical fault should occur. A green ground screw is provided in control box for this connection.**

---

Use only copper wire for 115-v supply service to unit.



Metallic conduit (where required/used) may terminate at side panel of unit. It is not necessary to extend conduit inside unit from side panel to control box.

When replacing any original furnace wiring, use only 105°C no. 16 AWG copper wire.

Instructions for wiring thermostat (field supplied) are packed in thermostat box. Make thermostat connections as shown in Fig. 12 or 13 at 24-v terminal board on control box.

When installing optional accessories to this appliance, follow manufacturers installation instructions included with the accessory. Other than wiring for thermostat, wire with a minimum of type "T" insulation (63°F rise) must be used for accessories.

Two 1/4 in. quick-connect terminals marked EAC and N5 are provided for electronic air cleaner (EAC) connection (see Fig. 12 or 13). These terminals are energized with 115v (0.5 amp maximum) during blower motor operation.

Two 1/4 in. quick-connect terminal marked HUM and N6 are provided for 115-v humidifier connection (see Fig. 12 or 13). These terminals are energized with 115v (0.5 amp maximum) during any call for heat.

## PROCEDURE 11—FILTERS

IT IS NECESSARY THAT ALL FURNACES BE EQUIPPED WITH A FILTER.

A filter and external filter rack are provided as standard equipment with this furnace. The assembly and installation of filter rack is described below and shown in Fig. 1.

---

**⚠ WARNING: Never operate unit without a filter or with filter access door removed. Failure to adhere to this warning could lead to a hazardous condition which could lead to equipment damage and bodily harm.**

---

Filter rack is made up of 4 pieces: a top and bottom (which are the same) and rear and access panels (which are the same).

### A. FILTER RACK INSTALLED ON SIDE OF FURNACE

Filter rack may be mounted on either side of furnace. Install as follows:

1. Using corner indentations as a guide, cut out selected side duct return opening (see Fig. 9 for 075–155 size units or Fig. 10 for 210 size unit).
2. Clip filter rack pieces together as shown in Fig. 1. Use the shorter 2 rear/access panels. Discard longer pair.
3. Place flange of filter rack bottom piece against side panel of furnace, resting on top of flange of base panel. Align flange of filter rack rear panel flush with back of furnace. The frame should be centered over knock-out opening.
4. Hold filter rack against unit making sure filter rack is square. Drill mounting holes in side of unit located according to clearance holes in filter rack top, bottom, and rear panels. **DO NOT SCREW ACCESS PANEL IN PLACE.**
5. Fasten return-air duct to filter rack.
  - a. Cut a notch in return-air duct (for filter access panel) to dimensions shown in detail of Fig. 1.
  - b. Slide duct over filter rack.
6. Install Filter
  - a. Remove metal rod from filter.
  - b. For 075–155 size units, trim 2 in. from width of filter (20 1/8 in. to 18 1/8 in.). For 210 size unit, trim 4 1/4 in. from width of filter (24 1/2 in. to 20 1/4 in.)
  - c. Reinsert rod into filter at an angle so that it does not extend past filter.
  - d. Remove access panel.
  - e. Slide filter in place.
  - f. Replace access panel.

### B. FILTER RACK INSTALLED ON RETURN-AIR END OPENING OF FURNACE

This filter rack position may be used on either upflow or horizontal installations.

1. Using corner indentations as a guide, cut out end duct return opening in base panel (see Fig. 1).
2. Clip filter rack pieces together as shown in Fig. 1. Use the 2 longer rear/access panels. Discard shorter pair.
3. Position rack centered over opening in return-air end of furnace with access panel toward front of unit.
4. Hold filter rack against end of units. Align flange of filter rack rear panel flush with back of furnace, making sure filter rack is square. Drill mounting holes in end of unit according to clearance holes in filter rack top, bottom, and rear panels. **DO NOT SCREW ACCESS PANEL IN PLACE.**
5. Fasten return-air duct to filter rack.
  - a. Cut a notch in return-air duct (for filter access panel) to dimensions in detail of Fig. 1.
  - b. Slide duct over filter rack.
6. Install Filter.
  - a. Remove access panel.
  - b. Slide filter in place.
  - c. Replace access panel.

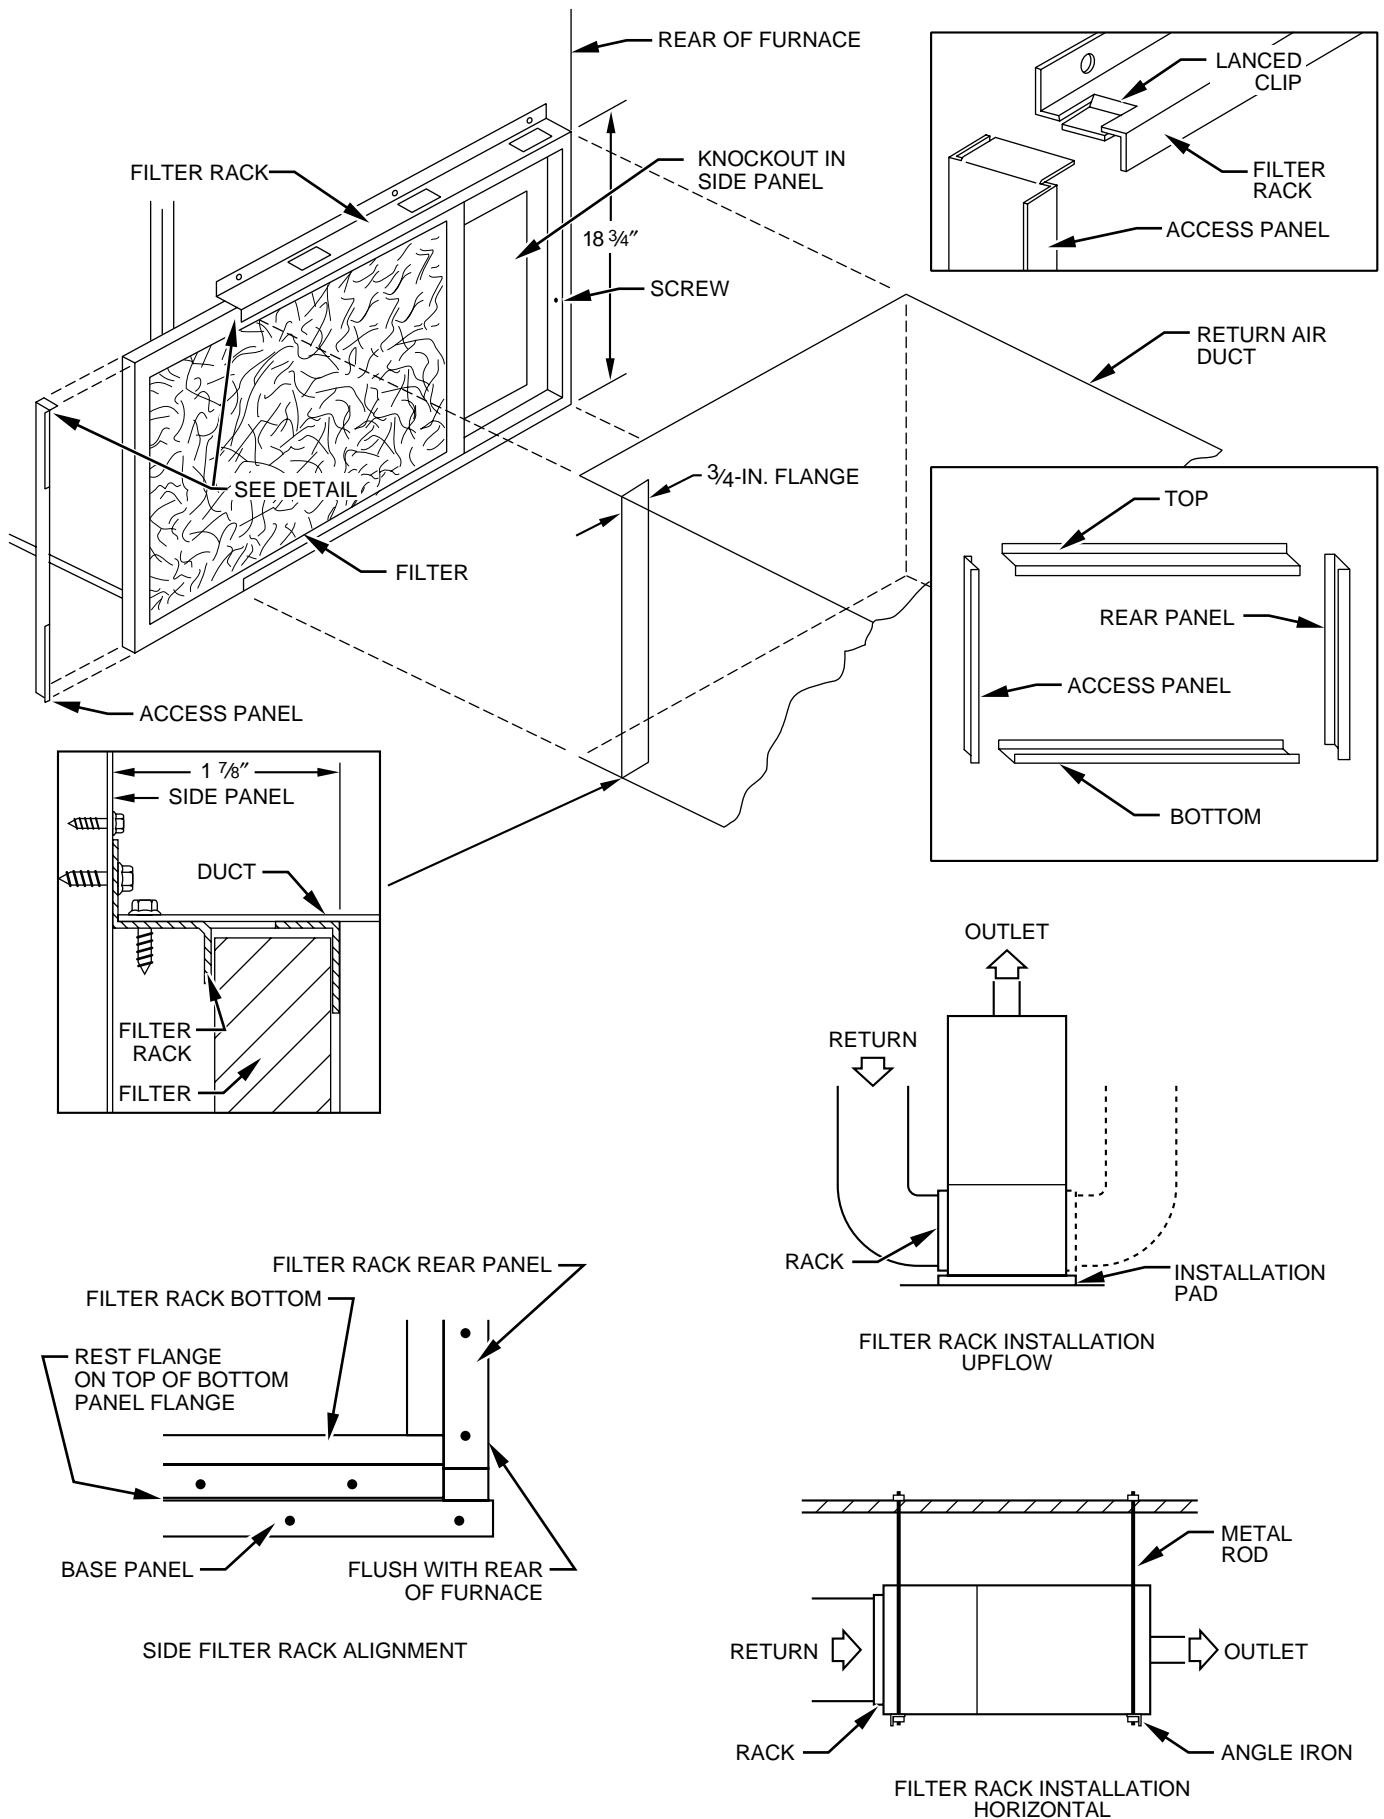


Fig. 1-Filter Rack Arrangement

A96314



## PROCEDURE 12—CHANGING FROM UPFLOW TO HORIZONTAL

1. Remove burner from unit by removing 3 burner mounting nuts. Prevent putting undue strain on burner wiring. It may be necessary to disconnect burner wiring in some cases.
2. Note that the 3 burner mounting studs are in the 9, 12, and 3 o'clock positions on burner mounting plate (see Fig. 2, A.).

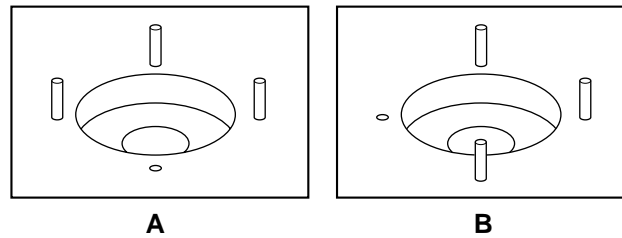


Fig. 2—Burner Mounting Studs

A95172

### 3. For horizontal installations only:

- a. Determine which “side” will become the “top” when unit is laid down.
  - b. Remove flue pipe clearance knock-out from top front to that side panel for 075–155 size units.
  - c. Install flue elbow so that it exits the cabinet of furnace through that opening. The 210 size unit flue pipe exits from rear of cabinet.
4. Place furnace in installation position (for example on its side).
  5. Reposition burner mounting stud.
    - a. Remove burner mounting stud that is now in 6 o'clock position (see Fig. 2, B).
    - b. Re-install stud in other open position on mounting plate so that one again there are studs in the 9, 12, and 3 o'clock positions (see Fig. 2, A.). It may be necessary to use 2 of the burner mounting nuts as “Jam Nuts” on stud in order to provide a means of using a wrench to remove a tight stud.
  6. Reinstall burner ensuring all 3 burner mounting nuts are tight.

**IMPORTANT:** Burner must always be installed in upright position with the ignition control on top.

## OPERATIONAL CHECKOUT

DO NOT START BURNER UNLESS BLOWER ACCESS PANEL IS SECURED IN PLACE.

Install of furnace is now complete and operational checkout may be performed.

## PROCEDURE 1—START-UP

1. Check wiring against wiring diagram shown in Fig. 12 for 075–155 size units and Fig. 13 for 210 size unit.
2. Open valve on oil supply line.
3. Reset primary control.
4. Set thermostat above room temperature.
5. Set main electrical switch to ON position. Burner should start.

DO NOT TAMPER WITH UNIT OR CONTROLS — CALL YOUR SERVICE TECHNICIAN.

## PROCEDURE 2—RECOMMENDED INSTALLATION PRACTICES AND COMBUSTION CHECK

In order to obtain optimum performance from oil burner, the following setup procedures must be followed:

1. A test kit (Bacharach No. 5022 kit or equivalent) to measure smoke, stack draft, over-fire CO<sub>2</sub>, and stack temperatures MUST be used in order to obtain proper air band setting. Although all of the above measurements are required for optimum setup and efficiency data, the most important readings that must be taken are smoke number, over-fire draft, and stack draft.
2. The proper smoke number has been established by engineering tests to be between 0 and 1. This degree of smoke emission is commonly referred to as a “trace” of smoke. It is recommended to use a Bacharach true spot smoke test set or equivalent.
3. In order to ensure proper draft through furnace, a barometric draft regulator (supplied with furnace) must be installed as close to outlet of furnace as possible. In order for this device to function properly, barometric damper must be mounted with hinge pins horizontal and face of damper vertical (see instructions included with damper). The draft regulator should be adjusted after furnace has been firing for at least 10 minutes, and stack draft should be measured and set between —0.025 and —0.035 in. wc. The draft should be checked with a Bacharach MZF draft gauge or equivalent.
4. The over-fire draft, which is taken through hole provided in observation door, is a measurement necessary to determine if there is blockage between oil burner and flue outlet.

There should be a pressure drop of between 0.005 and 0.015 in. wc through furnace. This would set the range of the over-fire draft between —0.01 and —0.03 in. wc. A reading above —0.01 in. wc. (for example, +0.1 in. wc) would indicate that furnace is in an extremely high-pressure condition in primary section. This condition may be caused by excessive combustion air due to air band being open too wide, or a lack of flue draft (chimney effect), or some other blockage, such as soot, in secondary section of heat exchanger.

5. The CO<sub>2</sub> and stack temperature instruments enable you to obtain data required to determine thermal efficiency of furnace.
6. An oil filter should be installed as close to burner as possible with ALL oil burners and is essential on lowing firing rate burners. The use of a low pressure drop oil filter such as General Filter, Inc. model # 1A-25A or equivalent is recommended. It is critical that oil capacity be equivalent or greater than fuel pump gear capacity. For a 2-pipe system, this is 25 gph.
7. The oil pressure regulator is factory set to give nozzle oil pressures of 100 psig. The firing rate noted on nameplate may be obtained with “standard” nozzles by adjusting pump pressure as noted in Table 5 or on label on furnace.

On a new installation, air entrapped in oil line leading from tank to nozzle must be thoroughly purged in order to prevent excessive after drip. The oil pump is provided with a special fitting which allows purging of any air between tank and oil pump. The proper procedure for performing this operation is as follows:

- a. Place a piece of clear plastic 1/4 in. diameter tubing over purge fitting on oil pump.
- b. Start oil burner, then open purge fitting and allow burner to run until purge tube is completely free of air bubbles.
- c. Tighten purge fitting. Allow oil to run to nozzle and fire burner.
- d. If purging takes longer than 30 seconds and no flame has been established, burner stops. Push reset button on top of primary control to restart burner.
- e. For detailed information on operation of primary control, refer to instructions included with furnace.

### PROCEDURE 3—FAN ADJUSTMENT CHECK

This furnace is equipped with a 3-speed direct drive motor to deliver a temperature rise (between return and supply plenums) within range specified on rating plate at external duct static pressure noted on rating plate.

---

**⚠ CAUTION: When operating furnace in heating mode, static pressure and temperature rise (supply-air temperature minus return-air temperature) must be within those limits specified on rating label. Failure to follow this caution could lead to severe furnace damage.**

---

Adjust fan speed so that temperature rise is within range specified on rating plate. Consult wiring diagram for speed changes on direct-drive motor. To adjust fan off time, set DIP switches on control board to obtain desired timing (see Fig. 3).

### PROCEDURE 4—LIMIT CONTROL CHECK

After furnace has been in operation for at least 15 minutes, restrict return-air supply by blocking filters or closing return registers and allow furnace to shut down on high limit. The burner should shut off, and main blower should continue to run.

Remove restriction, and burner should come back on in a few minutes.

### PROCEDURE 5—FOR YEAR-ROUND AIR CONDITIONING

This furnace is designed for use in conjunction with cooling equipment to provide year-round air conditioning. The blower has been sized for both heating and cooling, however, fan motor speed may need to be changed to obtain necessary cooling airflow.

### PROCEDURE 6—HEATING

The blower speed is factory set to deliver required airflow at normal duct static pressure.

### PROCEDURE 7—COOLING


The blower speed may be field adjusted to deliver required airflow for cooling application (see Table 7).

### PROCEDURE 8—CONSTANT BLOWER SWITCH

This furnace is equipped with a constant low-speed blower option. Whenever room thermostat is not calling for heating or cooling, blower runs on low speed in order to provide air circulation. If constant blower option is not desired, the rocker switch on side of control box may be used to turn off constant speed.

**Table 5—Burner, Nozzle, and Pump Pressure Chart**

UNIT SIZE	FIRING RATE GAL/HR (US)	PUMP PRESSURE (PSIG)	BECKETT OIL BURNER	
			Model	Nozzle
036075	0.50	100	AFG	0.50 gph/70° Hollow
036105	0.76	103	AFG	0.75 gph/70° Hollow
048125	0.90	100	AFG	0.90 gph/70° Hollow
060155	1.12	104	AFG	1.10 gph/70° Hollow
060210	1.50	100	AFG	1.50 gph/70° Solid

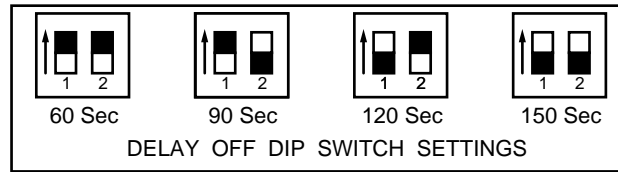

A95115

Fig. 3—Fan Off Time DIP Switch Settings

## CARE AND MAINTENANCE

---

**⚠ WARNING:** The ability to properly perform maintenance on this equipment requires certain expertise, mechanical skills, tools, and equipment. If you do not possess these, do not attempt to perform any maintenance on this equipment other than those procedures recommended in the User's Manual. FAILURE TO FOLLOW THIS WARNING COULD RESULT IN POSSIBLE DAMAGE TO THIS EQUIPMENT, SERIOUS PERSONAL INJURY, OR DEATH.

---



---

**⚠ WARNING:** Before performing any service functions, unless operations specifically require power to be on, make sure all utilities are turned off upstream of appliance. Failure to comply with this warning will cause a fire hazard and/or bodily harm.

---



---

**⚠ WARNING:** To avoid personal injury, make sure the electrical supply power is off before servicing.

---

### PROCEDURE 1—GENERAL

In order to keep furnace in good operating condition and to maintain its warranty, furnace MUST be serviced on an annual basis. This servicing includes a nozzle change, burner inspection, visual check of tube passages through flue outlet and cleanout ports, and a visual inspection of combustion chamber when burner is removed.

Depending on above inspection, service could also include cleaning and vacuuming of heat exchanger tubes and possibly heat exchanger drum section.

Removal of any heat exchanger components which are sealed by gaskets requires replacement of gasket.

---

**⚠ WARNING:** Failure to replace any heat exchanger gaskets with new gaskets when any heat exchanger plates or covers are removed could lead to heat exchanger leakage, sooting, and/or a hazardous condition capable of causing bodily harm.

---

This furnace should never be operated without air filter(s). Disposable filters should be replaced at least once a year. If equipped to provide cooling, filters should be replaced a minimum of twice a year. Permanent filters should be cleaned at least twice a year.

ALWAYS KEEP MAIN OIL VALVE TURNED OFF IF BURNER IS SHUT DOWN FOR AN EXTENDED PERIOD OF TIME.

### PROCEDURE 2—OIL BURNER

Contact your service technician for service.

Lubricate burner motor with SAE 10 oil. Once each year, pour 2 teaspoons of oil slowly into each oil cup.

To maintain proper performance, oil nozzle MUST be replaced once a year.

The procedure for nozzle installation and/or replacement is outlined in Oil Burner Instruction Manual which came with the furnace. For ease of maintenance the oiling procedure for burner motor, as outlined in burner manual, should be performed at the same time.

After replacement of nozzle, burner should be adjusted in accordance with Combustion Check section of the instruction.

### PROCEDURE 3—HEAT EXCHANGER AND FLUE PIPE

Ordinarily, it is not necessary to clean heat exchanger or flue pipe every year; however, it is NECESSARY to have your service technician check unit before each heating season to determine whether cleaning or replacement of parts is required.

#### CLEANING SECONDARY HEAT EXCHANGER AND FLUE PIPE ONLY

If cleaning of only the secondary heat exchanger tubes and flue pipe is necessary, the following steps should be performed:

1. Turn off all oil and electrical supplies upstream of furnace.

---

**⚠ CAUTION:** If furnace has been in operation, some surfaces may be hot. Allow time for unit to cool down.

---

2. Disconnect flue pipe and remove flue elbow.
3. Unscrew wing clamp nuts and remove cleanout port covers (see Fig. 4 for 075–155 size units, or Fig. 5 for 210 size unit).
4. Clean secondary tubes and flue pipe with a stiff brush and vacuum cleaner.
5. Before reinstalling cleanout port covers, the gasket on each cover MUST be replaced. Use cleanout port gasket kit part no. 20196201.

6. Reinstall covers and tighten in place making sure that covers are properly seated over ports and gasketed has sealed opening (see Fig. 6).


---

**⚠ WARNING:** Failure to replace cleanout port cover gaskets, failure to properly seat covers over ports, and/or failure to securely tighten wing nuts could lead to flue gas leakage. This could lead to furnace damage, oil fumes, sooting, and severe bodily harm.

---


7. Reconnect flue elbow and flue pipe.

8. Turn on power to unit and readjust burner for proper operation. Inspect cleanout ports and flue connection to make sure there are no leaks.  
CLEANING BOTH PRIMARY AND SECONDARY HEAT EXCHANGER SECTIONS-075–155 SIZE UNITS:

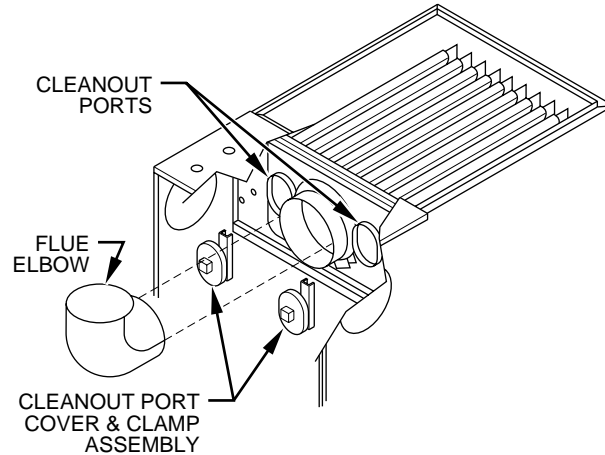

A96307

**Fig. 4—Removing Cleanout Port Covers 075–155 Size Units**

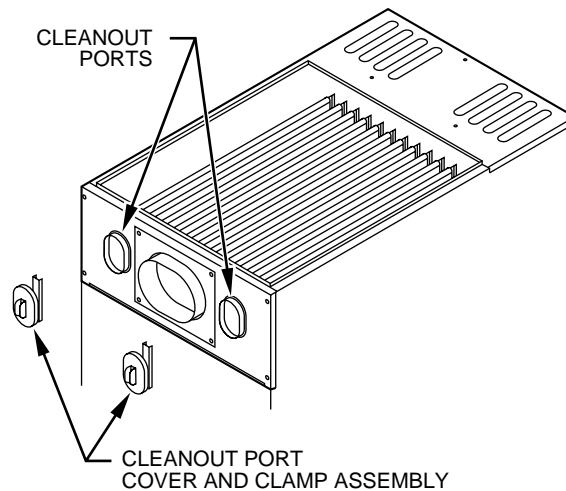

A97220

**Fig. 5—Removing Cleanout Port Cover 210 Size Unit**

If a more thorough cleaning is required (both primary and secondary heat exchanger sections), the following steps should be performed:

1. Turn off all oil and electrical supplies upstream of furnace.

---

**⚠ CAUTION:** If furnace has been in operation, some surfaces may be hot. Allow time for unit to cool down.

---

2. Disconnect flue pipe and remove flue elbow.

3. Remove collar on flue connection.

4. Remove observation door.

5. Remove upper vestibule panel.

6. Place field-fabricated cardboard on metal tray beneath collector box to prevent debris from entering blower compartment.


7. Remove flue collector box from secondary heat exchanger tube flange. This exposes inside surfaces of secondary tubes of heat exchanger.

8. Clean secondary tubes and flue pipe with a stiff brush and vacuum cleaner.

---

**⚠ CAUTION:** If soot is allowed to fall into heat exchanger compartment, it must be vacuumed up before turning furnace back on. If this soot is not cleaned up, it will blow through duct work and into the house.

---

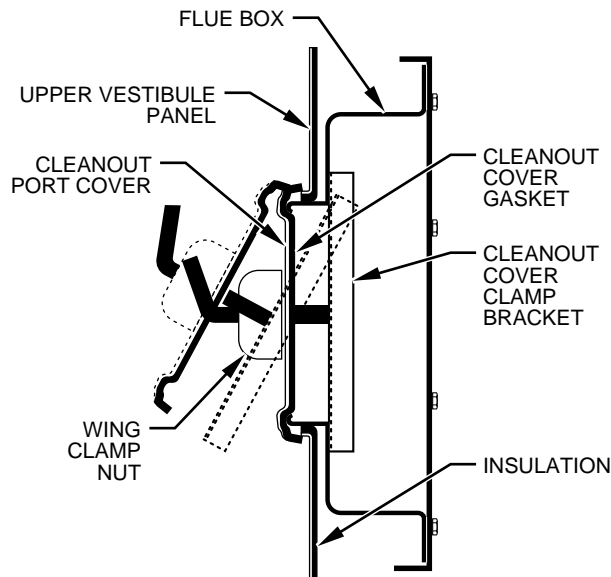

A96308

**Fig. 6—Reinstalling Cleanout Port Covers**

9. Disconnect limit control wires.
10. Disconnect oil line and remove oil burner from furnace.
11. Remove collar on observation tube.
12. Remove lower intermediate panel. Care must be taken not to bend or damage limit control.
13. Loosen to hand tightness the 3 nuts labeled “A” in Fig. 7. Remove screws labeled “B” in Fig. 7. Slide combustion chamber forward out of heat exchanger. Be careful not to bump combustion chamber as it becomes brittle after having been fired.
14. Use a stiff brush and vacuum cleaner to clean inside of primary drum.

---

**⚠ CAUTION: Never use incendiary type cleaners (smoke sticks) for cleaning!**

---


**⚠ WARNING: For all heat exchanger plates that have been removed, the gaskets MUST be replaced. Failure to replace gaskets could lead to heat exchanger leakage, sooting, and a hazardous condition which could lead to bodily harm.**

---

15. Before reassembly, heat exchanger and combustion chamber should be inspected to determine if replacement is required. After cleaning, place combustion chamber back into primary drum and secure with “B” screws. Ensure that cover plate gasket is in place before tightening screws. Care must be taken not to damage combustion chamber. The “B” screws should be tightened to 35–45 lb.in. of torque.
16. Tighten “A” nuts to 30lb.-in. of torque (firm, but not overly tight).
17. Replace collector box on secondary tube flange, ensuring proper placement of gasket. Tighten screws to 35–45 lb.-in. of torque.
18. Replace lower then upper intermediate panels, flue and observation tube collars, observation door, flue elbow, limit wiring, and oil burner.
19. Reconnect flue pipe and oil pipe(s).
20. Readjust burner for proper operation. Check limit operation as outlined in Limit Control Check section.

**CLEANING PRIMARY AND SECONDARY HEAT EXCHANGERS-210 SIZE UNIT**

1. Turn off all oil and electrical supplies upstream of furnace.
2. Disconnect flue pipe.
3. Remove collar on flue connection.
4. Remove upper rear panel.

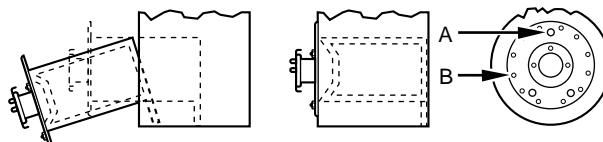

A96398

**Fig. 7—Removing Combustion Chamber**

5. Remove flue collector box from secondary heat exchanger tube flange. This exposes inside surfaces of secondary tubes of heat exchanger.
6. Clean secondary tubes and flue pipe with a stiff brush and vacuum cleaner.
7. If only secondary tubes need to be cleaned, no further disassembly is required. Proceed to item 18 for reassembly. If primary heat exchanger section is also to be cleaned proceed to next item.
8. Disconnect limit control wires.
9. Disconnect oil line and remove oil burner from furnace.
10. Remove observation door.
11. Remove collar on observation tube.
12. Remove intermediate pane. Care must be taken not to bend or damage limit control.
13. Loosen to hand tightness the 3 nuts labeled "A" in Fig. 7. Remove screws labeled "B" in Fig. 7. Slide combustion chamber forward out of heat exchanger. Be careful not to bump combustion chamber as it becomes brittle after having been fired.
14. Use a stiff brush and vacuum cleaner to clean inside of primary drum.
15. Before assembly, heat exchanger and combustion chamber should be inspect to determine if replacement is required. After cleaning, place combustion chamber back into primary drum and secure with "B" screws. Use 35–45 lb-in. of torque. Ensure that cover plate gasket is in place before tightening screws. Care must be taken not to damage combustion chamber.
16. Tighten "A" nuts to 30 lb.-in. of torque (firm, but not overly tight).
17. Replace intermediate panel, observation tube collar, observation door, limit wiring, and oil burner.
18. Replace collector box on secondary tube flange, ensuring proper placement of gasket. Tighten screws to 35–45 lb-in. of torque.
19. Replace upper rear panel and flue collar.
20. Reconnect flue pipe and oil line(s) if removed.
21. Readjust burner for proper operation. Check limit operation as outlined in Limited Control Check section.

#### PROCEDURE 4—BLOWER OILING AND REMOVAL

Periodic oiling of blower motor may be necessary. Check for instructions on inside of blower access panel.

If it is ever necessary to remove blower from furnace, refer to Fig. 7 and perform the following:

1. Turn off electrical power to furnace.
2. Remove louvered door and blower door.
3. Remove blower retaining screw (on blower shelf near corner where intermediate panel and blower shelf meet).
4. Remove cover from control box and disconnect thermostat and power wires from board.
5. Remove 3 screws holding control box to blower partition.
6. Slide blower forward on rails toward front of unit until motor wire connections at terminal block on motor can easily be reached and disconnected.
7. Disconnect motor wires at terminal block on motor and then disconnect 2 red wires connected to auxiliary limit control mounted on opposite side of blower.

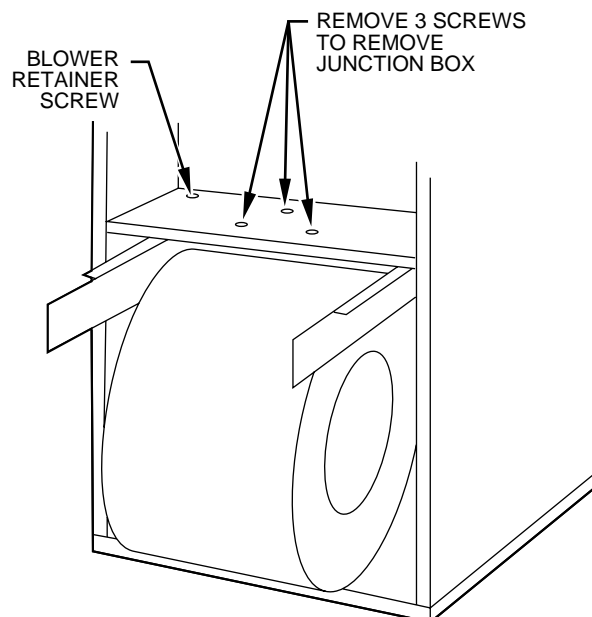


Fig. 8—Removing Blower

8. Swing control box out of way of blower and remove blower from unit.

---

**⚠ CAUTION: Be sure blower is adequately supported when sliding out of mounting rails, especially in horizontal positions, in order to prevent dropping blower and injuring yourself or damaging blower!**

---

9. Reverse items 1 through 9 to reinstall blower. Refer to wiring diagram (Fig. 12 or 13) of this instruction or diagram located on inside of louvered door to properly rewire unit.

#### **PROCEDURE 5—KEEPING FILTERS CLEAN**

---

**⚠ WARNING: Never operate unit without a filter or with filter access door removed. Failure to adhere to this warning could lead to a hazardous condition which could lead to equipment damage and bodily harm.**

---


As a homeowner, keeping filters clean is your most important responsibility. A dirty filter reduces efficiency of your system, causes erratic performance of controls, and could result in damage to motor or heating equipment.

1. Inspect filters at regular intervals depending on dirt conditions. For new homes, check filters every week for 4 consecutive weeks. In all cases, inspect filters at least every 3 to 4 weeks when system is in constant operation. Replace or clean filter at least at beginning of each season (heating or cooling) and thereafter as needed.
2. If the permanent filter supplied with filter rack becomes dirty, it can be cleaned with cold water and soap.

Be sure that filter is thoroughly dry before installing back into furnace.

Minimum filter sizes and suggested filter material are indicated in Table 6. If different type filter is used, it must be an equivalent high airflow capacity.



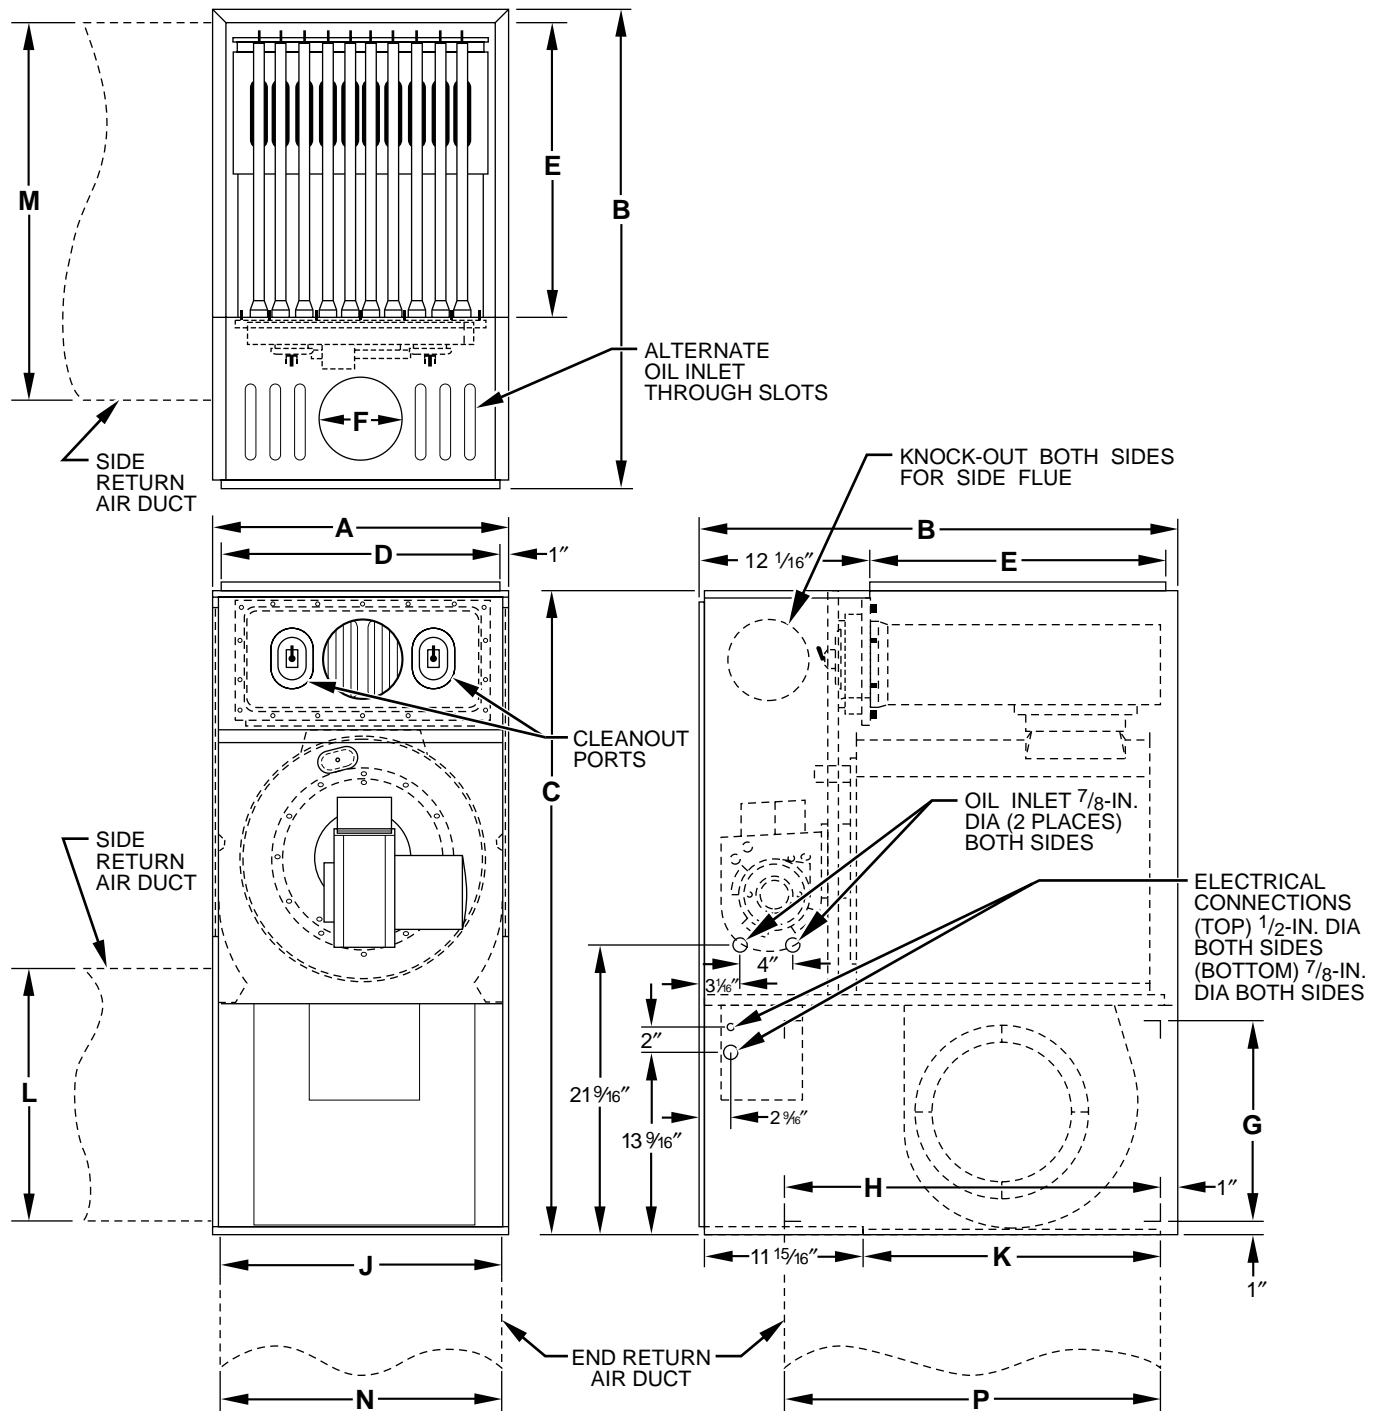

A96306

**Dimensions (In.)**


UNIT SIZE	UNIT DIMENSIONS			DUCT SUPPLY OPENING		FLUE DIAMETER	SIDE RETURN OPENING*		END (BOTTOM) RETURN OPENING		SIDE RETURN DUCT SIZE		END (BOTTOM) DUCT SIZE		SHIP WT. (LB.)
	Width	Depth	Height	D	E		F	G	H	J	K	L	M	N	
036075	22	30-1/2	48	20	17	6	15	25-1/4	20-1/8	17-1/16	18-1/4	25-1/4	20-1/4	25-1/4	220
036105	22	30-1/2	48	20	17	6	15	25-1/4	20-1/8	17-1/16	18-1/4	25-1/4	20-1/4	25-1/4	227
048125	22	35-1/2	48	20	22	6	15	30-1/4	20-1/8	22-1/16	18-1/4	30-1/4	20-1/4	30-1/4	236
060150	22	35-1/2	48	20	22	6	15	30-1/4	20-1/8	22-1/16	18-1/4	30-1/4	20-1/4	30-1/4	243

\*Filter Rack provides transition from duct size to opening size.

Duct sizes are ID dimensions for slipping over filter rack.

Outlet of heat exchanger and elbow shipped with furnace are 6 in. Flue pipe may be reduced to 5-in. diameter for vent sizing.

**Fig. 9—Dimensional Drawing 075-155 Size Furnaces**

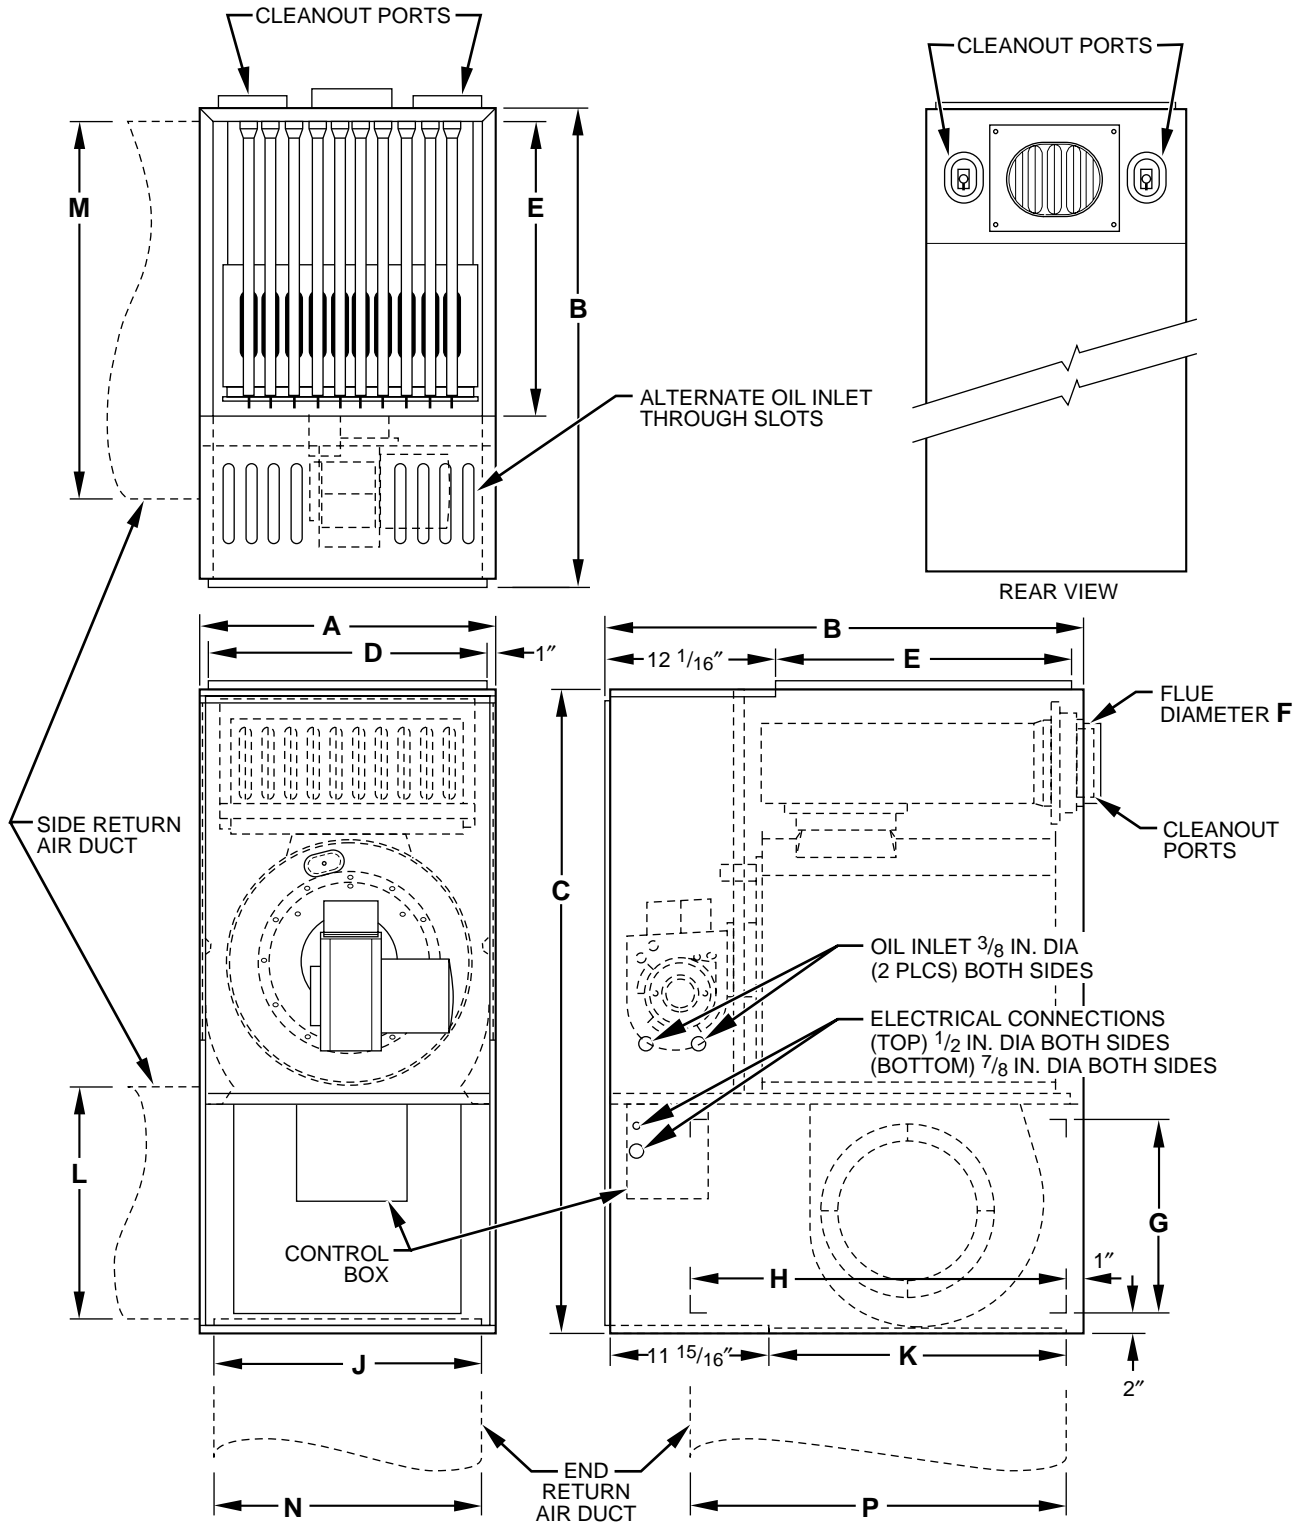

A96336

**Dimensions (In.)**

UNIT SIZE	UNIT DIMENSIONS			DUCT SUPPLY OPENING		FLUE DIAMETER	SIDE RETURN OPENING*		END (BOTTOM) RETURN OPENING		SIDE RETURN DUCT SIZE		END (BOTTOM) DUCT SIZE		SHIP WT. (LB.)
	Width	Depth	Height	D	E		G	H	J	K	L	M	N	P	
<b>060210</b>	26	42-1/2	54-3/4	24	29	7	17-3/4	37-1/4	24-1/8	29-1/16	20-1/4	38-1/4	24-1/4	38-1/4	385

\*Filter Rack provides transition from duct size to opening size.  
Duct sizes are ID dimensions for slipping over filter rack.

**Fig. 10—Dimensional Drawing of 210 Size Furnace**

**Table 6–Minimum Filter Dimensions (in.)**





UNIT SIZE	FILTER SIZE	
	Side Return	End Return
<b>036075</b>	18-1/8 x 25	20-1/8 x 25
<b>036105</b>	18-/18 x 25	20-1/8 x 25
<b>048125</b>	18-1/8 x 30	20-1/8 x 30
<b>060155</b>	18-1/8 x 30	20-1/8 x 30
<b>060210</b>	20-1/4 x 30	24-1/2 x 30

**Table 7–Airflow Data (CFM)**






UNIT SIZE	BLOWER SPEED	EXTERNAL STATIC PRESSURE IN. WC									
		0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1.0
<b>036075</b>	High	1530	1475	1410	1340	1255	1170	1075	970	855	705
	Medium	1240	1200	1150	1110	1065	1000	920	830	705	555
	Low	870	850	830	805	765	720	660	590	480	360
<b>036105</b>	High	1635	1560	1500	1425	1365	1260	1165	1040	945	785
	Medium	1470	1425	1365	1290	1220	1140	1030	935	825	695
	Low	1280	1245	1205	1145	1085	1010	935	835	710	590
<b>048125</b>	High	1965	1915	1865	1805	1745	1665	1590	1515	1445	1345
	Medium	1695	1645	1615	1565	1530	1465	1410	1335	1255	1165
	Low	1340	1330	1320	1290	1270	1215	1180	1125	1045	990
<b>060155</b>	High	2240	2170	2085	1980	1935	1820	1750	1665	1590	1510
	Medium	2000	1965	1890	1795	1755	1690	1625	1555	1480	1375
	Low	1535	1495	1450	1420	1365	1330	1275	1205	1125	1035
<b>060210</b>	High	2485	2395	2305	2250	2145	2075	1975	1885	1780	1675
	Medium	2195	2125	2060	1990	1915	1860	1785	1700	1620	1525
	Low	1640	1590	1540	1515	1460	1410	1350	1275	1190	1075

1. Airflow values in cubic ft. per minute (CFM) rounded to the nearest 5 CFM.
2. Data taken without filters in place.

# BAROMETRIC DAMPER LOCATIONS

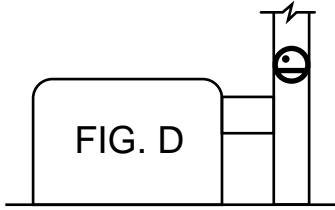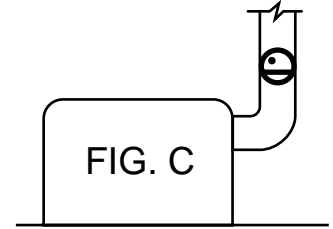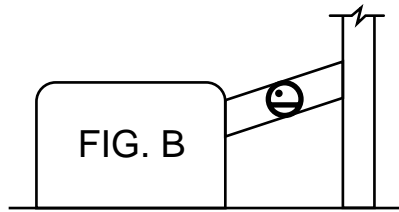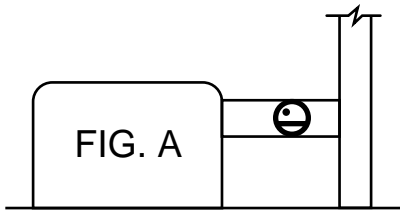

## GOOD LOCATIONS

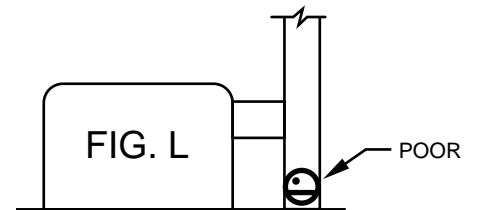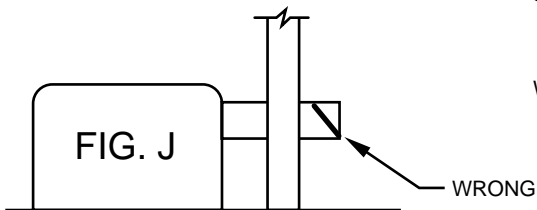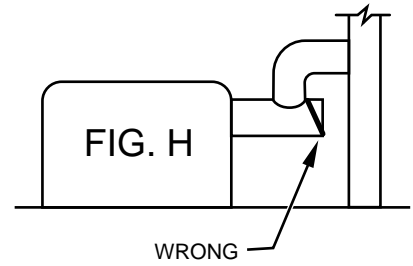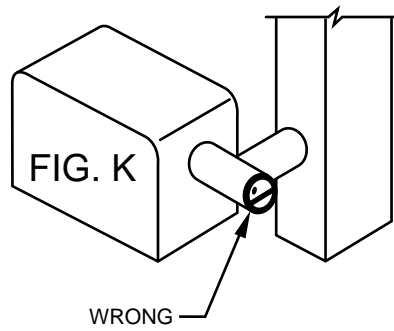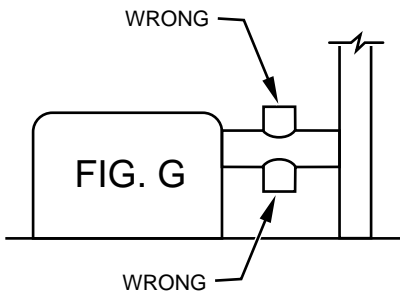

## BAD LOCATIONS

Fig. 11—Barometric Damper Locations

A95117

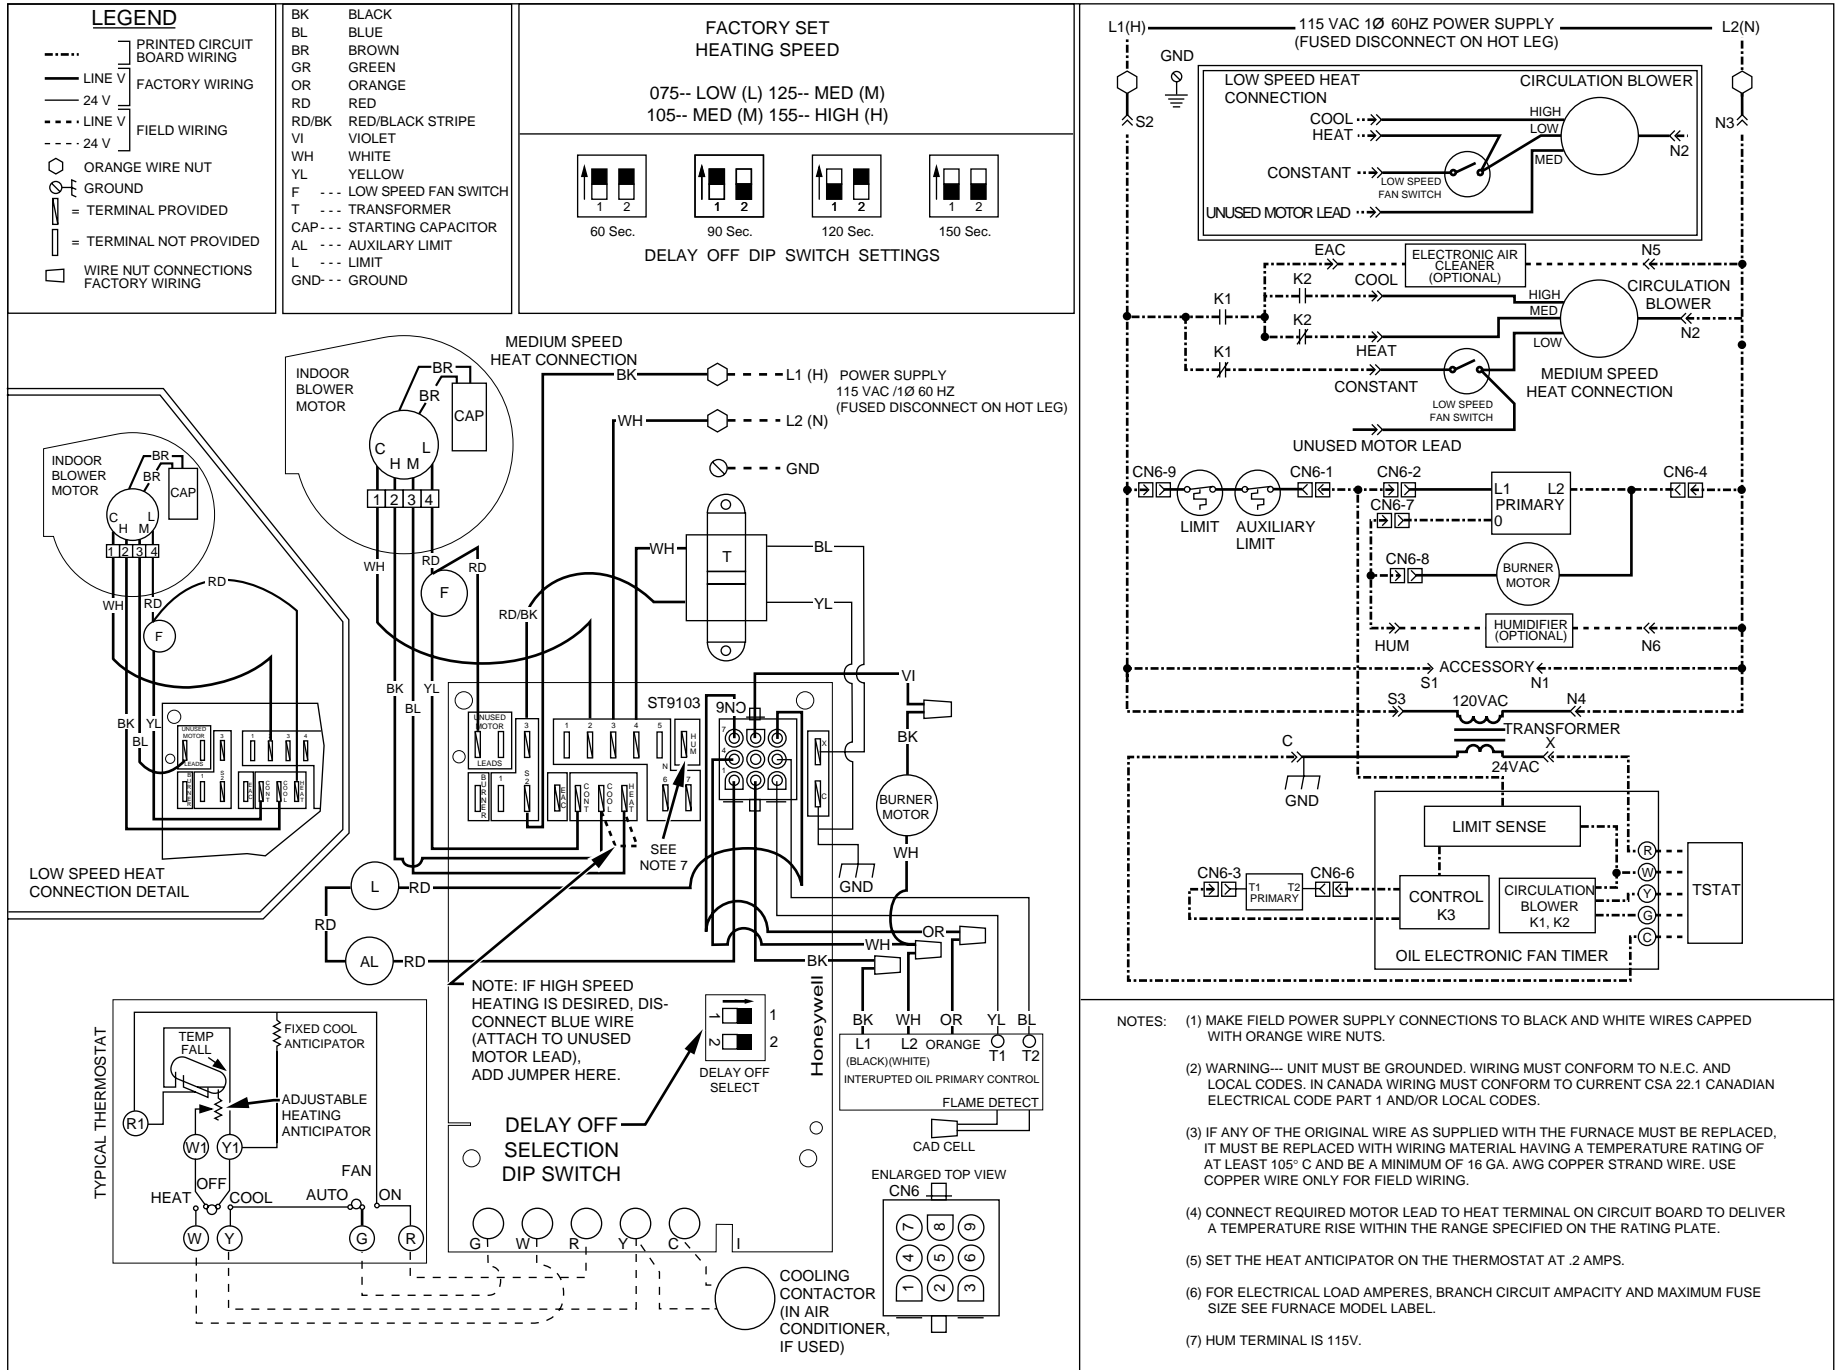


Fig. 12-Wiring Diagram-075-155 Size Furnace

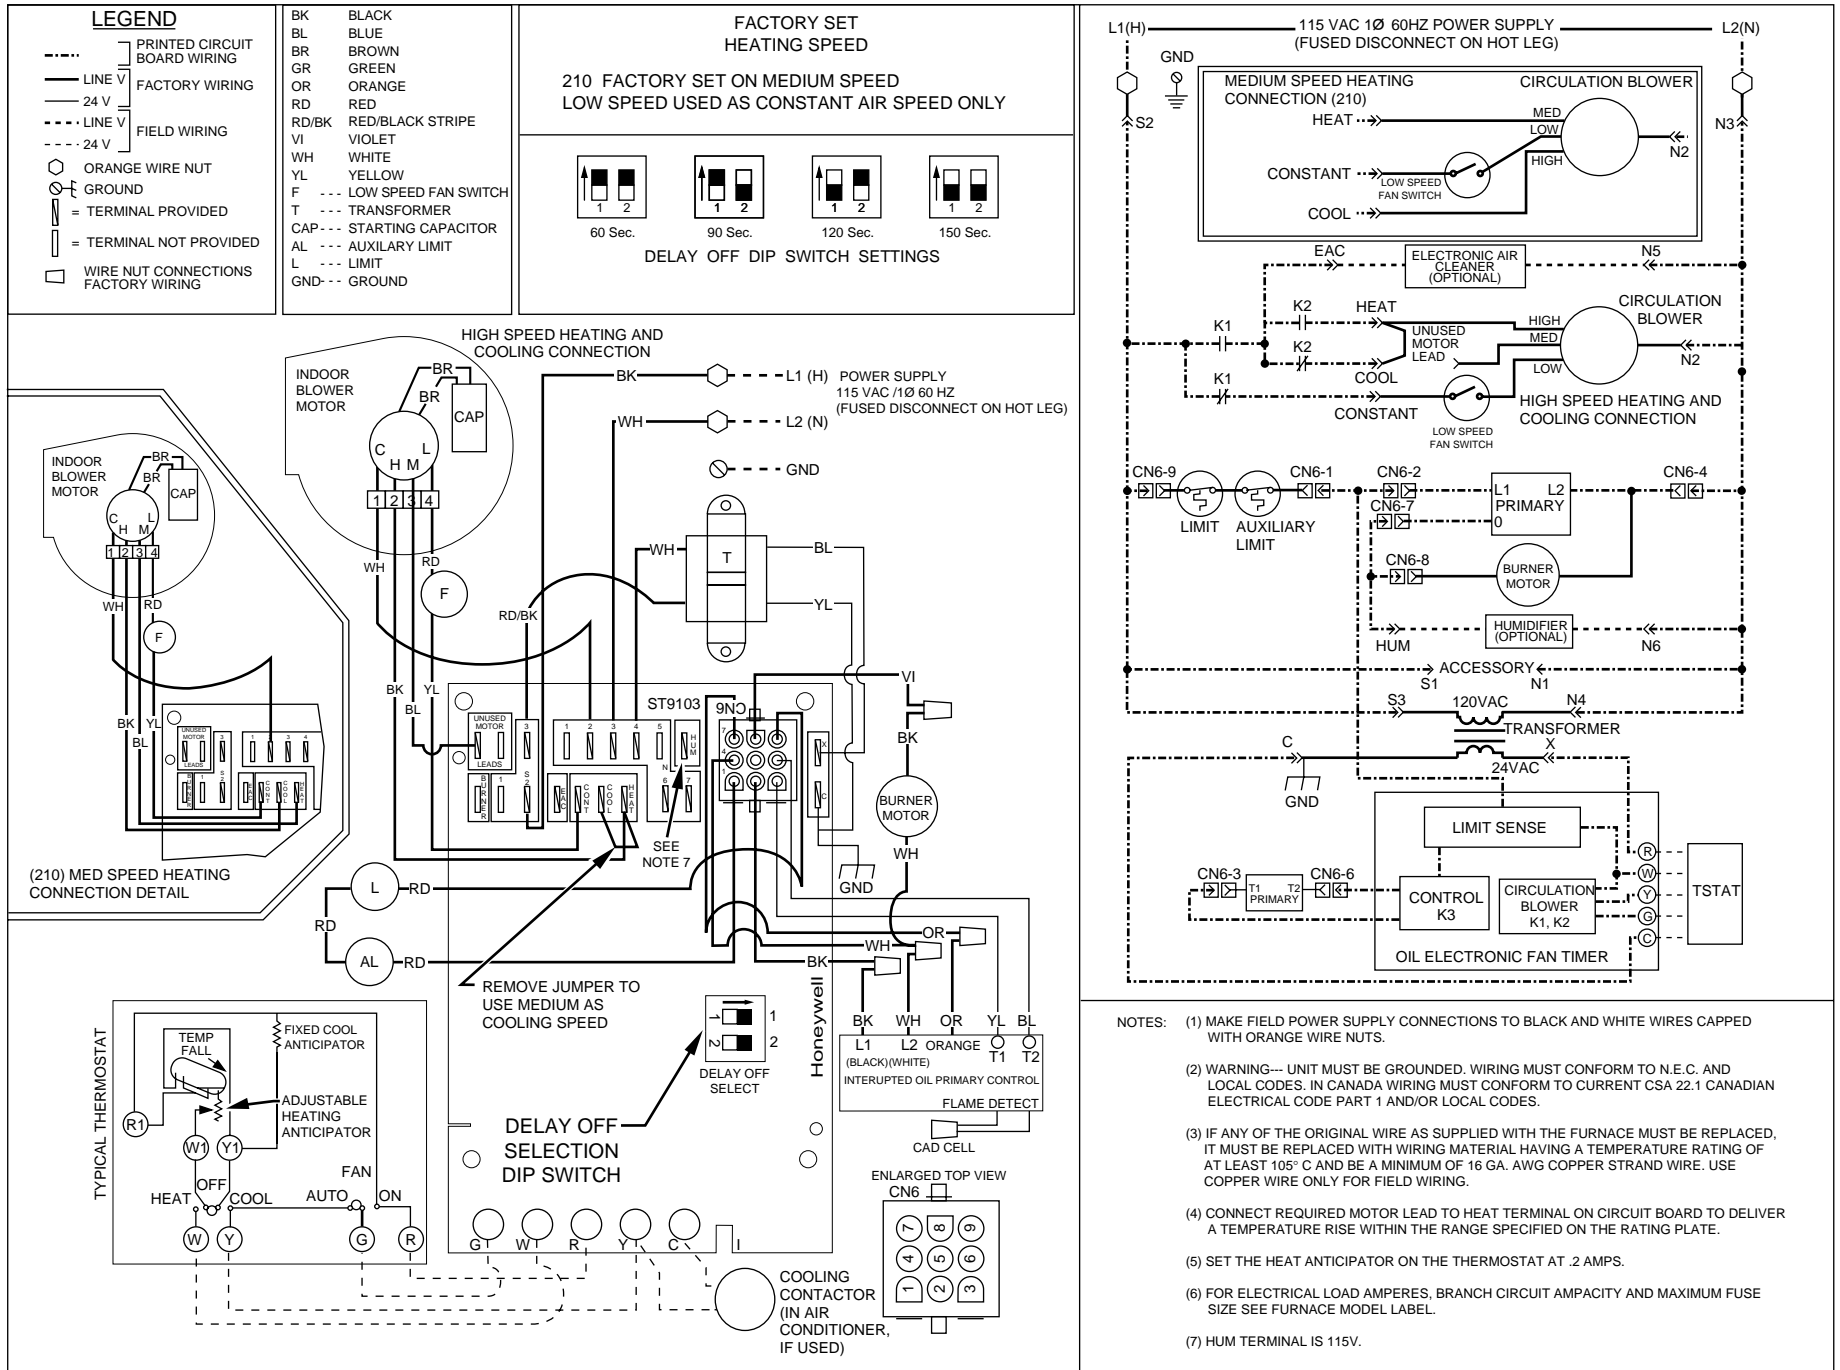


Fig. 13—Wiring Diagram-210 Size Furncae







