



Installation Instructions

SAFETY CONSIDERATIONS

Centrifugal liquid chillers are designed to provide safe and reliable service when operated within design specifications. When operating this equipment, use good judgment and safety precautions to avoid damage to equipment and property or injury to personnel.

Be sure you understand and follow the procedures and safety precautions contained in the machine instructions, as well as those listed in this guide.

⚠ DANGER

Failure to follow these procedures will result in severe personal injury or death.

DO NOT VENT refrigerant relief devices within a building. Outlet from rupture disc or relief valve must be vented outdoors in accordance with the latest edition of ANSI/ASHRAE 15 (American National Standards Institute/American Society of Heating, Refrigerating and Air-Conditioning Engineers) (Safety Code for Mechanical Refrigeration). The accumulation of refrigerant in an enclosed space can displace oxygen and cause asphyxiation.

PROVIDE adequate ventilation in accordance with ANSI/ASHRAE 15, especially for enclosed and low overhead spaces. Inhalation of high concentrations of vapor is harmful and may cause heart irregularities, unconsciousness, or death. Intentional misuse can be fatal. Vapor is heavier than air and reduces the amount of oxygen available for breathing. Product causes eye and skin irritation. Decomposition products are hazardous.

DO NOT USE OXYGEN to purge lines or to pressurize a machine for any purpose. Oxygen gas reacts violently with oil, grease, and other common substances.

DO NOT USE air to leak test. Use only refrigerant or dry nitrogen.

NEVER EXCEED specified test pressures. VERIFY the allowable test pressure by checking the instruction literature and the design pressures on the equipment nameplate.

DO NOT VALVE OFF any safety device.

BE SURE that all pressure relief devices are properly installed and functioning before operating any machine.

RISK OF INJURY OR DEATH by electrocution. High voltage is present on motor leads even though the motor is not running when a solid state or inside-delta mechanical starter is used. Open the power supply disconnect before touching motor leads or terminals.

⚠ WARNING

Failure to follow these procedures may result in personal injury or death.

DO NOT USE TORCH to remove any component. System contains oil and refrigerant under pressure.

To remove a component, wear protective gloves and goggles and proceed as follows:

- Shut off electrical power to unit.
- Recover refrigerant to relieve all pressure from system using both high-pressure and low pressure ports.
- Traces of vapor should be displaced with nitrogen and the work area should be well ventilated. Refrigerant in contact with an open flame produces toxic gases.
- Cut component connection tubing with tubing cutter and remove component from unit. Use a pan to catch any oil that may come out of the lines and as a gage for how much oil to add to the system.
- Carefully unsweat remaining tubing stubs when necessary. Oil can ignite when exposed to torch flame.

DO NOT USE eyebolts or eyebolt holes to rig machine sections or the entire assembly.

DO NOT work on high-voltage equipment unless you are a qualified electrician.

DO NOT WORK ON electrical components, including control panels, switches, starters, or oil heater until you are sure ALL POWER IS OFF and no residual voltage can leak from capacitors or solid-state components.

LOCK OPEN AND TAG electrical circuits during servicing. IF WORK IS INTERRUPTED, confirm that all circuits are de-energized before resuming work.

AVOID SPILLING liquid refrigerant on skin or getting it into the eyes. USE SAFETY GOGGLES. Wash any spills from the skin with soap and water. If liquid refrigerant enters the eyes, IMMEDIATELY FLUSH EYES with water and consult a physician.

NEVER APPLY an open flame or live steam to a refrigerant cylinder. Dangerous over pressure can result. When it is necessary to heat refrigerant, use only warm (110 F [43 C]) water.

DO NOT REUSE disposable (nonreturnable) cylinders or attempt to refill them. It is DANGEROUS AND ILLEGAL. When cylinder is emptied, evacuate remaining gas pressure, loosen the collar, and unscrew and discard the valve stem. DO NOT INCINERATE.

CHECK THE REFRIGERANT TYPE before adding refrigerant to the machine. The introduction of the wrong refrigerant can cause machine damage or malfunction.

(Warnings continued on next page.)

⚠ WARNING

Operation of this equipment with refrigerants other than those cited herein should comply with ANSI/ASHRAE 15 (latest edition). Contact Carrier for further information on use of this machine with other refrigerants.

DO NOT ATTEMPT TO REMOVE fittings, covers, etc., while machine is under pressure or while machine is running. Be sure pressure is at 0 psig (0 kPa) before breaking any refrigerant connection.

CAREFULLY INSPECT all relief valves, rupture discs, and other relief devices AT LEAST ONCE A YEAR. If machine operates in a corrosive atmosphere, inspect the devices at more frequent intervals.

DO NOT ATTEMPT TO REPAIR OR RECONDITION any relief valve when corrosion or build-up of foreign material (rust, dirt, scale, etc.) is found within the valve body or mechanism. Replace the valve.

DO NOT install relief devices in series or backwards.

USE CARE when working near or in line with a compressed spring. Sudden release of the spring can cause it and objects in its path to act as projectiles.

⚠ CAUTION

Failure to follow these procedures may result in personal injury or damage to equipment.

DO NOT STEP on refrigerant lines. Broken lines can whip about and release refrigerant, causing personal injury.

DO NOT climb over a machine. Use platform, catwalk, or staging. Follow safe practices when using ladders.

USE MECHANICAL EQUIPMENT (crane, hoist, etc.) to lift or move inspection covers or other heavy components. Even if components are light, use mechanical equipment when there is a risk of slipping or losing your balance.

BE AWARE that certain automatic start arrangements CAN ENGAGE THE STARTER, TOWER FAN, OR PUMPS. Open the disconnect *ahead* of the starter, tower fan, and pumps. Shut off the machine or pump before servicing equipment.

USE only repaired or replacement parts that meet the code requirements of the original equipment.

DO NOT VENT OR DRAIN waterboxes containing industrial brines, liquid, gases, or semisolids without the permission of your process control group.

DO NOT LOOSEN waterbox cover bolts until the waterbox has been completely drained.

DOUBLE-CHECK that coupling nut wrenches, dial indicators, or other items have been removed before rotating any shafts.

DO NOT LOOSEN a packing gland nut before checking that the nut has a positive thread engagement.

PERIODICALLY INSPECT all valves, fittings, and piping for corrosion, rust, leaks, or damage.

PROVIDE A DRAIN connection in the vent line near each pressure relief device to prevent a build-up of condensate or rain water.

DO NOT re-use compressor oil or any oil that has been exposed to the atmosphere. Dispose of oil per local codes and regulations.

DO NOT leave refrigerant system open to air any longer than the actual time required to service the equipment. Seal circuits being serviced and charge with dry nitrogen to prevent oil contamination when timely repairs cannot be completed.

CONTENTS

| | Page |
|--|------------|
| SAFETY CONSIDERATIONS | 1,2 |
| INTRODUCTION | 2 |
| General | 2 |
| Job Data | 2 |
| INSTALLATION | 2-78 |
| Step 1 — Receive the Machine | 2 |
| • INSPECT SHIPMENT | |
| • IDENTIFY MACHINE | |
| • INSTALLATION REQUIREMENTS | |
| • PROVIDE MACHINE PROTECTION | |
| Step 2 — Rig the Machine | 3 |
| • RIG MACHINE ASSEMBLY | |
| • RIG MACHINE COMPONENTS | |
| Step 3 — Install Machine Supports | 31 |
| • INSTALL STANDARD ISOLATION | |
| • INSTALL ACCESSORY ISOLATION | |
| • INSTALL SPRING ISOLATION | |
| Step 4 — Connect Piping | 34 |
| • INSTALL WATER PIPING TO HEAT EXCHANGERS | |
| • INSTALL VENT PIPING TO RELIEF VALVES | |
| • INSTALL CIRCUIT BREAKER HANDLE EXTENSION | |
| Step 5 — Make Electrical Connections | 43 |
| • CONNECT CONTROL INPUTS | |
| • CONNECT CONTROL OUTPUTS | |
| • CONNECT STARTER | |
| • CARRIER COMFORT NETWORK INTERFACE | |
| • OPTIONAL UPC OPEN CONTROLLER WIRING | |
| Step 6 — Install Field Insulation | 78 |
| INSTALLATION START-UP REQUEST CHECKLIST | CL-1, CL-2 |

INTRODUCTION

General — The 19XR, 19XRV machine is factory assembled, wired, and leak tested. Installation (not by Carrier) consists primarily of establishing water and electrical services to the machine. The rigging, installation, field wiring, field piping, and insulation of waterbox covers are the responsibility of the contractor and/or customer. Carrier has no installation responsibilities for the equipment.

Job Data

Necessary information consists of:

- job contract or specifications
- machine location prints
- rigging information
- piping prints and details
- field wiring drawings
- starter manufacturer's installation details
- Carrier certified print

INSTALLATION

Step 1 — Receive the Machine

INSPECT SHIPMENT

⚠ CAUTION

Do not open any valves or loosen any connections. The 19XR, 19XRV machine may be shipped with a nitrogen holding charge in both modules. Damage to machine may result.

1. Inspect for shipping damage while machine is still on shipping conveyance. If machine appears to be damaged

or has been torn loose from its anchorage, have it examined by transportation inspectors before removal. Forward claim papers directly to transportation company. *Manufacturer is not responsible for any damage incurred in transit.*

2. Check all items against shipping list. Immediately notify the nearest Carrier representative if any item is missing.
3. To prevent loss or damage, leave all parts in original packages until beginning installation. All openings are closed with covers or plugs to prevent dirt and debris from entering machine components during shipping. A full operating oil charge is placed in the oil sump before shipment.

IDENTIFY MACHINE — The machine model number, serial number, and heat exchanger sizes are stamped on machine identification nameplate (Fig. 1-3). Check this information against shipping papers and job data.

| MODEL NUMBER | | SERIAL NO. |
|---|---------|------------|
| MACHINE | | |
| COMP-R | | |
| COOLER | | |
| CONDENSER | | |
| ECON | | |
| STOR TANK | | |
| RATED TONS | | |
| RATED iKW | | |
| REFRIGERANT | LBS. | KGS. |
| R- | CHARGED | |
| COMPRESSOR MOTOR DATA | | |
| VOLTS/PHASE/HERTZ | | AC |
| RL AMPS | LR AMPS | Y- |
| OLT AMPS | LR AMPS | D- |
| MAX FUSE/CIRCUIT BKR | | |
| MIN. CIRCUIT AMPACITY | | |
| TEST PRESSURE | PSI | KPA |
| DESIGN PRESSURE | PSI | KPA |
| CLR. WATER PRESSURE | PSI | KPA |
| COND. WATER PRESSURE | PSI | KPA |
| CARRIER CHARLOTTE 9701 OLD STATESVILLE ROAD CHARLOTTE, NORTH CAROLINA 28269 MADE IN USA PRODUCTION YEAR: 20XX | | |
| SAFETY CODE CERTIFICATION THIS UNIT IS DESIGNED, CONSTRUCTED, AND TESTED IN CONFORMANCE WITH ANSI/ASHRAE 15 (LATEST REVISION), SAFETY CODE FOR MECHANICAL REFRIGERATION. THE COMPRESSOR MOTOR CONTROLLER AND OVERLOAD PROTECTION MUST BE IN ACCORDANCE WITH CARRIER SPECIFICATION Z-415. | | |
| 19XR05009001 | | |

Fig. 1 — 19XR Refrigeration Machine Nameplate

INSTALLATION REQUIREMENTS — Prior to starting the chiller’s electrical installation, certain requirements should be checked. Input power wire sizes, branch circuit protection, and control wiring are all areas that need to be evaluated.

Determine Wire Size Requirements — Wire size should be determined based on the size of the conduit openings, and applicable local, national, and international codes (e.g., NEC [National Electric Code]/CEC [California Energy Commission] regulations). General recommendations are included in the Carrier field wiring drawings.

Conduit Entry Size — It is important to determine the size of the conduit openings in the enclosure power entry plate so that the wire planned for a specific entry point will fit through the opening. Do NOT punch holes or drill into the top surface of starter or drive if knockouts are provided on the side of the enclosure and not the top of the enclosure.

Recommended Control and Signal Wire Sizes — The recommended minimum size wire to connect I/O signals to the control terminal blocks is 18 AWG (American Wire Gage). Recommended terminal tightening torque is 7 to 9 in.-lb (0.79 to 1.02 N-m).

Recommended Airflow Clearances — Be sure there is adequate clearance for air circulation around the enclosure. A 6-in. (152.4 mm) minimum clearance is required wherever vents are located in the starter or drive enclosure.

Service Clearances — Verify that there are adequate service clearances as identified in Fig. 4.

Verify Adequate Power Supply — It is important to verify that the building power will meet the input power requirements of the Machine Electrical Data nameplate input power rating. Be sure the input power to the chiller corresponds to the chiller’s nameplate voltage, current, and frequency.

PROVIDE MACHINE PROTECTION — Store machine and VFD (variable frequency drive) indoors, protected from construction dirt and moisture. Inspect under shipping tarps, bags, or crates to be sure water has not collected during transit. Keep protective shipping covers in place until machine is ready for installation.

CAUTION

Freezing water can damage equipment. If machine can be or possibly has been exposed to freezing temperatures after water circuits have been installed, open waterbox drains and remove all water from cooler and condenser. Leave drains open until system is filled.

It is important to properly plan before installing a 19XR or 19XRV unit to ensure that the environment and operating conditions are satisfactory and the machine is protected. The installation must comply with all requirements in the certified prints.

Operating Environment — Chiller should be installed in an indoor environment where the ambient temperature is between 40 to 104 F (4 to 40 C) with a relative humidity (non-condensing) of 95% or less. To ensure that electrical components operate properly, do not locate the chiller in an area exposed to dust, dirt, corrosive fumes, or excessive heat and humidity.

Step 2 — Rig the Machine — The 19XR, XRV machine can be rigged as an entire assembly. It also has flanged connections that allow the compressor, cooler, and condenser sections to be separated and rigged individually.


RIG MACHINE ASSEMBLY — See rigging instructions on label attached to machine. Refer to rigging guide (Fig. 5 and 6), physical data in Fig. 4, and Tables 1-8B. *Lift machine only from the points indicated in rigging guide.* Each lifting cable or chain must be capable of supporting the entire weight of the machine.

Contractors are not authorized to disassemble any part of the chiller without Carrier’s supervision. Any request otherwise must be in writing from the Carrier Service Manager.


NOTE: Carrier suggests that a structural engineer be consulted if transmission of vibrations from mechanical equipment is of concern.

WARNING

Lifting chiller module from points other than those specified may result in serious damage to the machine or personal injury. Rigging equipment and procedures must be adequate for maximum chiller module weight. See Fig. 5 and 6 for maximum chiller module weights.

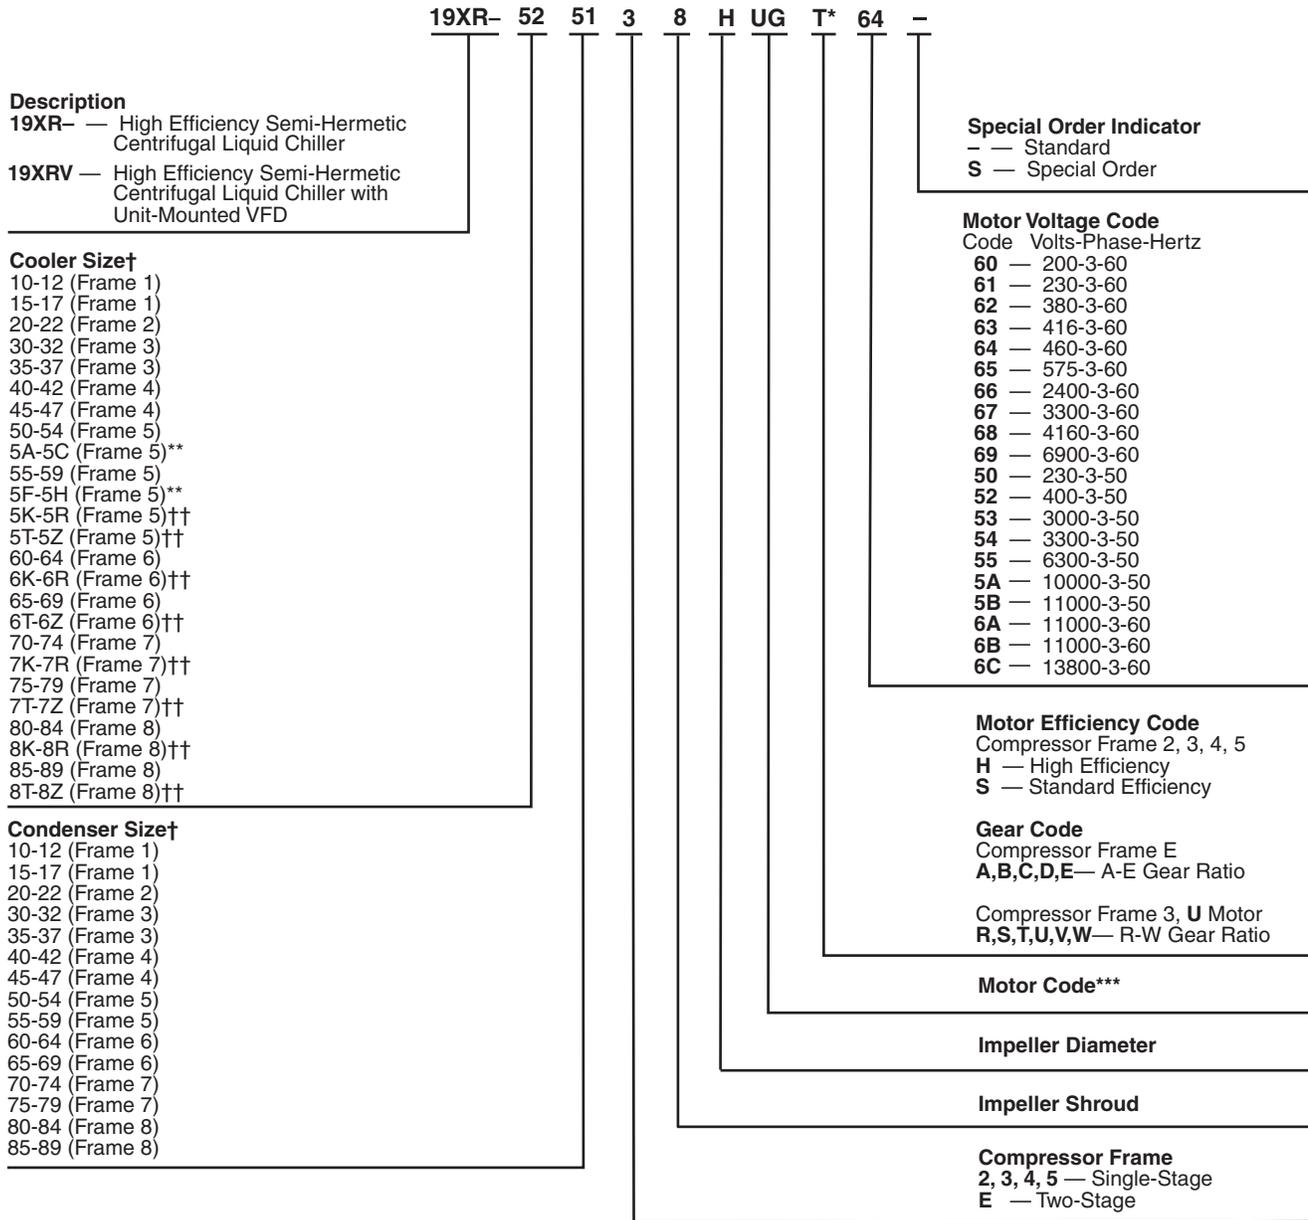


MODEL NUMBER NOMENCLATURE

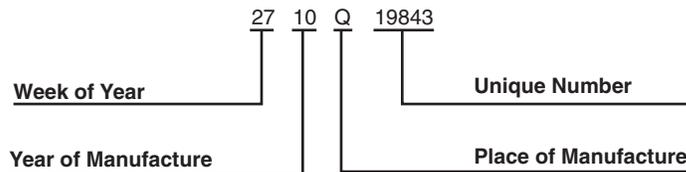


SERIAL NUMBER BREAKDOWN

- * Digit 15 will refer to the Gear Code for the following models:
1. Digit 10 (Compressor Frame) is E
2. Digit 10 (Compressor Frame) is 3 and Digit 13 of the Motor Code is U.
- † Frame sizes 1 through 6 available on single-stage units only.
- ** Refer to 19XR,XRV Computer Selection Program for details on these sizes.
- †† Frame sizes with K-R and T-Z are with 1 in. OD evaporator tubing.
- *** Refer to the 19XR,XRV Computer Selection Program for motor size details.

Fig. 2 — 19XR,XRV Identification

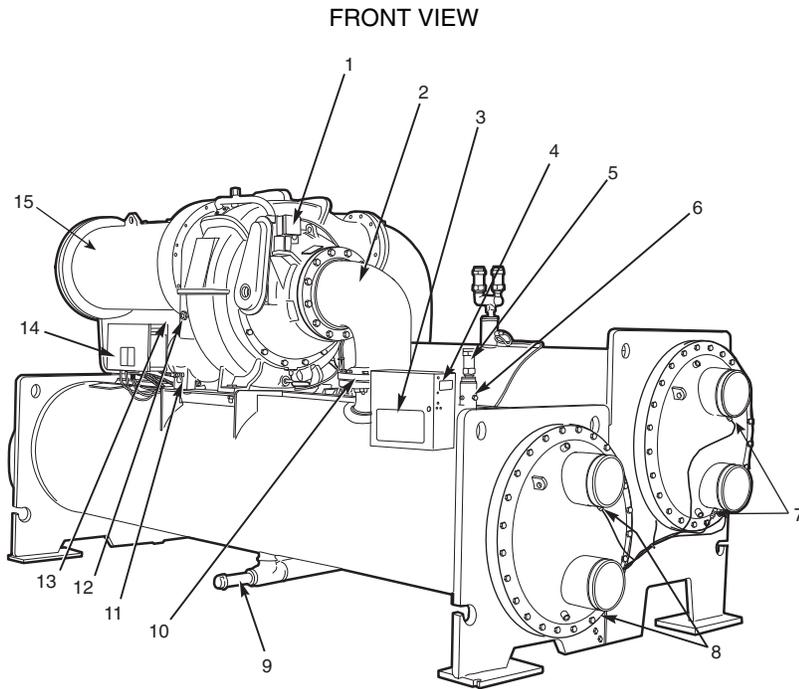

- LEGEND**
- 1 — Guide Vane Actuator
 - 2 — Suction Elbow
 - 3 — International Chiller Visual Control (ICVC)
 - 4 — Chiller Identification Nameplate
 - 5 — Cooler Auto Reset Relief Valves
 - 6 — Cooler Pressure Transducer
 - 7 — Condenser In/Out Temperature Thermistors
 - 8 — Cooler In/Out Temperature Thermistors
 - 9 — Refrigerant Storage Tank Connection Valve
 - 10 — Typical Flange Connection
 - 11 — Oil Drain Valve
 - 12 — Oil Level Sight Glasses
 - 13 — Refrigerant Oil Cooler (Hidden)
 - 14 — Auxiliary Power Panel
 - 15 — Motor Housing

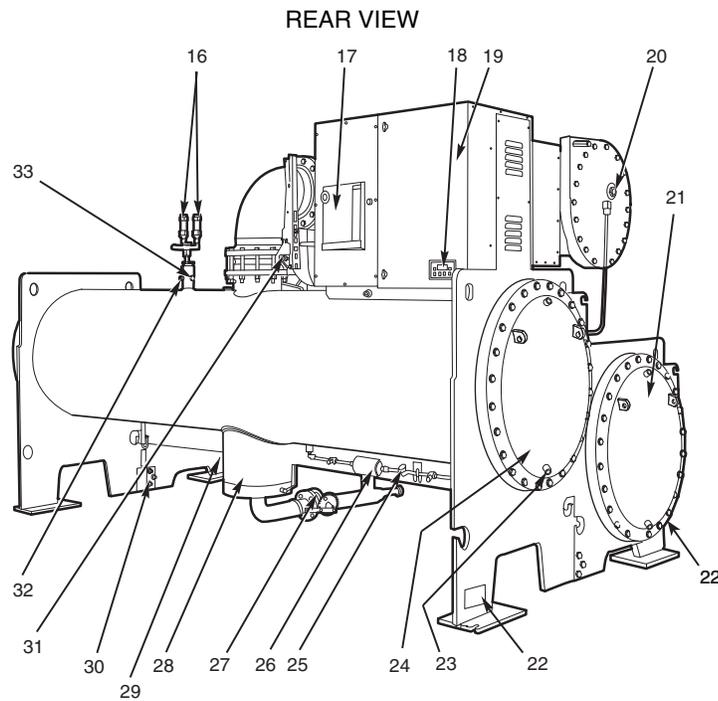

- LEGEND**
- 16 — Condenser Auto. Reset Relief Valves
 - 17 — Motor Circuit Breaker
 - 18 — Solid-State Starter Control Display
 - 19 — Unit-Mounted Starter or VFD (Optional)
Solid-State Starter Shown
 - 20 — Motor Sight Glass
 - 21 — Cooler Return-End Waterbox Cover
 - 22 — ASME Nameplate (One Hidden)
 - 23 — Typical Waterbox Drain Port
 - 24 — Condenser Return-End Waterbox Cover
 - 25 — Refrigerant Moisture/Flow Indicator
 - 26 — Refrigerant Filter/Drier
 - 27 — Liquid Line Isolation Valve (Optional)
 - 28 — Liquid Float Valve Chamber
 - 29 — Refrigerant Charging Valve (Hidden)
 - 30 — Vessel Take-Apart Connector
 - 31 — Discharge Isolation Valve (Optional)
 - 32 — Condenser Pressure Transducer
 - 33 — Refrigerant Charging Valve/Pumpout
Connection

Fig. 3 — Typical 19XR Single-Stage Compressor Components

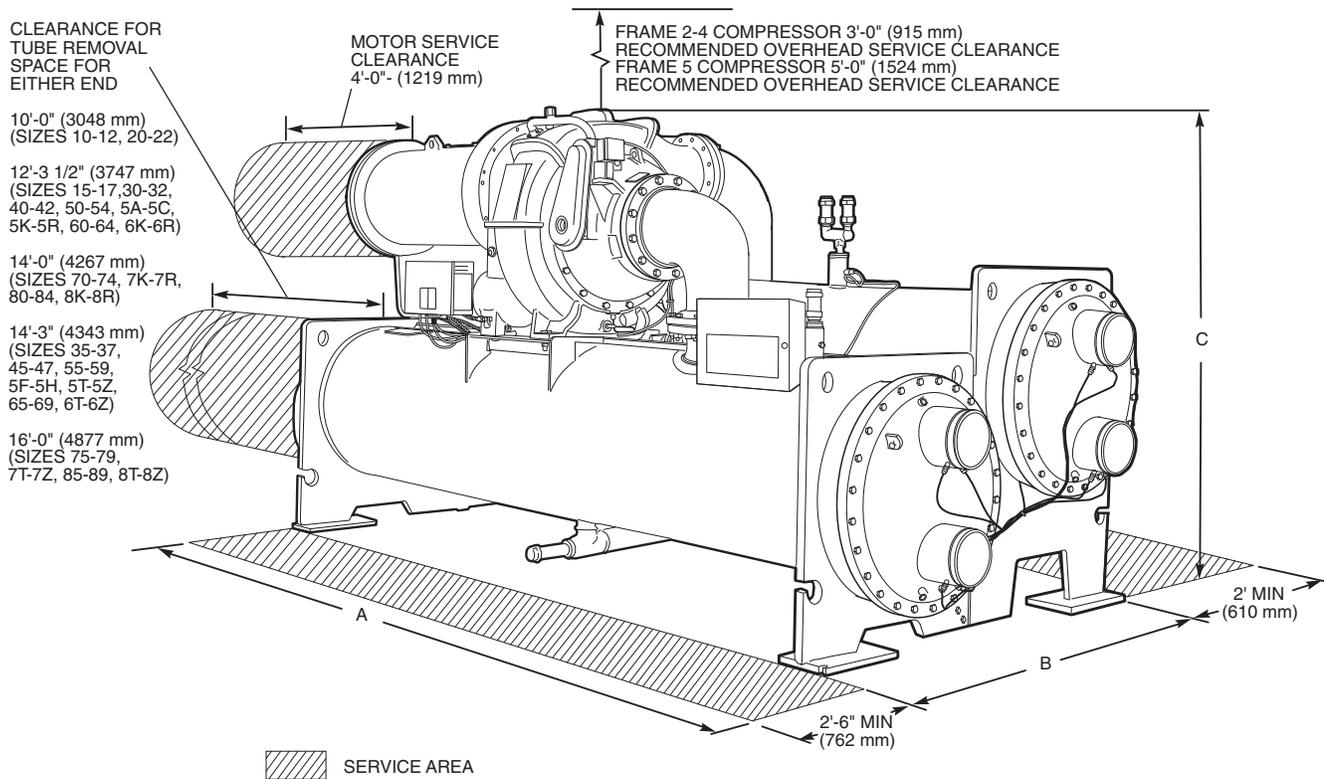


Fig. 4 — 19XR Dimensions (Refer to Tables 1 Through 3)

Table 1 — 19XR Dimensions (Nozzle-In-Head Waterbox)

| HEAT EXCHANGER SIZE | A (LENGTH, WITH NOZZLE-IN-HEAD WATERBOX) | | | | | | 19XR B (WIDTH) | | 19XR C (HEIGHT) | | 19XR B (WIDTH) | | 19XR C (HEIGHT) | |
|-----------------------|--|------|-----------------------------------|------|------------------------------------|------|-----------------------------------|------|-----------------------------------|------|------------------------------------|------|-----------------|----|
| | 1-PASS | | 2-PASS* | | 3-PASS | | FT-IN. | MM | FT-IN. | MM | FT-IN. | MM | FT-IN. | MM |
| | FT-IN. | MM | FT-IN. | MM | FT-IN. | MM | | | | | | | | |
| 10 TO 12 | 11-11 | 3632 | 11-4 | 3464 | 11-11 | 3632 | 5- 2 ⁷ / ₈ | 1597 | 6- 1 ¹ / ₄ | 1861 | 5-2 ⁷ / ₈ | 1597 | | |
| 15 TO 17 | 14- 2 ¹ / ₂ | 4331 | 13- 7 ¹ / ₂ | 4163 | 14- 2 ¹ / ₂ | 4331 | 5- 2 ⁷ / ₈ | 1597 | 6- 1 ¹ / ₄ | 1861 | 5-2 ⁷ / ₈ | 1597 | | |
| 20 TO 22 | 12- 0 ¹ / ₂ | 3670 | 11- 5 ¹ / ₈ | 3483 | 12- 0 ¹ / ₂ | 3670 | 5- 6 ⁷ / ₁₆ | 1688 | 6- 3 ¹ / ₄ | 1911 | 5-6 ⁷ / ₁₆ | 1688 | | |
| 30 TO 32† | 14- 4 | 4369 | 13- 8 ⁵ / ₈ | 4182 | 14- 4 | 4369 | 5- 7 ³ / ₁₆ | 1707 | 6- 9 ⁵ / ₈ | 2073 | 5-6 ⁷ / ₁₆ | 1688 | | |
| 30 TO 32** | 14- 4 | 4369 | 13- 8 ⁵ / ₈ | 4182 | 14- 4 | 4369 | 5- 7 ³ / ₁₆ | 1707 | 6- 9 ⁵ / ₈ | 2073 | 5-6 ¹ / ₈ | 1680 | | |
| 35 TO 37† | 16- 0 ¹ / ₂ | 4889 | 15- 5 ¹ / ₈ | 4703 | 16- 0 ¹ / ₂ | 4889 | 5- 7 ³ / ₁₆ | 1707 | 6- 9 ⁵ / ₈ | 2073 | 5-6 ⁷ / ₁₆ | 1688 | | |
| 35 TO 37** | 16- 0 ¹ / ₂ | 4889 | 15- 5 ¹ / ₈ | 4703 | 16- 0 ¹ / ₂ | 4889 | 5- 7 ³ / ₁₆ | 1707 | 6- 9 ⁵ / ₈ | 2073 | 5-6 ¹ / ₈ | 1680 | | |
| 40 TO 42 | 14- 10 | 4521 | 14- 3 ⁵ / ₈ | 4360 | 14- 6 ³ / ₄ | 4439 | 6- 3 ¹ / ₈ | 1908 | 7- 0 ³ / ₄ | 2153 | 6- 2 | 1880 | | |
| 45 TO 47 | 16- 6 ¹ / ₂ | 5042 | 16- 0 ¹ / ₈ | 4880 | 16- 3 ¹ / ₄ | 4959 | 6- 3 ¹ / ₈ | 1908 | 7- 0 ³ / ₄ | 2153 | 6- 2 | 1880 | | |
| 50 TO 52** | 14-11 | 4546 | 14- 5 | 4395 | 14- 7 ¹ / ₄ | 4451 | 6- 8 ⁷ / ₈ | 2054 | 7- 2 ³ / ₈ | 2194 | 6- 6 ¹ / ₂ | 1994 | | |
| 50 TO 54, 5K TO 5R†† | 14-11 | 4546 | 14- 5 | 4395 | 14- 7 ¹ / ₄ | 4451 | 6- 8 ⁷ / ₈ | 2054 | 7- 2 ³ / ₈ | 2194 | 6- 7 ⁷ / ₈ | 2029 | See Note 7 | |
| 5A TO 5C | 14-11 | 4546 | 14- 5 | 4395 | 14- 7 ¹ / ₄ | 4451 | 6- 8 ⁷ / ₈ | 2054 | 7- 2 ³ / ₈ | 2194 | 6- 8 ⁷ / ₈ | 2054 | | |
| 55 TO 57** | 16- 7 ¹ / ₂ | 5067 | 16- 1 ¹ / ₂ | 4915 | 16- 3 ³ / ₄ | 4972 | 6- 8 ⁷ / ₈ | 2054 | 7- 2 ³ / ₈ | 2194 | 6- 6 ¹ / ₂ | 1994 | | |
| 55 TO 59, 5T TO 5Z†† | 16- 7 ¹ / ₂ | 5067 | 16- 1 ¹ / ₂ | 4915 | 16- 3 ³ / ₄ | 4972 | 6- 8 ⁷ / ₈ | 2054 | 7- 2 ³ / ₈ | 2194 | 6- 7 ⁷ / ₈ | 2029 | | |
| 5F TO 5H | 16- 7 ¹ / ₂ | 5067 | 16- 1 ¹ / ₂ | 4915 | 16- 3 ³ / ₄ | 4972 | 6- 8 ⁷ / ₈ | 2054 | 7- 2 ³ / ₈ | 2194 | 6- 8 ⁷ / ₈ | 2054 | | |
| 60 TO 64, 6K TO 6R | 15- 0 | 4572 | 14- 5 ³ / ₄ | 4413 | 14- 7 ³ / ₄ | 4464 | 6- 0 ⁵ / ₈ | 2124 | 7- 4 ³ / ₈ | 2245 | 6- 10 ⁵ / ₈ | 2124 | | |
| 65 TO 69, 6T TO 6Z | 16- 8 ¹ / ₂ | 5093 | 16- 2 ¹ / ₄ | 4934 | 16- 4 ¹ / ₄ | 4985 | 6- 0 ⁵ / ₈ | 2124 | 7- 4 ³ / ₈ | 2245 | 6- 10 ⁵ / ₈ | 2124 | | |
| 70 TO 74, 7K TO 7R†† | 17- 1 ¹ / ₂ | 5219 | 16-11 ¹ / ₂ | 5169 | 16-10 | 5131 | 7-11 ¹ / ₂ | 2426 | 9- 9 ¹ / ₂ | 2972 | 9- 1 ³ / ₈ | 2778 | | |
| 70 TO 74, 7K TO 7R*** | 17- 1 ¹ / ₂ | 5219 | 16-11 ¹ / ₂ | 5169 | 16-10 | 5131 | 7-11 ¹ / ₂ | 2426 | 9- 9 ¹ / ₂ | 2972 | 9- 3 ⁵ / ₈ | 2835 | | |
| 75 TO 79, 7T TO 7Z | 19- 1 ¹ / ₂ | 5829 | 18-11 ¹ / ₂ | 5779 | 18-10 | 5740 | 7-11 ¹ / ₂ | 2426 | 9- 9 ¹ / ₂ | 2972 | 9- 3 ⁵ / ₈ | 2835 | | |
| 80 TO 84, 8K TO 8R | 17- 4 ¹ / ₂ | 5296 | 17- 1 | 5207 | 16- 10 ¹ / ₂ | 5143 | 8-10 ³ / ₄ | 2711 | 9- 11 ¹ / ₄ | 3029 | 10- 0 ⁹ / ₁₆ | 3063 | | |
| 85 TO 89, 8T TO 8Z | 19- 4 ¹ / ₂ | 5905 | 19- 1 | 5817 | 18- 10 ¹ / ₂ | 5753 | 8-10 ³ / ₄ | 2711 | 9- 11 ¹ / ₄ | 3029 | 10- 0 ⁹ / ₁₆ | 3063 | | |

*Assumes both cooler and condenser nozzles on same end of chiller.

†Compressor frame size 2.

**Compressor frame size 3.

††Compressor frame size 4.

***Compressor frame size 5.

TABLE 1 NOTES:

1. Service access should be provided per American Society of Heating, Refrigerating, and Air-Conditioning Engineers (ASHRAE) 15, latest edition, National Fire Protection Association (NFPA) 70, and local safety code.
2. Allow at least 3 ft (915 mm) overhead clearance for service rigging for frame 2-4 compressor. Overhead clearance for service rigging frame 5 compressor should be 5 ft (1524 mm).

3. Dimensions are approximate. Certified drawings available upon request.

4. Marine waterboxes may add 6 in. to the width of the machine. See certified drawings for details.

5. 'A' length dimensions shown are for standard 150 psig design and Victaulic connections. The 300 psig design and/or flanges will add length. See certified drawings.

6. Not all waterbox/pass combinations are available with unit-mounted VFD. Check selection program and Drawing Manager for availability.

7. 19XRV heights can vary depending on the configuration. Check 19XRV certified drawings for height information.

Table 2 — 19XR Nozzle Size

| FRAME SIZE | NOZZLE SIZE (IN.) (NOMINAL PIPE SIZE) | | | | | |
|------------|--|--------|--------|-----------|--------|--------|
| | COOLER | | | CONDENSER | | |
| | 1-PASS | 2-PASS | 3-PASS | 1-PASS | 2-PASS | 3-PASS |
| 1 | 8 | 6 | 6 | 8 | 6 | 6 |
| 2 | 10 | 8 | 6 | 10 | 8 | 6 |
| 3 | 10 | 8 | 6 | 10 | 8 | 6 |
| 4 | 10 | 8 | 6 | 10 | 8 | 6 |
| 5 | 10 | 8 | 6 | 10 | 10 | 8 |
| 6 | 10 | 10 | 8 | 10 | 10 | 8 |
| 7 | 14 | 12 | 10 | 14 | 12 | 12 |
| 8 | 14 | 14 | 12 | 14 | 14 | 12 |

Table 3 — 19XR Dimensions (Marine Waterbox)

| HEAT EXCHANGER SIZE | A (LENGTH, MARINE WATERBOX) | | | | 19XR B WIDTH | | 19XR V B WIDTH | | 19XR, XRV C HEIGHT |
|---------------------|-----------------------------|------|--------------|------|--------------|------|----------------|------|--------------------|
| | 2-PASS* | | 1 OR 3-PASS† | | FT-IN. | MM | FT-IN. | MM | |
| | FT-IN. | MM | FT-IN. | MM | | | | | |
| 10 TO 12 | NA | NA | NA | NA | NA | NA | NA | NA | See Note 6 |
| 15 TO 17 | NA | NA | NA | NA | NA | NA | NA | NA | |
| 20 TO 22 | 12- 5½ | 3797 | 14- 1¼ | 4299 | 6- 1¹⁄₁₆ | 1856 | 6- 1¹⁄₁₆ | 1856 | |
| 30 TO 32 | 14- 9 | 4496 | 16- 4¾ | 4997 | 6- 1¹⁄₁₆ | 1856 | 6- 1¹⁄₁₆ | 1856 | |
| 35 TO 37 | 16- 5½ | 5017 | 18- 1¼ | 5518 | 6- 1¹⁄₁₆ | 1856 | 6- 1¹⁄₁₆ | 1856 | |
| 40 TO 42 | 15- 2¾ | 4642 | 16- 8¼ | 5086 | 6- 3¼ | 1911 | 6- 3¼ | 1911 | |
| 45 TO 47 | 16-11¼ | 5163 | 18- 4¾ | 5607 | 6- 3¼ | 1911 | 6- 3¼ | 1911 | |
| 50 TO 54, 5K TO 5R | 15- 3½ | 4661 | 16- 8½ | 5093 | 6- 8⁷⁄₈ | 2054 | 6- 8⁷⁄₈ | 2054 | |
| 5A TO 5C | 15- 3½ | 4661 | 16- 8½ | 5093 | 6- 8⁷⁄₈ | 2054 | 6- 8⁷⁄₈ | 2054 | |
| 55 TO 59, 5T TO 5Z | 17- 0 | 5182 | 18- 5 | 5613 | 6- 8⁷⁄₈ | 2054 | 6- 8⁷⁄₈ | 2054 | |
| 5F TO 5H | 17- 0 | 5182 | 18- 5 | 5613 | 6- 8⁷⁄₈ | 2054 | 6- 8⁷⁄₈ | 2054 | |
| 60 TO 64, 6K TO 6R | 15- 4¹⁄₈ | 4677 | 16- 8¾ | 5099 | 6-11¾ | 2127 | 6- 11¾ | 2127 | |
| 65 TO 69, 6T TO 6Z | 17- 0⁵⁄₈ | 5197 | 18- 5¼ | 5620 | 6-11¾ | 2127 | 6- 11¾ | 2127 | |
| 70 TO 74, 7K TO 7R | 18- 3⁵⁄₈ | 5579 | 19- 9¾ | 6039 | 8- 8¹⁄₈ | 2645 | 9- 6³⁄₈ | 2905 | |
| 75 TO 79, 7T TO 7Z | 20- 3⁵⁄₈ | 6188 | 21- 9¾ | 6649 | 8- 8¹⁄₈ | 2645 | 9- 6³⁄₈ | 2905 | |
| 80 TO 84, 8K TO 8R | 18- 4 | 5583 | 19-10½ | 6058 | 9- 5⁵⁄₈ | 2886 | 10- 5 | 3175 | |
| 85 TO 87, 8T TO 8Z | 20- 4 | 6198 | 21-10½ | 6668 | 9- 5⁵⁄₈ | 2886 | 10- 5 | 3175 | |

*Assumes both cooler and condenser nozzles on same end of chiller.

†1 or 3-pass length applies if cooler is a 1 or 3-pass design.

NOTES:

1. Service access should be provided per American Society of Heating, Refrigerating, and Air-Conditioning Engineers (ASHRAE) 15, latest edition, National Fire Protection Association (NFPA) 70, and local safety code.
2. Allow at least 3 ft (915 mm) overhead clearance for service rigging for frame 2-4 compressor. Overhead clearance for service rigging frame 5 compressor should be 5 ft (1524 mm).

3. Dimensions are approximate. Certified drawings available upon request.


4. Marine waterboxes may add 6 in., to the width of the machine. See certified drawings for details.

5. 'A' length dimensions shown are for standard 150 psig design and Victaulic connections. The 300 psig design and/or flanges will add length. See certified drawings.

6. 19XR, XRV height can vary depending on the configuration. Check 19XR, XRV certified drawings for height information.

7. Not all waterbox/pass combinations are available with unit-mounted VFD (variable frequency drive). Check selection program for availability.

| COMP FRAME SIZE | HEAT EXCH SIZE | MAXIMUM MACHINE WEIGHT | | | | VESSEL LENGTH | | DIM. "A" | | DIM. "B" | | DIM. "C" | | CHAIN LENGTH | | | | | |
|-----------------------|----------------------|--|-------|-------------------|-------|------------------|------|------------|------|------------|------|------------|------|--------------|------|------------|------|------------|------|
| | | FREE- STANDING UNIT- MOUNTED STARTER | | 700L 575-V VFD | | | | | | | | | | "D" | | "E" | | "F" | |
| | | LB | KG | LB | KG | FT | MM | FT- IN. | MM | FT- IN. | MM | FT- IN. | MM | FT- IN. | MM | FT- IN. | MM | FT- IN. | MM |
| 2 | 10-12 | 18,590 | 8432 | — | — | 10 | 3048 | 4-7 | 1397 | 2-6 | 762 | 2-3 | 686 | 12-7 | 3835 | 13-0 | 3962 | 13-0 | 3962 |
| | 15-17 | 19,140 | 8682 | — | — | 12 | 3658 | 5-9 | 1753 | 2-6 | 762 | 2-3 | 686 | 13-6 | 4115 | 13-2 | 4013 | 13-3 | 4039 |
| | 20-22 | 19,610 | 8895 | 22,910 | 10392 | 10 | 3048 | 4-7 | 1397 | 2-4 | 711 | 3-1 | 940 | 12-7 | 3835 | 13-0 | 3962 | 13-0 | 3962 |
| | 30-32 | 21,210 | 9620 | 24,510 | 11118 | 12 | 3658 | 5-9 | 1753 | 2-6 | 762 | 3-6 | 1067 | 13-6 | 4115 | 13-2 | 4013 | 13-3 | 4039 |
| | 35-37 | 22,720 | 10306 | 26,020 | 11802 | 14 | 4267 | 7-4 | 2235 | 2-6 | 762 | 3-6 | 1067 | 14-2 | 4318 | 13-4 | 4064 | 13-4 | 4064 |
| 3 | 30-32 | 21,210 | 9620 | 24,510 | 11118 | 12 | 3658 | 5-9 | 1753 | 2-6 | 762 | 3-6 | 1067 | 13-6 | 4115 | 13-2 | 4013 | 13-3 | 4039 |
| | 35-37 | 22,720 | 10306 | 26,020 | 11802 | 14 | 4267 | 7-4 | 2235 | 2-6 | 762 | 3-6 | 1067 | 14-2 | 4318 | 13-4 | 4064 | 13-4 | 4064 |
| | 40-42 | 29,930 | 13576 | 33,230 | 15073 | 12 | 3658 | 5-9 | 1753 | 2-7 | 787 | 3-2 | 965 | 12-8 | 3861 | 12-8 | 3861 | 13-4 | 4064 |
| | 45-47 | 32,040 | 14533 | 35,340 | 16030 | 14 | 4267 | 6-10 | 2083 | 2-7 | 787 | 3-2 | 965 | 13-1 | 3988 | 13-2 | 4013 | 13-8 | 4166 |
| | 50-54 | 31,603 | 14335 | 34,103 | 15481 | 12 | 3658 | 5-9 | 1753 | 2-7 | 787 | 3-2 | 965 | 12-7 | 3835 | 12-9 | 3886 | 13-5 | 4089 |
| | 5K-5R | 31,603 | 14355 | 34,103 | 15481 | 12 | 3658 | 5-9 | 1753 | 2-7 | 787 | 3-2 | 965 | 12-7 | 3835 | 12-9 | 3886 | 13-5 | 4089 |
| | 55-59 | 33,631 | 15255 | 36,131 | 16389 | 14 | 4267 | 6-10 | 2083 | 2-7 | 787 | 3-2 | 965 | 13-1 | 3988 | 13-3 | 4039 | 13-9 | 4191 |
| | 5T-5Z | 33,631 | 15255 | 36,131 | 16389 | 14 | 4267 | 6-10 | 2083 | 2-7 | 787 | 3-2 | 965 | 13-1 | 3988 | 13-3 | 4039 | 13-9 | 4191 |
| | 20-54 | 32,933 | 14938 | 36,233 | 16435 | 12 | 3658 | 5-9 | 1753 | 2-8 | 813 | 3-4 | 1016 | 13-1 | 3988 | 12-9 | 3886 | 13-4 | 4064 |
| | 5K-5R | 32,933 | 14938 | 36,233 | 16435 | 12 | 3658 | 5-9 | 1753 | 2-8 | 813 | 3-4 | 1016 | 13-1 | 3988 | 12-9 | 3886 | 13-4 | 4064 |
| 4 | 55-59 | 34,661 | 15722 | 37,961 | 17219 | 14 | 4267 | 6-2 | 1880 | 2-8 | 813 | 3-4 | 1016 | 13-7 | 4140 | 13-1 | 3998 | 14-4 | 4369 |
| | 5T-5Z | 34,661 | 15722 | 37,961 | 17219 | 14 | 4267 | 6-2 | 1880 | 2-8 | 813 | 3-4 | 1016 | 13-7 | 4140 | 13-1 | 3998 | 14-4 | 4369 |
| | 60-64 | 35,433 | 16072 | — | — | 12 | 3658 | 5-9 | 1753 | 2-8 | 813 | 3-4 | 1016 | 13-1 | 2988 | 12-9 | 3886 | 13-4 | 4064 |
| | 6K-6R | 35,433 | 16072 | — | — | 12 | 3658 | 5-9 | 1753 | 2-8 | 813 | 3-4 | 1016 | 13-1 | 3988 | 12-9 | 3886 | 13-4 | 4064 |
| | 65-69 | 37,536 | 17026 | — | — | 14 | 4267 | 6-2 | 1880 | 2-8 | 813 | 3-4 | 1016 | 13-7 | 4140 | 13-1 | 3998 | 14-4 | 4369 |
| | 6T-6Z | 37,536 | 17026 | — | — | 14 | 4267 | 6-2 | 1880 | 2-8 | 813 | 3-4 | 1016 | 13-7 | 4140 | 13-1 | 3998 | 14-4 | 4369 |
| | 70-74 | 40929 | 18565 | — | — | 14 | 4267 | 6-6 | 1981 | 3-5 | 1041 | 4-4 | 1321 | 11-6 | 3505 | 12-5 | 3785 | 12-9 | 3886 |
| | 7K-7R | 40929 | 18565 | — | — | 14 | 4267 | 6-6 | 1981 | 3-5 | 1041 | 4-4 | 1321 | 11-6 | 3505 | 12-5 | 3785 | 12-9 | 3886 |

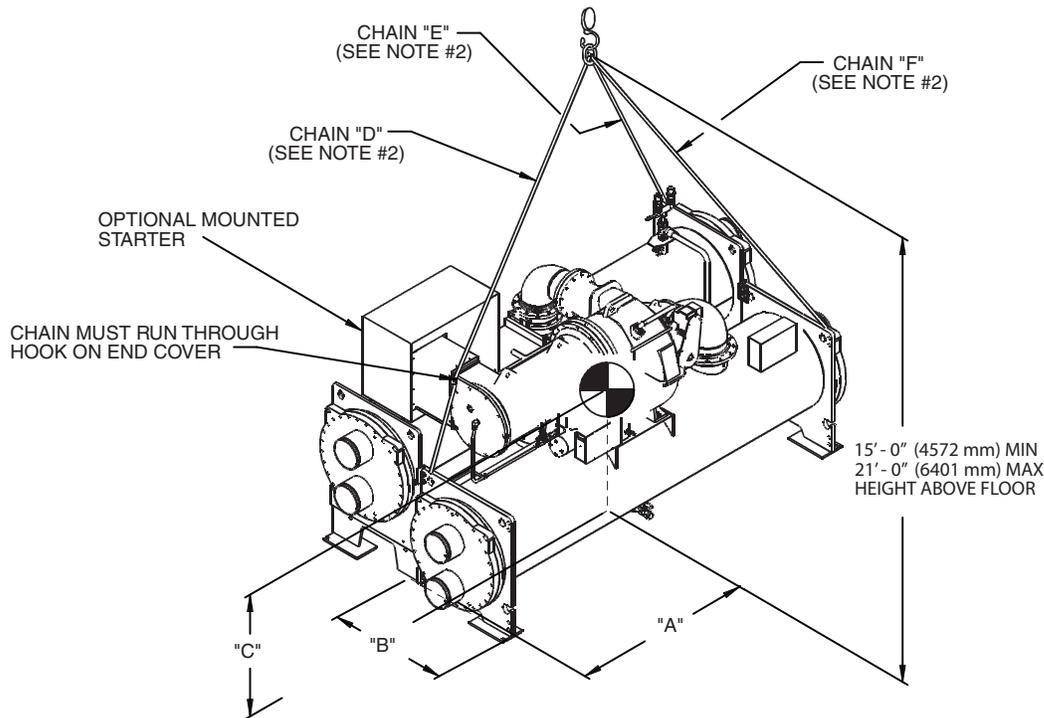


MACHINE RIGGING GUIDE

NOTES:

1. Each chain must be capable of supporting the entire weight of the machine. See table for maximum weights.
2. Chain lengths shown are typical for 15' (4572 mm) lifting height. Some minor adjustments may be required.
3. Dimensions "A" and "B" define distance from machine center of gravity to tube sheet outermost surfaces. Dimension "C" defines distance from machine center of gravity to floor.
4. Ensure that rigging cable is over the cable hook on the motor end cover before lifting.

Fig. 5 — Machine Rigging Guide (Heat Exchanger Size 10 Through 7R) with Free-Standing or Unit-Mounted Starter, or 575-v VFD

| COMP FRAME SIZE | HEAT EXCH SIZE | MAXIMUM MACHINE WEIGHT | | VESSEL LENGTH | | DIM. "A" | | DIM. "B" | | DIM. "C" | | CHAIN LENGTH | | | | | |
|-----------------------|----------------------|------------------------------|-------|------------------|------|----------|------|----------|------|----------|------|--------------|------|--------|------|--------|------|
| | | lb | kg | ft | mm | ft-in. | mm | ft-in. | mm | ft-in. | mm | "D" | | "E" | | "F" | |
| | | | | | | | | | | | | ft-in. | mm | ft-in. | mm | ft-in. | mm |
| 5 | 70-74 | 46,119 | 20919 | 14 | 4267 | 6- 2 | 1880 | 3-6 | 1067 | 4-7 | 1397 | 11- 6 | 3505 | 12-5 | 3785 | 12-9 | 3886 |
| | 7K-7R | 46,119 | 20919 | 14 | 4267 | 6- 2 | 1880 | 3-6 | 1067 | 4-7 | 1397 | 11- 6 | 3505 | 12-5 | 3785 | 12-9 | 3886 |
| | 75-79 | 49,977 | 22669 | 16 | 4877 | 6-11 | 2108 | 3-6 | 1067 | 4-7 | 1397 | 11-11 | 3632 | 13-3 | 4039 | 13-7 | 4140 |
| | 7T-7Z | 49,977 | 22669 | 16 | 4877 | 6-11 | 2108 | 3-6 | 1067 | 4-7 | 1397 | 11-11 | 3632 | 13-3 | 4039 | 13-7 | 4140 |
| | 80-84 | 55,981 | 25393 | 14 | 4267 | 6- 2 | 1880 | 3-6 | 1067 | 4-7 | 1397 | 11- 6 | 3505 | 12-5 | 3785 | 12-9 | 3886 |
| | 8K-8R | 55,981 | 25393 | 14 | 4267 | 6- 2 | 1880 | 3-6 | 1067 | 4-7 | 1397 | 11- 6 | 3505 | 12-5 | 3785 | 12-9 | 3886 |
| | 85-89 | 59,564 | 27018 | 16 | 4877 | 6-11 | 2108 | 3-6 | 1067 | 4-7 | 1397 | 11-11 | 3632 | 13-3 | 4039 | 13-7 | 4140 |
| | 8T-8Z | 59,564 | 27018 | 16 | 4877 | 6-11 | 2108 | 3-6 | 1067 | 4-7 | 1397 | 11-11 | 3632 | 13-3 | 4039 | 13-7 | 4140 |

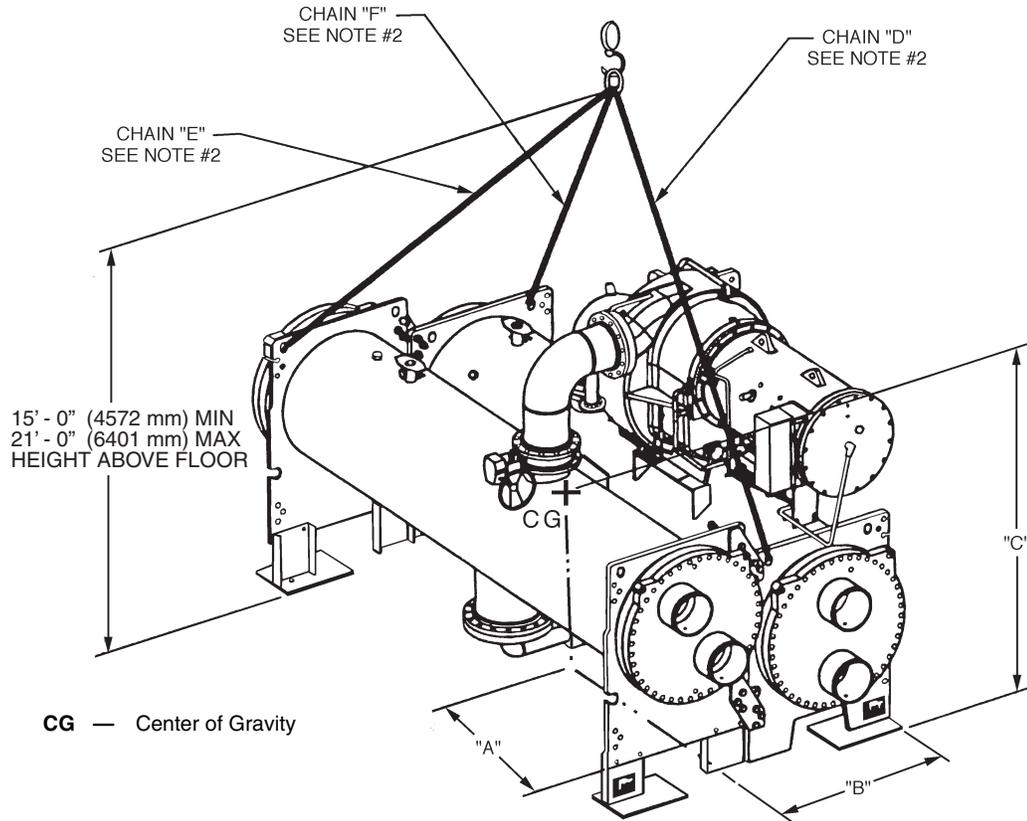

MACHINE RIGGING GUIDE

NOTES:

1. Each chain must be capable of supporting the entire weight of the machine. See chart for maximum weights.
2. Chain lengths shown are typical for 15' (4572 mm) lifting height. Some minor adjustments may be required.
3. Dimensions "A" and "B" define distance from machine center of gravity "C" defines distance from machine center of gravity to floor.

Fig. 6 — Machine Rigging Guide (Heat Exchanger Size 70 Through 8Z) with Free-Standing or Unit-Mounted Starter

Table 4 — 19XR Component Weights

| COMPONENT | FRAME 2 COMPRESSOR* | | FRAME 3 COMPRESSOR* | | FRAME 4 COMPRESSOR* | | FRAME 5 COMPRESSOR* | |
|---|---------------------|-----|---------------------|-----|---------------------|------|---------------------|------|
| | LB | KG | LB | KG | LB | KG | LB | KG |
| SUCTION ELBOW | 116 | 53 | 185 | 84 | 239 | 108 | 407 | 185 |
| DISCHARGE ELBOW | 100 | 45 | 125 | 57 | 157 | 71 | 325 | 147 |
| CONTROL PANEL† | 34 | 15 | 34 | 15 | 34 | 15 | 34 | 15 |
| OPTIONAL COOLER INLET ISOLATION VALVE | 8 | 4 | 13 | 6 | 20 | 9 | 24 | 11 |
| OPTIONAL DISCHARGE ISOLATION VALVE | 26 | 12 | 46 | 21 | 74 | 34 | 108 | 49 |
| STD TIER VFD — 380, 400, AND 460-V (230, 335, 445 A) | 650 | 295 | 650 | 295 | — | — | — | — |
| STD TIER VFD — 380, 400, AND 460-V (485, 550 A) | — | — | 1035 | 469 | 1035 | 469 | — | — |
| STD TIER VFD — 380, 400, AND 460-V (605, 680 A) | — | — | 1600 | 726 | 1600 | 726 | — | — |
| STD TIER VFD — 380, 400, AND 460-V (765 A) | — | — | — | — | 1600 | 726 | — | — |
| STD TIER VFD — 380, 400, AND 460-V (855, 960, 1070 A) | — | — | — | — | 1600 | 726 | 1600 | 726 |
| STD TIER VFD — 380, 400, AND 460-V (1275 A) | — | — | — | — | 3000 | 1361 | 3000 | 1361 |
| STD TIER VFD — 380, 400, AND 460-V (1530 A) | — | — | — | — | — | — | 3000 | 1361 |
| LIQUIFLO™ 2 VFD — 380, 400, AND 460-V (442 A) | 1600 | 726 | 1600 | 726 | — | — | — | — |
| LIQUIFLO 2 VFD — 380, 400, AND 460-V (608 A) | — | — | 1600 | 726 | 1600 | 726 | — | — |
| LIQUIFLO 2 VFD — 380, 400, AND 460-V (900 A) | — | — | — | — | 2800 | 1270 | 2800 | 1270 |
| LIQUIFLO 2 VFD — 380, 400, AND 460-V (1200 A) | — | — | — | — | 2850 | 1293 | 2850 | 1293 |
| LIQUIFLO 2 VFD — 575-V (390 A) | 2200 | 998 | 2200 | 998 | — | — | — | — |
| VFD SHELF | — | — | — | — | 1049 | 476 | 1049 | 476 |

*To determine compressor frame size, refer to 19XR, XRV Computer Selection Program.

†Included in total cooler weight.

NOTE: VFD sizes are available on select heat exchanger models; consult the 19XR, XRV Computer Selection program.

Table 5A — 19XR Compressor and Motor Weights* — Compressor Frame Size 2†

| MOTOR CODE | ENGLISH | | | | | | SI | | | | | |
|---|--------------------------|----------------------|-------------------|----------------------|-------------------|----------------------------|--------------------------|----------------------|-------------------|----------------------|-------------------|----------------------------|
| | COMPRESSOR WEIGHT** (LB) | 60 HZ | | 50 HZ | | END BELL COVER WEIGHT (LB) | COMPRESSOR WEIGHT** (KG) | 60 HZ | | 50 HZ | | END BELL COVER WEIGHT (KG) |
| | | STATOR WEIGHT†† (LB) | ROTOR WEIGHT (LB) | STATOR WEIGHT†† (LB) | ROTOR WEIGHT (LB) | | | STATOR WEIGHT†† (KG) | ROTOR WEIGHT (KG) | STATOR WEIGHT†† (KG) | ROTOR WEIGHT (KG) | |
| STANDARD-EFFICIENCY MOTORS / LOW VOLTAGE (200-575 V) | | | | | | | | | | | | |
| BDS | 2300 | 900 | 190 | 915 | 205 | 185 | 1043 | 408 | 86 | 415 | 93 | 84 |
| BES | 2300 | 915 | 200 | 965 | 220 | 185 | 1043 | 415 | 91 | 438 | 100 | 84 |
| BFS | 2300 | 975 | 215 | 1000 | 230 | 185 | 1043 | 442 | 98 | 454 | 104 | 84 |
| BGS | 2300 | 1000 | 230 | 1060 | 250 | 185 | 1043 | 454 | 104 | 481 | 113 | 84 |
| BHS | 2300 | 1030 | 240 | 1105 | 265 | 185 | 1043 | 467 | 109 | 501 | 120 | 84 |
| BJS | 2300 | 1105 | 265 | — | — | 185 | 1043 | 501 | 120 | — | — | 84 |
| HIGH-EFFICIENCY MOTORS / LOW VOLTAGE (200-575 V) | | | | | | | | | | | | |
| BDH | 2300 | 1030 | 240 | 1030 | 240 | 185 | 1043 | 467 | 109 | 467 | 109 | 84 |
| BEH | 2300 | 1070 | 250 | 1070 | 250 | 185 | 1043 | 485 | 113 | 485 | 113 | 84 |
| BFH | 2300 | 1120 | 265 | 1120 | 265 | 185 | 1043 | 508 | 120 | 508 | 120 | 84 |
| BGH | 2300 | 1175 | 290 | 1175 | 290 | 185 | 1043 | 533 | 132 | 533 | 132 | 84 |
| BHH | 2300 | 1175 | 290 | 1175 | 290 | 185 | 1043 | 533 | 132 | 533 | 132 | 84 |
| BJH | 2300 | 1175 | 290 | — | — | 185 | 1043 | 533 | 132 | — | — | 84 |
| JBH | 2300 | 1003 | 226 | 1063 | 248 | 185 | 1043 | 455 | 103 | 482 | 112 | 84 |
| JCH | 2300 | 1063 | 248 | 1113 | 263 | 185 | 1043 | 482 | 112 | 505 | 119 | 84 |
| JDH | 2300 | 1113 | 263 | 1149 | 278 | 185 | 1043 | 505 | 119 | 521 | 126 | 84 |
| JEH | 2300 | 1149 | 278 | 1196 | 295 | 185 | 1043 | 521 | 126 | 542 | 134 | 84 |
| JFH | 2300 | 1196 | 295 | — | — | 185 | 1043 | 542 | 134 | — | — | 84 |

*Total compressor weight is the sum of the compressor aerodynamic components (compressor weight column), stator, rotor, and end bell cover weights.

†See Model Number Nomenclature in Fig. 2.

**Compressor aerodynamic component weight only, motor weight not included. Applicable to standard compressors only. For high lift compressors, contact Carrier Chiller Marketing for weights.

††Stator weight includes the stator and shell.

Table 5B — 19XR Compressor and Motor Weights* — Compressor Frame Size 3†

| MOTOR CODE | ENGLISH | | | | | | SI | | | | | |
|---|--------------------------|----------------------|-------------------|----------------------|-------------------|----------------------------|--------------------------|----------------------|-------------------|----------------------|-------------------|----------------------------|
| | COMPRESSOR WEIGHT** (LB) | 60 HZ | | 50 HZ | | END BELL COVER WEIGHT (LB) | COMPRESSOR WEIGHT** (KG) | 60 HZ | | 50 HZ | | END BELL COVER WEIGHT (KG) |
| | | STATOR WEIGHT†† (LB) | ROTOR WEIGHT (LB) | STATOR WEIGHT†† (LB) | ROTOR WEIGHT (LB) | | | STATOR WEIGHT†† (KG) | ROTOR WEIGHT (KG) | STATOR WEIGHT†† (KG) | ROTOR WEIGHT (KG) | |
| STANDARD-EFFICIENCY MOTORS / LOW VOLTAGE (200-575 V) | | | | | | | | | | | | |
| CBS | 2816 | 1146 | 219 | 1188 | 236 | 274 | 1277 | 520 | 99 | 539 | 107 | 124 |
| CCS | 2816 | 1171 | 227 | 1196 | 242 | 274 | 1277 | 531 | 103 | 542 | 110 | 124 |
| CDS | 2816 | 1198 | 237 | 1258 | 255 | 274 | 1277 | 543 | 108 | 571 | 116 | 124 |
| CES | 2816 | 1207 | 240 | 1272 | 258 | 274 | 1277 | 547 | 109 | 577 | 117 | 124 |
| CLS | 2816 | 1247 | 249 | 1328 | 273 | 274 | 1277 | 566 | 113 | 602 | 124 | 124 |
| CMS | 2816 | 1270 | 257 | 1353 | 278 | 274 | 1277 | 576 | 117 | 614 | 126 | 124 |
| CNS | 2816 | 1321 | 266 | 1386 | 282 | 274 | 1277 | 599 | 121 | 629 | 128 | 124 |
| CPS | 2816 | 1334 | 269 | 1401 | 287 | 274 | 1277 | 605 | 122 | 635 | 130 | 124 |
| CQS | 2816 | 1353 | 276 | 1408 | 290 | 274 | 1277 | 614 | 125 | 639 | 132 | 124 |
| CRS | 2816 | 1259 | 321 | — | — | 274 | 1277 | 571 | 146 | — | — | 124 |
| CRS (380V) | 2816 | 1328 | 346 | — | — | 274 | 1277 | 602 | 157 | — | — | 124 |
| HIGH-EFFICIENCY MOTORS / LOW VOLTAGE (200-575 V) | | | | | | | | | | | | |
| CBH | 2816 | 1235 | 239 | 1290 | 254 | 274 | 1277 | 560 | 108 | 585 | 115 | 124 |
| CCH | 2816 | 1260 | 249 | 1295 | 259 | 274 | 1277 | 572 | 113 | 587 | 117 | 124 |
| CDH | 2816 | 1286 | 258 | 1358 | 273 | 274 | 1277 | 583 | 117 | 616 | 124 | 124 |
| CEH | 2816 | 1305 | 265 | 1377 | 279 | 274 | 1277 | 592 | 120 | 625 | 127 | 124 |
| CLH | 2816 | 1324 | 271 | 1435 | 292 | 274 | 1277 | 601 | 123 | 651 | 132 | 124 |
| CMH | 2816 | 1347 | 275 | 1455 | 298 | 274 | 1277 | 611 | 125 | 660 | 135 | 124 |
| CNH | 2816 | 1358 | 278 | 1467 | 301 | 274 | 1277 | 616 | 126 | 665 | 137 | 124 |
| CPH | 2816 | 1401 | 290 | 1479 | 304 | 274 | 1277 | 635 | 132 | 671 | 138 | 124 |
| CQH | 2816 | 1455 | 304 | 1479 | 304 | 274 | 1277 | 670 | 138 | 671 | 138 | 124 |
| KBH | 2816 | 1313 | 276 | 1353 | 285 | 274 | 1277 | 596 | 125 | 614 | 129 | 124 |
| KCH | 2816 | 1353 | 285 | 1381 | 291 | 274 | 1277 | 614 | 129 | 626 | 132 | 124 |
| KDH | 2816 | 1381 | 291 | 1417 | 307 | 274 | 1277 | 626 | 132 | 643 | 139 | 124 |
| KEH | 2816 | 1417 | 307 | 1441 | 313 | 274 | 1277 | 643 | 139 | 654 | 142 | 124 |
| KFH | 2816 | 1441 | 313 | 1470 | 320 | 274 | 1277 | 654 | 142 | 667 | 145 | 124 |
| KGH | 2816 | 1470 | 320 | 1505 | 333 | 274 | 1277 | 667 | 145 | 683 | 151 | 124 |
| KHH | 2816 | 1505 | 333 | — | — | 274 | 1277 | 683 | 151 | — | — | 124 |
| UB | 2816 | 1371 | 316 | 1391 | 330 | 274 | 1277 | 622 | 143 | 631 | 150 | 124 |
| UC | 2816 | 1391 | 330 | 1419 | 344 | 274 | 1277 | 631 | 150 | 644 | 156 | 124 |
| UD | 2816 | 1419 | 344 | 1455 | 372 | 274 | 1277 | 644 | 156 | 660 | 169 | 124 |
| UE | 2816 | 1455 | 372 | 1479 | 386 | 274 | 1277 | 660 | 169 | 671 | 175 | 124 |
| UF | 2816 | 1479 | 386 | 1508 | 400 | 274 | 1277 | 671 | 175 | 684 | 181 | 124 |
| UG | 2816 | 1508 | 400 | 1543 | 421 | 274 | 1277 | 684 | 181 | 700 | 191 | 124 |
| UH | 2816 | 1543 | 421 | — | — | 274 | 1277 | 700 | 191 | — | — | 124 |

*Total compressor weight is the sum of the compressor aerodynamic components (compressor weight column), stator, rotor, and end bell cover weights.

†See Model Number Nomenclature in Fig. 2.

**Compressor aerodynamic component weight only, motor weight not included. Applicable to standard compressors only. For high lift compressors, contact Carrier Chiller Marketing for weights.

††Stator weight includes the stator and shell.

Table 5B — 19XR Compressor and Motor Weights* — Compressor Frame Size 3† (cont)

| MOTOR CODE | ENGLISH | | | | | | SI | | | | | |
|--|--------------------------|-----------------------|-------------------|-----------------------|-------------------|----------------------------|--------------------------|-----------------------|-------------------|-----------------------|-------------------|----------------------------|
| | COMPRESSOR WEIGHT** (LB) | 60 HZ | | 50 HZ | | END BELL COVER WEIGHT (LB) | COMPRESSOR WEIGHT** (KG) | 60 HZ | | 50 HZ | | END BELL COVER WEIGHT (KG) |
| | | STATOR WEIGHT††† (LB) | ROTOR WEIGHT (LB) | STATOR WEIGHT††† (LB) | ROTOR WEIGHT (LB) | | | STATOR WEIGHT††† (KG) | ROTOR WEIGHT (KG) | STATOR WEIGHT††† (KG) | ROTOR WEIGHT (KG) | |
| HIGH-EFFICIENCY MOTORS / MEDIUM VOLTAGE (2400-4160 V) | | | | | | | | | | | | |
| CBH | 2816 | 1114 | 242 | 1156 | 255 | 274 | 1277 | 505 | 110 | 524 | 116 | 124 |
| CCH | 2816 | 1129 | 247 | 1163 | 257 | 274 | 1277 | 512 | 112 | 528 | 117 | 124 |
| CDH | 2816 | 1155 | 253 | 1190 | 263 | 274 | 1277 | 524 | 115 | 540 | 119 | 124 |
| CEH | 2816 | 1175 | 263 | 1236 | 276 | 274 | 1277 | 533 | 119 | 561 | 125 | 124 |
| CLH | 2816 | 1242 | 280 | 1305 | 296 | 274 | 1277 | 563 | 127 | 592 | 134 | 124 |
| CMH | 2816 | 1321 | 303 | 1305 | 296 | 274 | 1277 | 599 | 137 | 592 | 134 | 124 |
| CNH | 2816 | 1369 | 316 | 1386 | 316 | 274 | 1277 | 621 | 143 | 629 | 143 | 124 |
| CPH | 2816 | 1411 | 329 | 1386 | 316 | 274 | 1277 | 640 | 149 | 629 | 143 | 124 |
| CQH | 2816 | 1411 | 329 | 1428 | 329 | 274 | 1277 | 640 | 149 | 648 | 149 | 124 |

*Total compressor weight is the sum of the compressor aerodynamic components (compressor weight column), stator, rotor, and end bell cover weights.

†See Model Number Nomenclature in Fig. 2.

**Compressor aerodynamic component weight only, motor weight not included. Applicable to standard compressors only. For high lift compressors, contact Carrier Chiller Marketing for weights.

††Stator weight includes the stator and shell.

Table 5C — 19XR Compressor and Motor Weights* — Compressor Frame Size 4†

| MOTOR CODE | ENGLISH | | | | | | SI | | | | | |
|--|---|----------------------|-------------------|----------------------|-------------------|----------------------------|--------------------------|----------------------|-------------------|----------------------|-------------------|----------------------------|
| | COMPRESSOR WEIGHT** (LB) FIXED RING/ SPLIT RING | 60 HZ | | 50 HZ | | END BELL COVER WEIGHT (LB) | COMPRESSOR WEIGHT** (KG) | 60 HZ | | 50 HZ | | END BELL COVER WEIGHT (KG) |
| | | STATOR WEIGHT†† (LB) | ROTOR WEIGHT (LB) | STATOR WEIGHT†† (LB) | ROTOR WEIGHT (LB) | | | STATOR WEIGHT†† (KG) | ROTOR WEIGHT (KG) | STATOR WEIGHT†† (KG) | ROTOR WEIGHT (KG) | |
| STANDARD-EFFICIENCY MOTORS / LOW VOLTAGE (200-575 V) | | | | | | | | | | | | |
| DBS | 3425 / 4211 | 1570 | 324 | 1725 | 347 | 236 | 1554 / 1910 | 712 | 147 | 782 | 157 | 107 |
| DCS | 3425 / 4211 | 1580 | 326 | 1737 | 352 | 236 | 1554 / 1910 | 717 | 148 | 788 | 160 | 107 |
| DDS | 3425 / 4211 | 1595 | 329 | 1749 | 357 | 236 | 1554 / 1910 | 723 | 149 | 793 | 162 | 107 |
| DES | 3425 / 4211 | 1685 | 345 | 1762 | 365 | 236 | 1554 / 1910 | 764 | 156 | 799 | 166 | 107 |
| DFS | 3425 / 4211 | 1690 | 348 | 1801 | 372 | 236 | 1554 / 1910 | 767 | 158 | 817 | 169 | 107 |
| DGS | 3425 / 4211 | 1692 | 352 | 1858 | 386 | 236 | 1554 / 1910 | 767 | 160 | 843 | 175 | 107 |
| DHS | 3425 / 4211 | 1774 | 366 | 1904 | 398 | 236 | 1554 / 1910 | 805 | 166 | 864 | 181 | 107 |
| DJS | 3425 / 4211 | — | — | 2020 | 401 | 318 | 1554 / 1910 | — | — | 916 | 182 | 142 |
| STANDARD-EFFICIENCY MOTORS / MEDIUM VOLTAGE (2400-4160 V) | | | | | | | | | | | | |
| DBS | 3425 / 4211 | 1524 | 296 | 1637 | 327 | 236 | 1554 / 1910 | 691 | 134 | 743 | 148 | 107 |
| DCS | 3425 / 4211 | 1569 | 307 | 1685 | 354 | 236 | 1554 / 1910 | 712 | 139 | 764 | 161 | 107 |
| DDS | 3425 / 4211 | 1588 | 313 | 1713 | 357 | 236 | 1554 / 1910 | 720 | 142 | 777 | 162 | 107 |
| DES | 3425 / 4211 | 1613 | 324 | 1746 | 360 | 236 | 1554 / 1910 | 732 | 147 | 792 | 163 | 107 |
| DFS | 3425 / 4211 | 1675 | 347 | 1811 | 381 | 236 | 1554 / 1910 | 760 | 157 | 821 | 173 | 107 |
| DGS | 3425 / 4211 | 1704 | 355 | 1998 | 422 | 236 (60 Hz) 318 (50 Hz) | 1554 / 1910 | 773 | 161 | 906 | 191 | 107 (60 Hz) 142 (50 Hz) |
| DHS | 3425 / 4211 | 1737 | 361 | 2056 | 443 | 236 (60 Hz) 318 (50 Hz) | 1554 / 1910 | 788 | 164 | 933 | 201 | 107 (60 Hz) 142 (50 Hz) |
| DJS | 3425 / 4211 | 1769 | 365 | 2101 | 464 | 236 (60 Hz) 318 (50 Hz) | 1554 / 1910 | 802 | 166 | 953 | 210 | 107 (60 Hz) 142 (50 Hz) |
| STANDARD-EFFICIENCY MOTORS / MEDIUM VOLTAGE (6300-6900 V) | | | | | | | | | | | | |
| DDS | 3425 / 4211 | 1919 | 423 | 2069 | 458 | 318 | 1554 / 1910 | 870 | 192 | 938 | 208 | 142 |
| DES | 3425 / 4211 | 1939 | 428 | 2089 | 463 | 318 | 1554 / 1910 | 880 | 194 | 947 | 210 | 142 |
| DFS | 3425 / 4211 | 1989 | 448 | 2139 | 478 | 318 | 1554 / 1910 | 902 | 203 | 970 | 217 | 142 |
| DGS | 3425 / 4211 | 2054 | 473 | — | — | 318 | 1554 / 1910 | 932 | 215 | — | — | 142 |
| DHS | 3425 / 4211 | 2099 | 488 | — | — | 318 | 1554 / 1910 | 952 | 221 | — | — | 142 |
| DJS | 3425 / 4211 | 2159 | 508 | — | — | 318 | 1554 / 1910 | 979 | 230 | — | — | 142 |
| HIGH-EFFICIENCY MOTORS / LOW VOLTAGE (200-575 V) | | | | | | | | | | | | |
| DBH | 3425 / 4211 | 1773 | 406 | 1827 | 406 | 318 | 1554 / 1910 | 804 | 184 | 829 | 184 | 142 |
| DCH | 3425 / 4211 | 1827 | 406 | 1827 | 414 | 318 | 1554 / 1910 | 829 | 184 | 829 | 188 | 142 |
| DDH | 3425 / 4211 | 1827 | 414 | 1881 | 422 | 318 | 1554 / 1910 | 829 | 188 | 853 | 191 | 142 |
| DEH | 3425 / 4211 | 1881 | 422 | 1881 | 422 | 318 | 1554 / 1910 | 853 | 191 | 853 | 191 | 142 |
| DFH | 3425 / 4211 | 1881 | 439 | 1963 | 439 | 318 | 1554 / 1910 | 853 | 199 | 890 | 199 | 142 |
| DGH | 3425 / 4211 | 1963 | 455 | 1963 | 455 | 318 | 1554 / 1910 | 890 | 206 | 890 | 206 | 142 |
| DHH | 3425 / 4211 | 1963 | 455 | 2050 | 463 | 318 | 1554 / 1910 | 890 | 206 | 930 | 210 | 142 |
| DJH | 3425 / 4211 | — | — | 2050 | 471 | 318 | 1554 / 1910 | — | — | 930 | 213 | 142 |
| DKH | 3425 / 4211 | 2050 | 471 | — | — | 318 | 1554 / 1910 | 930 | 214 | — | — | 142 |

*Total compressor weight is the sum of the compressor aerodynamic components (compressor weight column), stator, rotor, and end bell cover weights.

†See Model Number Nomenclature in Fig. 2.

**Compressor aerodynamic component weight only, motor weight not included. Applicable to standard compressors only. For high lift compressors, contact Carrier Chiller Marketing for weights. For compressor frame size 4, two compressor weights are shown. The second value, 4211 lb (1910 kg), represents the weight when the compressor is equipped with a split ring diffuser (SRD).

††Stator weight includes the stator and shell.

Table 5C — 19XR Compressor and Motor Weights* — Compressor Frame Size 4† (cont)

| MOTOR CODE | ENGLISH | | | | | | SI | | | | | |
|---|--------------------------|----------------------|-------------------|----------------------|-------------------|----------------------------|--------------------------|----------------------|-------------------|----------------------|-------------------|----------------------------|
| | COMPRESSOR WEIGHT** (LB) | 60 HZ | | 50 HZ | | END BELL COVER WEIGHT (LB) | COMPRESSOR WEIGHT** (KG) | 60 HZ | | 50 HZ | | END BELL COVER WEIGHT (KG) |
| | | STATOR WEIGHT†† (LB) | ROTOR WEIGHT (LB) | STATOR WEIGHT†† (LB) | ROTOR WEIGHT (LB) | | | STATOR WEIGHT†† (KG) | ROTOR WEIGHT (KG) | STATOR WEIGHT†† (KG) | ROTOR WEIGHT (KG) | |
| HIGH-EFFICIENCY MOTORS / LOW VOLTAGE (200-575V) | | | | | | | | | | | | |
| LBH | 3425 / 4211 | 1873 | 364 | 1939 | 389 | 318 | 1554 / 1910 | 850 | 165 | 880 | 176 | 144 |
| LCH | 3425 / 4211 | 1939 | 389 | 2023 | 406 | 318 | 1554 / 1910 | 880 | 176 | 918 | 184 | 144 |
| LDH | 3425 / 4211 | 2023 | 406 | 2043 | 417 | 318 | 1554 / 1910 | 918 | 184 | 927 | 189 | 144 |
| LEH | 3425 / 4211 | 2043 | 417 | 2096 | 434 | 318 | 1554 / 1910 | 927 | 189 | 951 | 197 | 144 |
| LFH | 3425 / 4211 | 2096 | 434 | 2133 | 444 | 318 | 1554 / 1910 | 951 | 197 | 968 | 201 | 144 |
| LGH | 3425 / 4211 | 2133 | 444 | 2199 | 458 | 318 | 1554 / 1910 | 968 | 201 | 997 | 208 | 144 |
| LHH | 3425 / 4211 | 2199 | 458 | 2066 | 437 | 318 | 1554 / 1910 | 997 | 208 | 937 | 198 | 144 |
| HIGH-EFFICIENCY MOTORS / MEDIUM VOLTAGE (2400-4160V) | | | | | | | | | | | | |
| DBH | 3425 / 4211 | 1950 | 405 | 1950 | 405 | 318 | 1554 / 1910 | 885 | 184 | 885 | 184 | 144 |
| DCH | 3425 / 4211 | 1950 | 405 | 2025 | 429 | 318 | 1554 / 1910 | 885 | 184 | 919 | 195 | 144 |
| DDH | 3425 / 4211 | 1950 | 405 | 2025 | 429 | 318 | 1554 / 1910 | 885 | 184 | 919 | 195 | 144 |
| DEH | 3425 / 4211 | 2025 | 429 | 2100 | 452 | 318 | 1554 / 1910 | 919 | 195 | 953 | 205 | 144 |
| DFH | 3425 / 4211 | 2025 | 429 | 2100 | 452 | 318 | 1554 / 1910 | 919 | 195 | 953 | 205 | 144 |
| DGH | 3425 / 4211 | 2100 | 452 | 2200 | 480 | 318 | 1554 / 1910 | 953 | 205 | 998 | 218 | 144 |
| DHH | 3425 / 4211 | 2100 | 452 | 2320 | 575 | 318 | 1554 / 1910 | 953 | 205 | 1052 | 261 | 144 |
| DJH | 3425 / 4211 | 2100 | 452 | 2320 | 587 | 318 | 1554 / 1910 | 953 | 205 | 1052 | 266 | 144 |
| DKH | 3425 / 4211 | 2320 | 587 | — | — | 318 | 1554 / 1910 | 1052 | 266 | — | — | 144 |
| HIGH-EFFICIENCY MOTORS / MEDIUM VOLTAGE (6300-6900V) | | | | | | | | | | | | |
| DDH | 3425 / 4211 | 2150 | 536 | 2250 | 546 | 318 | 1554 / 1910 | 975 | 243 | 1021 | 248 | 144 |
| DEH | 3425 / 4211 | 2150 | 550 | 2250 | 550 | 318 | 1554 / 1910 | 975 | 249 | 1021 | 249 | 144 |
| DFH | 3425 / 4211 | 2250 | 575 | 2380 | 567 | 318 | 1554 / 1910 | 1021 | 261 | 1080 | 261 | 144 |
| DGH | 3425 / 4211 | 2250 | 599 | 2380 | 599 | 318 | 1554 / 1910 | 1021 | 272 | 1080 | 272 | 144 |
| DHH | 3425 / 4211 | 2380 | 604 | 2380 | 604 | 318 | 1554 / 1910 | 1080 | 274 | 1080 | 274 | 144 |
| DJH | 3425 / 4211 | 2380 | 614 | 2380 | 614 | 318 | 1554 / 1910 | 1080 | 279 | 1080 | 279 | 144 |
| DKH | 3425 / 4211 | 2380 | 614 | — | — | 318 | 1554 / 1910 | 1080 | 279 | — | — | 144 |

*Total compressor weight is the sum of the compressor aerodynamic components (compressor weight column), stator, rotor, and end bell cover weights.
 †See Model Number Nomenclature in Fig. 2.

**Compressor aerodynamic component weight only, motor weight not included. Applicable to standard compressors only. For high lift compressors, contact Carrier Chiller Marketing for weights. For compressor frame size 4, two compressor weights are shown. The second value, 4211 lb (1910 kg), represents the weight when the compressor is equipped with a split ring diffuser (SRD).
 ††Stator weight includes the stator and shell.

Table 5D — 19XR Compressor and Motor Weights* — Compressor Frame Size 5†

| MOTOR CODE | ENGLISH | | | | | | SI | | | | | |
|--|--------------------------|----------------------|-------------------|----------------------|-------------------|----------------------------|--------------------------|----------------------|-------------------|----------------------|-------------------|----------------------------|
| | COMPRESSOR WEIGHT** (LB) | 60 HZ | | 50 HZ | | END BELL COVER WEIGHT (LB) | COMPRESSOR WEIGHT** (KG) | 60 HZ | | 50 HZ | | END BELL COVER WEIGHT (KG) |
| | | STATOR WEIGHT†† (LB) | ROTOR WEIGHT (LB) | STATOR WEIGHT†† (LB) | ROTOR WEIGHT (LB) | | | STATOR WEIGHT†† (KG) | ROTOR WEIGHT (KG) | STATOR WEIGHT†† (KG) | ROTOR WEIGHT (KG) | |
| STANDARD-EFFICIENCY MOTORS / LOW VOLTAGE (200-575 V) | | | | | | | | | | | | |
| EHS | 7285 | 2843 | 741 | 2943 | 775 | 414 | 3304 | 1290 | 336 | 1335 | 352 | 188 |
| EJS | 7285 | 2826 | 741 | 2943 | 775 | 414 | 3304 | 1281 | 336 | 1335 | 352 | 188 |
| EKS | 7285 | 2943 | 775 | 2997 | 810 | 414 | 3304 | 1335 | 352 | 1359 | 367 | 188 |
| ELS | 7285 | 2932 | 775 | 2997 | 810 | 414 | 3304 | 1330 | 352 | 1359 | 367 | 188 |
| EMS | 7285 | 2986 | 810 | 3096 | 862 | 414 | 3304 | 1354 | 367 | 1404 | 391 | 188 |
| ENS | 7285 | 2986 | 810 | 3203 | 914 | 414 | 3304 | 1354 | 367 | 1453 | 415 | 188 |
| EPS | 7285 | 2986 | 810 | 3203 | 914 | 414 | 3304 | 1354 | 367 | 1453 | 415 | 188 |
| EQS | 7285 | 3013 | 621 | — | — | 414 | 3304 | 1367 | 282 | — | — | 188 |
| STANDARD-EFFICIENCY MOTORS / MEDIUM VOLTAGE (2400-4160 V) | | | | | | | | | | | | |
| EHS | 7285 | 2744 | 706 | 2818 | 741 | 414 | 3304 | 1245 | 320 | 1278 | 336 | 188 |
| EJS | 7285 | 2816 | 741 | 2892 | 775 | 414 | 3304 | 1277 | 336 | 1312 | 352 | 188 |
| EKS | 7285 | 2816 | 741 | 2930 | 775 | 414 | 3304 | 1277 | 336 | 1329 | 352 | 188 |
| ELS | 7285 | 2808 | 741 | 3005 | 810 | 414 | 3304 | 1274 | 336 | 1363 | 367 | 188 |
| EMS | 7285 | 2892 | 775 | 3005 | 810 | 414 | 3304 | 1322 | 352 | 1363 | 367 | 188 |
| ENS | 7285 | 2997 | 775 | 3143 | 879 | 414 | 3304 | 1359 | 352 | 1426 | 399 | 188 |
| EPS | 7285 | 2967 | 810 | 3144 | 879 | 414 | 3304 | 1346 | 367 | 1426 | 399 | 188 |
| EQS | 7285 | 3081 | 872 | — | — | 414 | 3304 | 1398 | 396 | — | — | 188 |
| STANDARD-EFFICIENCY MOTORS / MEDIUM VOLTAGE (6300-6900 V) | | | | | | | | | | | | |
| EHS | 7285 | 2773 | 735 | 2845 | 769 | 414 | 3304 | 1258 | 333 | 1290 | 349 | 188 |
| EJS | 7285 | 2855 | 769 | 2855 | 769 | 414 | 3304 | 1295 | 349 | 1295 | 349 | 188 |
| EKS | 7285 | 2919 | 803 | 2919 | 803 | 414 | 3304 | 1324 | 364 | 1324 | 364 | 188 |
| ELS | 7285 | 2908 | 803 | 3058 | 871 | 414 | 3304 | 1319 | 364 | 1387 | 395 | 188 |
| EMS | 7285 | 3029 | 854 | 3068 | 871 | 414 | 3304 | 1374 | 387 | 1392 | 395 | 188 |
| ENS | 7285 | 3023 | 854 | 3281 | 974 | 414 | 3304 | 1371 | 387 | 1488 | 442 | 188 |
| EPS | 7285 | 3068 | 871 | 3288 | 974 | 414 | 3304 | 1392 | 395 | 1491 | 442 | 188 |
| HIGH-EFFICIENCY MOTORS / LOW VOLTAGE (200-575 V) | | | | | | | | | | | | |
| EHH | 7285 | 2939 | 776 | 2995 | 810 | 414 | 3304 | 1333 | 352 | 1359 | 367 | 188 |
| EJH | 7285 | 2944 | 776 | 3002 | 810 | 414 | 3304 | 1335 | 352 | 1362 | 367 | 188 |
| EKH | 7285 | 2992 | 810 | 3110 | 862 | 414 | 3304 | 1357 | 367 | 1411 | 391 | 188 |
| ELH | 7285 | 2299 | 810 | 3099 | 862 | 414 | 3304 | 1043 | 367 | 1406 | 391 | 188 |
| EMH | 7285 | 2965 | 810 | 3210 | 914 | 414 | 3304 | 1345 | 367 | 1456 | 415 | 188 |
| ENH | 7285 | 3015 | 855 | 3293 | 974 | 414 | 3304 | 1368 | 388 | 1494 | 442 | 188 |
| EPH | 7285 | 3029 | 855 | 3289 | 974 | 414 | 3304 | 1374 | 388 | 1492 | 442 | 188 |
| EQH | 7285 | 3162 | 664 | — | — | 414 | 3304 | 1434 | 301 | — | — | 188 |

*Total compressor weight is the sum of the compressor aerodynamic components (compressor weight column), stator, rotor, and end bell cover weights.

†See Model Number Nomenclature in Fig. 2.

**Compressor aerodynamic component weight only, motor weight not included. Applicable to standard compressors only. For high lift compressors, contact Carrier Chiller Marketing for weights.

††Stator weight includes the stator and shell.

Table 5D — 19XR Compressor and Motor Weights* — Compressor Frame Size 5† (cont)

| MOTOR CODE | ENGLISH | | | | | | SI | | | | | |
|--|--------------------------|----------------------|-------------------|----------------------|-------------------|----------------------------|--------------------------|----------------------|-------------------|----------------------|-------------------|----------------------------|
| | COMPRESSOR WEIGHT** (LB) | 60 HZ | | 50 HZ | | END BELL COVER WEIGHT (LB) | COMPRESSOR WEIGHT** (KG) | 60 HZ | | 50 HZ | | END BELL COVER WEIGHT (KG) |
| | | STATOR WEIGHT†† (LB) | ROTOR WEIGHT (LB) | STATOR WEIGHT†† (LB) | ROTOR WEIGHT (LB) | | | STATOR WEIGHT†† (KG) | ROTOR WEIGHT (KG) | STATOR WEIGHT†† (KG) | ROTOR WEIGHT (KG) | |
| HIGH-EFFICIENCY MOTORS / LOW VOLTAGE (200-575 V) | | | | | | | | | | | | |
| MBH | 7285 | 2795 | 645 | 2856 | 665 | 414 | 3304 | 1268 | 293 | 1295 | 302 | 188 |
| MCH | 7285 | 2873 | 672 | 2925 | 693 | 414 | 3304 | 1303 | 305 | 1327 | 314 | 188 |
| MDH | 7285 | 2906 | 684 | 3013 | 724 | 414 | 3304 | 1318 | 310 | 1367 | 328 | 188 |
| MEH | 7285 | 2956 | 704 | 3071 | 737 | 414 | 3304 | 1341 | 319 | 1392 | 334 | 188 |
| MFH | 7285 | 3034 | 724 | 3153 | 791 | 414 | 3304 | 1376 | 328 | 1430 | 359 | 188 |
| MGH | 7285 | 3071 | 737 | — | — | 414 | 3304 | 1393 | 334 | — | — | 188 |
| HIGH-EFFICIENCY MOTORS / MEDIUM VOLTAGE (2400-4160 V) | | | | | | | | | | | | |
| EHH | 7285 | 2939 | 776 | 2997 | 810 | 414 | 3304 | 1333 | 352 | 1359 | 367 | 188 |
| EJH | 7285 | 2999 | 810 | 3108 | 862 | 414 | 3304 | 1360 | 367 | 1410 | 391 | 188 |
| EKH | 7285 | 2988 | 810 | 3102 | 862 | 414 | 3304 | 1355 | 367 | 1407 | 391 | 188 |
| ELH | 7285 | 2981 | 810 | 3065 | 872 | 414 | 3304 | 1352 | 367 | 1390 | 396 | 188 |
| EMH | 7285 | 3031 | 855 | 3077 | 872 | 414 | 3304 | 1375 | 388 | 1396 | 396 | 188 |
| ENH | 7285 | 3075 | 872 | 3260 | 974 | 414 | 3304 | 1395 | 396 | 1479 | 442 | 188 |
| EPH | 7285 | 3081 | 872 | 3298 | 974 | 414 | 3304 | 1398 | 396 | 1496 | 442 | 188 |
| EQH | 7285 | 3195 | 657 | — | — | 414 | 3304 | 1449 | 298 | — | — | 188 |
| HIGH-EFFICIENCY MOTORS / MEDIUM VOLTAGE (6300-6900 V) | | | | | | | | | | | | |
| EHH | 7285 | 2998 | 810 | 3097 | 862 | 414 | 3304 | 1360 | 367 | 1405 | 391 | 188 |
| EJH | 7285 | 3029 | 855 | 3100 | 862 | 414 | 3304 | 1374 | 388 | 1406 | 391 | 188 |
| EKH | 7285 | 3049 | 855 | 3064 | 872 | 414 | 3304 | 1383 | 388 | 1390 | 396 | 188 |
| ELH | 7285 | 3068 | 872 | 3060 | 872 | 414 | 3304 | 1390 | 396 | 1388 | 396 | 188 |
| EMH | 7285 | — | — | 3072 | 872 | 414 | 3304 | — | — | 1393 | 396 | 188 |
| ENH | 7285 | 3075 | 872 | 3260 | 974 | 414 | 3304 | 1395 | 396 | 1479 | 442 | 188 |
| EPH | 7285 | 3081 | 872 | 3288 | 974 | 414 | 3304 | 1398 | 396 | 1491 | 442 | 188 |
| EQH | 7285 | 3195 | 657 | — | — | 414 | 3304 | 1449 | 298 | — | — | 188 |
| HIGH-EFFICIENCY MOTORS / HIGH VOLTAGE (10000-11000 V) | | | | | | | | | | | | |
| MCH | 7285 | — | — | 3956 | 678 | 414 | 3304 | — | — | 1794 | 308 | 188 |
| MDH | 7285 | — | — | 3956 | 678 | 414 | 3304 | — | — | 1794 | 308 | 188 |
| MFH | 7285 | — | — | 4062 | 719 | 414 | 3304 | — | — | 1842 | 326 | 188 |
| MGH | 7285 | 3820 | 657 | — | — | 414 | 3304 | 1733 | 298 | — | — | 188 |
| MHH | 7285 | 3820 | 657 | — | — | 414 | 3304 | 1733 | 298 | — | — | 188 |
| HIGH-EFFICIENCY MOTORS / HIGH VOLTAGE (13800 V) | | | | | | | | | | | | |
| MHH | 7285 | 3779 | 646 | — | — | 414 | 3304 | 1714 | 293 | — | — | 188 |

*Total compressor weight is the sum of the compressor aerodynamic components (compressor weight column), stator, rotor, and end bell cover weights.

†See Model Number Nomenclature in Fig. 2.

**Compressor aerodynamic component weight only, motor weight not included. Applicable to standard compressors only. For high lift compressors, contact Carrier Chiller Marketing for weights.

††Stator weight includes the stator and shell.

Table 6A — 19XR Heat Exchanger Data — Drive End Entering Cooler Water

| CODE† | ENGLISH | | | | | | METRIC (SI) | | | | | |
|-------|--------------------------|----------------|-------------------------|-----------|-------------------|-----------|--------------------------|----------------|-------------------------|-----------|-------------------|-----------|
| | DRY RIGGING WEIGHT (LB)* | | MACHINE CHARGE | | | | DRY RIGGING WEIGHT (KG)* | | MACHINE CHARGE | | | |
| | COOLER ONLY | CONDENSER ONLY | REFRIGERANT WEIGHT (LB) | | WATER WEIGHT (LB) | | COOLER ONLY | CONDENSER ONLY | REFRIGERANT WEIGHT (KG) | | WATER WEIGHT (KG) | |
| | | | COOLER | CONDENSER | COOLER | CONDENSER | | | COOLER | CONDENSER | COOLER | CONDENSER |
| 10 | 2707 | 2704 | 328 | 226 | 283 | 348 | 1229 | 1228 | 149 | 103 | 128 | 158 |
| 11 | 2777 | 2772 | 357 | 226 | 309 | 374 | 1261 | 1258 | 162 | 103 | 140 | 170 |
| 12 | 2848 | 2857 | 387 | 226 | 335 | 407 | 1293 | 1297 | 176 | 103 | 152 | 185 |
| 15 | 2968 | 2984 | 405 | 275 | 327 | 402 | 1346 | 1355 | 184 | 125 | 148 | 183 |
| 16 | 3054 | 3068 | 441 | 275 | 359 | 435 | 1387 | 1393 | 200 | 125 | 163 | 197 |
| 17 | 3141 | 3173 | 477 | 275 | 391 | 475 | 1426 | 1441 | 217 | 125 | 178 | 216 |
| 20 | 3407 | 3373 | 416 | 252 | 402 | 398 | 1547 | 1531 | 189 | 114 | 183 | 181 |
| 21 | 3555 | 3540 | 459 | 252 | 456 | 462 | 1614 | 1607 | 208 | 114 | 207 | 210 |
| 22 | 3711 | 3704 | 505 | 252 | 514 | 526 | 1685 | 1682 | 229 | 114 | 233 | 239 |
| 30 | 4071 | 3694 | 510 | 308 | 464 | 464 | 1848 | 1677 | 232 | 140 | 211 | 211 |
| 31 | 4253 | 3899 | 565 | 308 | 531 | 543 | 1931 | 1770 | 257 | 140 | 241 | 247 |
| 32 | 4445 | 4100 | 626 | 308 | 601 | 621 | 2018 | 1861 | 284 | 140 | 273 | 282 |
| 35 | 4343 | 4606 | 577 | 349 | 511 | 513 | 1972 | 2091 | 262 | 158 | 232 | 233 |
| 36 | 4551 | 4840 | 639 | 349 | 587 | 603 | 2066 | 2197 | 290 | 158 | 266 | 274 |
| 37 | 4769 | 5069 | 709 | 349 | 667 | 692 | 2165 | 2301 | 322 | 158 | 303 | 314 |
| 40 | 4908 | 5039 | 726 | 338 | 863 | 915 | 2228 | 2288 | 330 | 153 | 392 | 415 |
| 41 | 5078 | 5232 | 783 | 338 | 930 | 995 | 2305 | 2375 | 355 | 153 | 422 | 452 |
| 42 | 5226 | 5424 | 840 | 338 | 990 | 1074 | 2373 | 2462 | 381 | 153 | 449 | 488 |
| 45 | 5363 | 5602 | 821 | 383 | 938 | 998 | 2435 | 2543 | 373 | 174 | 426 | 453 |
| 46 | 5559 | 5824 | 874 | 383 | 1014 | 1088 | 2524 | 2644 | 397 | 174 | 460 | 494 |
| 47 | 5730 | 6044 | 949 | 383 | 1083 | 1179 | 2601 | 2744 | 431 | 174 | 492 | 535 |
| 50 | 5713 | 6090 | 897 | 446 | 1101 | 1225 | 2594 | 2765 | 407 | 202 | 500 | 556 |
| 51 | 5940 | 6283 | 974 | 446 | 1192 | 1304 | 2697 | 2852 | 442 | 202 | 541 | 592 |
| 52 | 6083 | 6464 | 1021 | 446 | 1248 | 1379 | 2762 | 2935 | 464 | 202 | 567 | 626 |
| 53 | 6141 | 6529 | 1010 | 446 | 1277 | 1409 | 2788 | 2964 | 459 | 202 | 580 | 640 |
| 54 | 6192 | 6591 | 987 | 446 | 1302 | 1439 | 2811 | 2992 | 448 | 202 | 591 | 653 |
| 55 | 6257 | 6785 | 1014 | 504 | 1201 | 1339 | 2841 | 3080 | 460 | 229 | 545 | 608 |
| 56 | 6517 | 7007 | 1101 | 504 | 1304 | 1429 | 2959 | 3181 | 500 | 229 | 592 | 649 |
| 57 | 6682 | 7215 | 1154 | 504 | 1369 | 1514 | 3034 | 3276 | 524 | 229 | 622 | 687 |
| 58 | 6751 | 7291 | 1143 | 504 | 1401 | 1550 | 3065 | 3310 | 519 | 229 | 636 | 704 |
| 59 | 6811 | 7363 | 1116 | 504 | 1430 | 1583 | 3092 | 3343 | 507 | 229 | 649 | 719 |
| 5A | 5124 | — | 491 | — | 1023 | — | 2326 | — | 223 | — | 464 | — |
| 5B | 5177 | — | 510 | — | 1050 | — | 2350 | — | 232 | — | 477 | — |
| 5C | 5243 | — | 532 | — | 1079 | — | 2380 | — | 242 | — | 490 | — |
| 5F | 5577 | — | 553 | — | 1113 | — | 2532 | — | 251 | — | 505 | — |
| 5G | 5640 | — | 575 | — | 1143 | — | 2561 | — | 261 | — | 519 | — |
| 5H | 5716 | — | 600 | — | 1176 | — | 2595 | — | 272 | — | 534 | — |
| 5K | 4993 | — | 673 | — | 1067 | — | 2267 | — | 306 | — | 484 | — |
| 5L | 5090 | — | 706 | — | 1118 | — | 2311 | — | 321 | — | 508 | — |
| 5M | 5165 | — | 742 | — | 1162 | — | 2345 | — | 337 | — | 528 | — |
| 5P | 5041 | — | 641 | — | 1111 | — | 2289 | — | 291 | — | 504 | — |
| 5Q | 5131 | — | 678 | — | 1155 | — | 2329 | — | 308 | — | 524 | — |
| 5R | 5214 | — | 709 | — | 1206 | — | 2367 | — | 322 | — | 548 | — |
| 5T | 5425 | — | 768 | — | 1162 | — | 2463 | — | 349 | — | 528 | — |
| 5U | 5534 | — | 801 | — | 1220 | — | 2512 | — | 364 | — | 554 | — |
| 5V | 5620 | — | 843 | — | 1270 | — | 2551 | — | 383 | — | 577 | — |
| 5X | 5484 | — | 730 | — | 1212 | — | 2490 | — | 331 | — | 550 | — |
| 5Y | 5584 | — | 769 | — | 1262 | — | 2535 | — | 349 | — | 573 | — |
| 5Z | 5678 | — | 805 | — | 1320 | — | 2578 | — | 365 | — | 599 | — |
| 60 | 6719 | 6764 | 1091 | 479 | 1400 | 1521 | 3050 | 3071 | 495 | 217 | 636 | 691 |
| 61 | 6895 | 6949 | 1150 | 479 | 1470 | 1597 | 3130 | 3155 | 522 | 217 | 667 | 725 |
| 62 | 7038 | 7130 | 1202 | 479 | 1527 | 1671 | 3195 | 3237 | 546 | 217 | 693 | 759 |
| 63 | 7103 | 7199 | 1202 | 479 | 1559 | 1704 | 3225 | 3268 | 546 | 217 | 708 | 774 |
| 64 | 7161 | 7264 | 1178 | 479 | 1587 | 1735 | 3251 | 3298 | 535 | 217 | 720 | 788 |
| 65 | 7392 | 6782 | 1241 | 542 | 1530 | 1667 | 3356 | 3079 | 563 | 246 | 695 | 757 |
| 66 | 7594 | 7894 | 1309 | 542 | 1610 | 1753 | 3448 | 3584 | 594 | 246 | 731 | 796 |
| 67 | 7759 | 8102 | 1369 | 542 | 1674 | 1838 | 3523 | 3678 | 622 | 246 | 760 | 834 |
| 68 | 7836 | 8182 | 1359 | 542 | 1711 | 1875 | 3558 | 3715 | 617 | 246 | 777 | 851 |
| 69 | 7905 | 8258 | 1332 | 542 | 1743 | 1911 | 3589 | 3749 | 605 | 246 | 791 | 868 |

*Rigging weights are for standard tubes of standard wall thickness (0.025-in. [0.635 mm] wall).

NOTES:

1. Cooler includes the control panel (ICVC), suction elbow, and 1/2 the distribution piping weight.
2. Condenser includes float valve and sump, discharge elbow, and 1/2 the distribution piping weight.
3. For special tubes refer to the 19XR, XRV Computer Selection Program.
4. All weights for standard 2-pass NIH (nozzle-in-head) design.

Table 6A — 19XR Heat Exchanger Data — Drive End Entering Cooler Water (cont)

| CODE | ENGLISH | | | | | | METRIC (SI) | | | | | |
|------|--------------------------|----------------|-------------------------|-----------|-------------------|-----------|--------------------------|----------------|-------------------------|-----------|-------------------|-----------|
| | DRY RIGGING WEIGHT (LB)* | | MACHINE CHARGE | | | | DRY RIGGING WEIGHT (KG)* | | MACHINE CHARGE | | | |
| | COOLER ONLY | CONDENSER ONLY | REFRIGERANT WEIGHT (LB) | | WATER WEIGHT (LB) | | COOLER ONLY | CONDENSER ONLY | REFRIGERANT WEIGHT (KG) | | WATER WEIGHT (KG) | |
| | | | COOLER | CONDENSER | COOLER | CONDENSER | | | COOLER | CONDENSER | COOLER | CONDENSER |
| 6K | 5716 | — | 760 | — | 1291 | — | 2595 | — | 345 | — | 586 | — |
| 6L | 5804 | — | 797 | — | 1341 | — | 2635 | — | 362 | — | 609 | — |
| 6M | 5894 | — | 828 | — | 1399 | — | 2676 | — | 376 | — | 635 | — |
| 6P | 5768 | — | 725 | — | 1338 | — | 2619 | — | 329 | — | 607 | — |
| 6Q | 5852 | — | 764 | — | 1385 | — | 2657 | — | 347 | — | 629 | — |
| 6R | 5938 | — | 798 | — | 1439 | — | 2696 | — | 362 | — | 653 | — |
| 6T | 6230 | — | 863 | — | 1405 | — | 2828 | — | 392 | — | 638 | — |
| 6U | 6330 | — | 905 | — | 1462 | — | 2874 | — | 411 | — | 664 | — |
| 6V | 6433 | — | 941 | — | 1528 | — | 2921 | — | 427 | — | 694 | — |
| 6X | 6293 | — | 823 | — | 1459 | — | 2857 | — | 374 | — | 662 | — |
| 6Y | 6388 | — | 868 | — | 1512 | — | 2900 | — | 394 | — | 686 | — |
| 6Z | 6487 | — | 906 | — | 1574 | — | 2945 | — | 411 | — | 715 | — |
| 70 | 9942 | 10786 | 1409 | 840 | 2008 | 2225 | 4514 | 4897 | 640 | 381 | 912 | 1010 |
| 71 | 10330 | 11211 | 1539 | 840 | 2164 | 2389 | 4690 | 5090 | 699 | 381 | 982 | 1085 |
| 72 | 10632 | 11622 | 1646 | 840 | 2286 | 2548 | 4827 | 5276 | 747 | 381 | 1038 | 1157 |
| 73 | 10715 | 11737 | 1622 | 840 | 2328 | 2604 | 4865 | 5329 | 736 | 381 | 1057 | 1182 |
| 74 | 10790 | 11775 | 1584 | 840 | 2366 | 2622 | 4899 | 5346 | 719 | 381 | 1074 | 1190 |
| 75 | 10840 | 11859 | 1599 | 950 | 2183 | 2431 | 4921 | 5384 | 726 | 431 | 991 | 1104 |
| 76 | 11289 | 12345 | 1747 | 950 | 2361 | 2619 | 5125 | 5605 | 793 | 431 | 1072 | 1189 |
| 77 | 11638 | 12814 | 1869 | 950 | 2501 | 2801 | 5284 | 5818 | 849 | 431 | 1135 | 1272 |
| 78 | 11738 | 12949 | 1849 | 950 | 2548 | 2864 | 5329 | 5879 | 839 | 431 | 1157 | 1300 |
| 79 | 11828 | 12994 | 1806 | 950 | 2592 | 2885 | 5370 | 5899 | 820 | 431 | 1177 | 1310 |
| 7K | 8728 | — | 1047 | — | 1948 | — | 3963 | — | 475 | — | 884 | — |
| 7L | 8959 | — | 1132 | — | 2094 | — | 4067 | — | 514 | — | 951 | — |
| 7M | 9161 | — | 1214 | — | 2229 | — | 4159 | — | 551 | — | 1012 | — |
| 7P | 8792 | — | 1002 | — | 2010 | — | 3992 | — | 455 | — | 913 | — |
| 7Q | 9023 | — | 1087 | — | 2156 | — | 4096 | — | 493 | — | 979 | — |
| 7R | 9229 | — | 1167 | — | 2295 | — | 4190 | — | 530 | — | 1042 | — |
| 7T | 9431 | — | 1194 | — | 2115 | — | 4282 | — | 542 | — | 960 | — |
| 7U | 9698 | — | 1292 | — | 2282 | — | 4403 | — | 587 | — | 1036 | — |
| 7V | 9932 | — | 1403 | — | 2436 | — | 4509 | — | 637 | — | 1106 | — |
| 7X | 9510 | — | 1142 | — | 2185 | — | 4318 | — | 518 | — | 992 | — |
| 7Y | 9777 | — | 1240 | — | 2352 | — | 4439 | — | 563 | — | 1068 | — |
| 7Z | 10016 | — | 1347 | — | 2511 | — | 4547 | — | 612 | — | 1140 | — |
| 80 | 12664 | 12753 | 1700 | 836 | 2726 | 2977 | 5749 | 5790 | 772 | 380 | 1238 | 1352 |
| 81 | 12998 | 13149 | 1812 | 836 | 2863 | 3143 | 5901 | 5970 | 823 | 380 | 1300 | 1427 |
| 82 | 13347 | 13545 | 1928 | 836 | 3005 | 3309 | 6060 | 6149 | 875 | 380 | 1364 | 1502 |
| 83 | 13437 | 13872 | 1877 | 836 | 3053 | 3476 | 6100 | 6298 | 852 | 380 | 1386 | 1578 |
| 84 | 13523 | 14217 | 1840 | 836 | 3099 | 3651 | 6139 | 6455 | 835 | 380 | 1407 | 1658 |
| 85 | 13804 | 14008 | 1927 | 945 | 2951 | 3238 | 6267 | 6360 | 875 | 429 | 1340 | 1470 |
| 86 | 14191 | 14465 | 2054 | 945 | 3108 | 3428 | 6443 | 6567 | 933 | 429 | 1411 | 1556 |
| 87 | 14597 | 14923 | 2186 | 945 | 3271 | 3618 | 6627 | 6775 | 992 | 429 | 1485 | 1643 |
| 88 | 14705 | 15311 | 2142 | 945 | 3325 | 3608 | 6676 | 6951 | 972 | 429 | 1510 | 1638 |
| 89 | 14808 | 15721 | 2099 | 945 | 3378 | 4009 | 6723 | 7137 | 953 | 429 | 1534 | 1820 |
| 8K | 11153 | — | 1385 | — | 2760 | — | 5063 | — | 629 | — | 1253 | — |
| 8L | 11400 | — | 1484 | — | 2926 | — | 5176 | — | 674 | — | 1328 | — |
| 8M | 11650 | — | 1589 | — | 3088 | — | 5289 | — | 721 | — | 1402 | — |
| 8P | 11219 | — | 1334 | — | 2830 | — | 5093 | — | 606 | — | 1285 | — |
| 8Q | 11470 | — | 1430 | — | 2999 | — | 5207 | — | 649 | — | 1362 | — |
| 8R | 11719 | — | 1535 | — | 3161 | — | 5320 | — | 697 | — | 1435 | — |
| 8T | 12069 | — | 1580 | — | 2991 | — | 5479 | — | 717 | — | 1358 | — |
| 8U | 12357 | — | 1694 | — | 3180 | — | 5610 | — | 769 | — | 1444 | — |
| 8V | 12645 | — | 1814 | — | 3365 | — | 5741 | — | 824 | — | 1528 | — |
| 8X | 12152 | — | 1522 | — | 3070 | — | 5517 | — | 691 | — | 1394 | — |
| 8Y | 12444 | — | 1632 | — | 3264 | — | 5650 | — | 741 | — | 1482 | — |
| 8Z | 12733 | — | 1752 | — | 3448 | — | 5781 | — | 795 | — | 1565 | — |

*Rigging weights are for standard tubes of standard wall thickness (0.025-in. [0.635 mm] wall).

NOTES:

1. Cooler includes the control panel (ICVC), suction elbow, and 1/2 the distribution piping weight.

2. Condenser includes float valve and sump, discharge elbow, and 1/2 the distribution piping weight.
3. For special tubes refer to the 19XR,XRV Computer Selection Program.
4. All weights for standard 2-pass NIH (nozzle-in-head) design.

Table 6B — 19XR Heat Exchanger Data — Compressor End Entering Cooler Water

| CODE† | ENGLISH | | | | | | METRIC (SI) | | | | | |
|-------|--------------------------|----------------|-------------------------|-----------|-------------------|-----------|--------------------------|----------------|-------------------------|-----------|-------------------|-----------|
| | DRY RIGGING WEIGHT (LB)* | | MACHINE CHARGE | | | | DRY RIGGING WEIGHT (KG)* | | MACHINE CHARGE | | | |
| | COOLER ONLY | CONDENSER ONLY | REFRIGERANT WEIGHT (LB) | | WATER WEIGHT (LB) | | COOLER ONLY | CONDENSER ONLY | REFRIGERANT WEIGHT (KG) | | WATER WEIGHT (KG) | |
| | | | COOLER | CONDENSER | COOLER | CONDENSER | | | COOLER | CONDENSER | COOLER | CONDENSER |
| 10 | 2707 | 2704 | 290 | 200 | 283 | 348 | 1228 | 1227 | 132 | 91 | 128 | 158 |
| 11 | 2777 | 2772 | 310 | 200 | 309 | 374 | 1260 | 1257 | 141 | 91 | 140 | 170 |
| 12 | 2848 | 2857 | 330 | 200 | 335 | 407 | 1292 | 1296 | 150 | 91 | 152 | 185 |
| 15 | 2968 | 2984 | 320 | 250 | 327 | 402 | 1346 | 1354 | 145 | 113 | 148 | 182 |
| 16 | 3054 | 3068 | 340 | 250 | 359 | 435 | 1385 | 1392 | 154 | 113 | 163 | 197 |
| 17 | 3141 | 3173 | 370 | 250 | 391 | 475 | 1425 | 1439 | 168 | 113 | 177 | 215 |
| 20 | 3407 | 3373 | 345 | 225 | 402 | 398 | 1545 | 1530 | 156 | 102 | 182 | 181 |
| 21 | 3555 | 3540 | 385 | 225 | 456 | 462 | 1613 | 1606 | 175 | 102 | 207 | 210 |
| 22 | 3711 | 3704 | 435 | 225 | 514 | 526 | 1683 | 1680 | 197 | 102 | 233 | 239 |
| 30 | 4071 | 3694 | 350 | 260 | 464 | 464 | 1847 | 1676 | 159 | 118 | 210 | 210 |
| 31 | 4253 | 3899 | 420 | 260 | 531 | 543 | 1929 | 1769 | 191 | 118 | 241 | 246 |
| 32 | 4445 | 4100 | 490 | 260 | 601 | 621 | 2016 | 1860 | 222 | 118 | 273 | 282 |
| 35 | 4343 | 4606 | 400 | 310 | 511 | 513 | 1970 | 2089 | 181 | 141 | 232 | 233 |
| 36 | 4551 | 4840 | 480 | 310 | 587 | 603 | 2064 | 2195 | 218 | 141 | 266 | 274 |
| 37 | 4769 | 5069 | 550 | 310 | 667 | 692 | 2163 | 2299 | 249 | 141 | 303 | 314 |
| 40 | 4908 | 5039 | 560 | 338 | 863 | 915 | 2226 | 2286 | 254 | 153 | 391 | 415 |
| 41 | 5078 | 5232 | 630 | 338 | 930 | 995 | 2303 | 2373 | 286 | 153 | 422 | 451 |
| 42 | 5226 | 5424 | 690 | 338 | 990 | 1074 | 2370 | 2460 | 313 | 153 | 449 | 487 |
| 45 | 5363 | 5602 | 640 | 383 | 938 | 998 | 2433 | 2541 | 290 | 174 | 425 | 453 |
| 46 | 5559 | 5824 | 720 | 383 | 1014 | 1088 | 2522 | 2642 | 327 | 174 | 460 | 494 |
| 47 | 5730 | 6044 | 790 | 383 | 1083 | 1179 | 2599 | 2742 | 358 | 174 | 491 | 535 |
| 50 | 5713 | 6090 | 750 | 446 | 1101 | 1225 | 2591 | 2762 | 340 | 202 | 499 | 556 |
| 51 | 5940 | 6283 | 840 | 446 | 1192 | 1304 | 2694 | 2850 | 381 | 202 | 541 | 591 |
| 52 | 6083 | 6464 | 900 | 446 | 1248 | 1379 | 2759 | 2932 | 408 | 202 | 566 | 626 |
| 53 | 6141 | 6529 | 900 | 446 | 1277 | 1409 | 2788 | 2964 | 408 | 202 | 580 | 640 |
| 54 | 6192 | 6591 | 900 | 446 | 1302 | 1439 | 2811 | 2992 | 408 | 202 | 591 | 653 |
| 55 | 6257 | 6785 | 870 | 509 | 1201 | 1339 | 2838 | 3078 | 395 | 231 | 545 | 607 |
| 56 | 6517 | 7007 | 940 | 509 | 1304 | 1429 | 2956 | 3178 | 426 | 231 | 591 | 648 |
| 57 | 6682 | 7215 | 980 | 509 | 1369 | 1514 | 3031 | 3273 | 445 | 231 | 621 | 687 |
| 58 | 6751 | 7291 | 980 | 509 | 1401 | 1550 | 3065 | 3310 | 445 | 231 | 636 | 704 |
| 59 | 6811 | 7363 | 980 | 509 | 1430 | 1583 | 3092 | 3343 | 445 | 231 | 649 | 719 |
| 5A | 5124 | — | 500 | — | 1023 | — | 2324 | — | 227 | — | 464 | — |
| 5B | 5177 | — | 520 | — | 1050 | — | 2348 | — | 236 | — | 476 | — |
| 5C | 5243 | — | 550 | — | 1079 | — | 2378 | — | 249 | — | 489 | — |
| 5F | 5577 | — | 550 | — | 1113 | — | 2530 | — | 249 | — | 505 | — |
| 5G | 5640 | — | 570 | — | 1143 | — | 2558 | — | 259 | — | 518 | — |
| 5H | 5716 | — | 600 | — | 1176 | — | 2593 | — | 272 | — | 533 | — |
| 5K | 4993 | — | 673 | — | 1067 | — | 2267 | — | 306 | — | 484 | — |
| 5L | 5090 | — | 706 | — | 1118 | — | 2311 | — | 321 | — | 508 | — |
| 5M | 5165 | — | 742 | — | 1162 | — | 2345 | — | 337 | — | 528 | — |
| 5P | 5041 | — | 641 | — | 1111 | — | 2289 | — | 291 | — | 504 | — |
| 5Q | 5131 | — | 678 | — | 1155 | — | 2329 | — | 308 | — | 524 | — |
| 5R | 5214 | — | 709 | — | 1206 | — | 2367 | — | 322 | — | 548 | — |
| 5T | 5425 | — | 768 | — | 1162 | — | 2463 | — | 349 | — | 528 | — |
| 5U | 5534 | — | 801 | — | 1220 | — | 2512 | — | 364 | — | 554 | — |
| 5V | 5620 | — | 843 | — | 1270 | — | 2551 | — | 383 | — | 577 | — |
| 5X | 5484 | — | 730 | — | 1212 | — | 2490 | — | 331 | — | 550 | — |
| 5Y | 5584 | — | 769 | — | 1262 | — | 2535 | — | 349 | — | 573 | — |
| 5Z | 5678 | — | 805 | — | 1320 | — | 2578 | — | 365 | — | 599 | — |
| 60 | 6719 | 6764 | 940 | 479 | 1400 | 1521 | 3048 | 3068 | 426 | 217 | 635 | 690 |
| 61 | 6895 | 6949 | 980 | 479 | 1470 | 1597 | 3128 | 3152 | 445 | 217 | 667 | 724 |
| 62 | 7038 | 7130 | 1020 | 479 | 1527 | 1671 | 3192 | 3234 | 463 | 217 | 693 | 758 |
| 63 | 7103 | 7199 | 1020 | 479 | 1559 | 1704 | 3225 | 3268 | 463 | 217 | 708 | 773 |
| 64 | 7161 | 7264 | 1020 | 479 | 1587 | 1735 | 3251 | 3298 | 463 | 217 | 720 | 788 |
| 65 | 7392 | 7682 | 1020 | 542 | 1530 | 1667 | 3353 | 3484 | 463 | 246 | 694 | 756 |
| 66 | 7594 | 7894 | 1060 | 542 | 1610 | 1753 | 3445 | 3581 | 481 | 246 | 730 | 795 |
| 67 | 7759 | 8102 | 1090 | 542 | 1674 | 1838 | 3519 | 3675 | 494 | 246 | 759 | 834 |
| 68 | 7836 | 8182 | 1090 | 542 | 1711 | 1875 | 3558 | 3715 | 494 | 246 | 777 | 851 |
| 69 | 7905 | 8258 | 1090 | 542 | 1743 | 1911 | 3589 | 3749 | 494 | 246 | 791 | 868 |

*Rigging weights are for standard tubes of standard wall thickness (0.025-in. [0.635 mm] wall).

NOTES:

1. Cooler includes the control panel (ICVC), suction elbow, and 1/2 the distribution piping weight.

2. Condenser includes float valve and sump, discharge elbow, and 1/2 the distribution piping weight.

3. For special tubes refer to the 19XR,XRV Computer Selection Program.

4. All weights for standard 2-pass NIH (nozzle-in-head) design.

Table 6B — 19XR Heat Exchanger Data — Compressor End Entering Cooler Water (cont)

| CODE | ENGLISH | | | | | | METRIC (SI) | | | | | |
|------|--------------------------|----------------|-------------------------|-----------|-------------------|-----------|--------------------------|----------------|-------------------------|-----------|-------------------|-----------|
| | DRY RIGGING WEIGHT (LB)* | | MACHINE CHARGE | | | | DRY RIGGING WEIGHT (KG)* | | MACHINE CHARGE | | | |
| | COOLER ONLY | CONDENSER ONLY | REFRIGERANT WEIGHT (LB) | | WATER WEIGHT (LB) | | COOLER ONLY | CONDENSER ONLY | REFRIGERANT WEIGHT (KG) | | WATER WEIGHT (KG) | |
| | | | COOLER | CONDENSER | COOLER | CONDENSER | | | COOLER | CONDENSER | COOLER | CONDENSER |
| 6K | 5716 | — | 760 | — | 1291 | — | 2595 | — | 345 | — | 586 | — |
| 6L | 5804 | — | 797 | — | 1341 | — | 2635 | — | 362 | — | 609 | — |
| 6M | 5894 | — | 828 | — | 1399 | — | 2676 | — | 376 | — | 635 | — |
| 6P | 5768 | — | 725 | — | 1338 | — | 2619 | — | 329 | — | 607 | — |
| 6Q | 5852 | — | 764 | — | 1385 | — | 2657 | — | 347 | — | 629 | — |
| 6R | 5938 | — | 798 | — | 1439 | — | 2696 | — | 362 | — | 653 | — |
| 6T | 6230 | — | 863 | — | 1405 | — | 2828 | — | 392 | — | 638 | — |
| 6U | 6330 | — | 905 | — | 1462 | — | 2874 | — | 411 | — | 664 | — |
| 6V | 6433 | — | 941 | — | 1528 | — | 2921 | — | 427 | — | 694 | — |
| 6X | 6293 | — | 823 | — | 1459 | — | 2857 | — | 374 | — | 662 | — |
| 6Y | 6388 | — | 868 | — | 1512 | — | 2900 | — | 394 | — | 686 | — |
| 6Z | 6487 | — | 906 | — | 1574 | — | 2945 | — | 411 | — | 715 | — |
| 70 | 9942 | 10786 | 1220 | 840 | 2008 | 2225 | 4510 | 4893 | 553 | 381 | 911 | 1009 |
| 71 | 10330 | 11211 | 1340 | 840 | 2164 | 2389 | 4686 | 5085 | 608 | 381 | 982 | 1084 |
| 72 | 10632 | 11622 | 1440 | 840 | 2286 | 2548 | 4823 | 5278 | 653 | 381 | 1037 | 1156 |
| 73 | 10715 | 11737 | 1440 | 840 | 2328 | 2604 | 4865 | 5329 | 654 | 381 | 1057 | 1182 |
| 74 | 10790 | 11775 | 1440 | 840 | 2366 | 2622 | 4899 | 5346 | 654 | 381 | 1074 | 1190 |
| 75 | 10840 | 11859 | 1365 | 950 | 2183 | 2431 | 4917 | 5379 | 619 | 431 | 990 | 1103 |
| 76 | 11289 | 12345 | 1505 | 950 | 2361 | 2619 | 5121 | 5600 | 683 | 431 | 1071 | 1188 |
| 77 | 11638 | 12814 | 1625 | 950 | 2501 | 2801 | 5279 | 5812 | 737 | 431 | 1134 | 1271 |
| 78 | 11738 | 12949 | 1625 | 950 | 2548 | 2864 | 5329 | 5879 | 738 | 431 | 1157 | 1300 |
| 79 | 11828 | 12994 | 1625 | 950 | 2592 | 2885 | 5370 | 5899 | 738 | 431 | 1177 | 1310 |
| 7K | 8728 | — | 1047 | — | 1948 | — | 3963 | — | 475 | — | 884 | — |
| 7L | 8959 | — | 1132 | — | 2094 | — | 4067 | — | 514 | — | 951 | — |
| 7M | 9161 | — | 1214 | — | 2229 | — | 4159 | — | 551 | — | 1012 | — |
| 7P | 8792 | — | 1002 | — | 2010 | — | 3992 | — | 455 | — | 913 | — |
| 7Q | 9023 | — | 1087 | — | 2156 | — | 4096 | — | 493 | — | 979 | — |
| 7R | 9229 | — | 1167 | — | 2295 | — | 4190 | — | 530 | — | 1042 | — |
| 7T | 9431 | — | 1194 | — | 2115 | — | 4282 | — | 542 | — | 960 | — |
| 7U | 9698 | — | 1292 | — | 2282 | — | 4403 | — | 587 | — | 1036 | — |
| 7V | 9932 | — | 1403 | — | 2436 | — | 4509 | — | 637 | — | 1106 | — |
| 7X | 9510 | — | 1142 | — | 2185 | — | 4318 | — | 518 | — | 992 | — |
| 7Y | 9777 | — | 1240 | — | 2352 | — | 4439 | — | 563 | — | 1068 | — |
| 7Z | 10016 | — | 1347 | — | 2511 | — | 4547 | — | 612 | — | 1140 | — |
| 80 | 12664 | 12753 | 1500 | 836 | 2726 | 2977 | 5744 | 5785 | 680 | 379 | 1236 | 1350 |
| 81 | 12998 | 13149 | 1620 | 836 | 2863 | 3143 | 5896 | 5964 | 735 | 379 | 1299 | 1426 |
| 82 | 13347 | 13545 | 1730 | 836 | 3005 | 3309 | 6054 | 6144 | 785 | 379 | 1363 | 1501 |
| 83 | 13437 | 13872 | 1730 | 836 | 3053 | 3476 | 6100 | 6298 | 785 | 379 | 1386 | 1578 |
| 84 | 13523 | 14217 | 1730 | 836 | 3099 | 3651 | 6139 | 6455 | 785 | 379 | 1407 | 1658 |
| 85 | 13804 | 14008 | 1690 | 945 | 2951 | 3238 | 6261 | 6354 | 767 | 429 | 1339 | 1469 |
| 86 | 14191 | 14465 | 1820 | 945 | 3108 | 3428 | 6437 | 6561 | 826 | 429 | 1410 | 1555 |
| 87 | 14597 | 14923 | 1940 | 945 | 3271 | 3618 | 6621 | 6769 | 880 | 429 | 1484 | 1641 |
| 88 | 14705 | 15311 | 1940 | 945 | 3325 | 3808 | 6676 | 6951 | 881 | 429 | 1510 | 1729 |
| 89 | 14808 | 15721 | 1940 | 945 | 3378 | 4009 | 6723 | 7137 | 881 | 429 | 1534 | 1820 |
| 8K | 11153 | — | 1385 | — | 2760 | — | 5063 | — | 629 | — | 1253 | — |
| 8L | 11400 | — | 1484 | — | 2926 | — | 5176 | — | 674 | — | 1328 | — |
| 8M | 11650 | — | 1589 | — | 3088 | — | 5289 | — | 721 | — | 1402 | — |
| 8P | 11219 | — | 1334 | — | 2830 | — | 5093 | — | 606 | — | 1285 | — |
| 8Q | 11470 | — | 1430 | — | 2999 | — | 5207 | — | 649 | — | 1362 | — |
| 8R | 11719 | — | 1535 | — | 3161 | — | 5320 | — | 697 | — | 1435 | — |
| 8T | 12069 | — | 1580 | — | 2991 | — | 5479 | — | 717 | — | 1358 | — |
| 8U | 12357 | — | 1694 | — | 3180 | — | 5610 | — | 769 | — | 1444 | — |
| 8V | 12645 | — | 1814 | — | 3365 | — | 5741 | — | 824 | — | 1528 | — |
| 8X | 12152 | — | 1522 | — | 3070 | — | 5517 | — | 691 | — | 1394 | — |
| 8Y | 12444 | — | 1632 | — | 3264 | — | 5650 | — | 741 | — | 1482 | — |
| 8Z | 12733 | — | 1752 | — | 3448 | — | 5781 | — | 795 | — | 1565 | — |

*Rigging weights are for standard tubes of standard wall thickness (0.025-in. [0.635 mm] wall).

NOTES:

1. Cooler includes the control panel (ICVC), suction elbow, and 1/2 the distribution piping weight.

2. Condenser includes float valve and sump, discharge elbow, and 1/2 the distribution piping weight.
3. For special tubes refer to the 19XR,XRV Computer Selection Program.
4. All weights for standard 2-pass NIH (nozzle-in-head) design.

Table 7 — 19XR Additional Data for Marine Waterboxes*

| HEAT EXCHANGER FRAME, PASS | ENGLISH | | | | SI | | | | | |
|----------------------------|---------|---------------------|-----------|--------------------|-----------|------|---------------------|-----------|------------------|-----------|
| | PSIG | RIGGING WEIGHT (LB) | | WATER VOLUME (GAL) | | KPA | RIGGING WEIGHT (KG) | | WATER VOLUME (L) | |
| | | COOLER | CONDENSER | COOLER | CONDENSER | | COOLER | CONDENSER | COOLER | CONDENSER |
| FRAME 2, 1 AND 3 PASS | 150 | 730 | — | 84 | — | 1034 | 331 | — | 318 | — |
| FRAME 2, 2 PASS | | 365 | 365 | 42 | 42 | | 166 | 166 | 159 | 159 |
| FRAME 3, 1 AND 3 PASS | | 730 | — | 84 | — | | 331 | — | 318 | — |
| FRAME 3, 2 PASS | | 365 | 365 | 42 | 42 | | 166 | 166 | 159 | 159 |
| FRAME 4, 1 AND 3 PASS | | 1888 | — | 109 | — | | 856 | — | 412 | — |
| FRAME 4, 2 PASS | | 944 | 989 | 54 | 54 | | 428 | 449 | 205 | 205 |
| FRAME 5, 1 AND 3 PASS | | 2445 | — | 122 | — | | 1109 | — | 462 | — |
| FRAME 5, 2 PASS | | 1223 | 1195 | 61 | 60 | | 555 | 542 | 231 | 226 |
| FRAME 6, 1 AND 3 PASS | | 2860 | — | 139 | — | | 1297 | — | 524 | — |
| FRAME 6, 2 PASS | | 1430 | 1443 | 69 | 69 | | 649 | 655 | 262 | 262 |
| FRAME 7, 1 AND 3 PASS | | 3970 | — | 309 | — | | 1801 | — | 1170 | — |
| FRAME 7, 2 PASS | | 1720 | 1561 | 155 | 123 | | 780 | 708 | 585 | 465 |
| FRAME 8, 1 AND 3 PASS | | 5048 | — | 364 | — | | 2290 | — | 1376 | — |
| FRAME 8, 2 PASS | | 2182 | 1751 | 182 | 141 | | 990 | 794 | 688 | 532 |
| FRAME 2, 1 AND 3 PASS | 300 | 860 | — | 84 | — | 2068 | 390 | — | 318 | — |
| FRAME 2, 2 PASS | | 430 | 430 | 42 | 42 | | 195 | 195 | 159 | 159 |
| FRAME 3, 1 AND 3 PASS | | 860 | — | 84 | — | | 390 | — | 318 | — |
| FRAME 3, 2 PASS | | 430 | 430 | 42 | 42 | | 195 | 195 | 159 | 159 |
| FRAME 4, 1 AND 3 PASS | | 2162 | — | 109 | — | | 981 | — | 412 | — |
| FRAME 4, 2 PASS | | 1552 | 1641 | 47 | 47 | | 704 | 744 | 178 | 178 |
| FRAME 5, 1 AND 3 PASS | | 2655 | — | 122 | — | | 1204 | — | 462 | — |
| FRAME 5, 2 PASS | | 1965 | 1909 | 53 | 50 | | 891 | 866 | 199 | 190 |
| FRAME 6, 1 AND 3 PASS | | 3330 | — | 139 | — | | 1510 | — | 524 | — |
| FRAME 6, 2 PASS | | 2425 | 2451 | 58 | 58 | | 1100 | 1112 | 218 | 218 |
| FRAME 7, 1 AND 3 PASS | | 5294 | — | 309 | — | | 2401 | — | 1170 | — |
| FRAME 7, 2 PASS | | 4140 | 4652 | 146 | 94 | | 1878 | 2110 | 553 | 356 |
| FRAME 8, 1 AND 3 PASS | | 6222 | — | 364 | — | | 2822 | — | 1376 | — |
| FRAME 8, 2 PASS | | 4952 | 4559 | 161 | 94 | | 2246 | 2068 | 609 | 355 |

*Add to heat exchanger data for total weights or volumes.

NOTE: For the total weight of a vessel with a marine waterbox, add these values to the heat exchanger weights (or volumes).

Table 8A — 19XR Waterbox Cover Weights — English (lb)

| WATERBOX DESCRIPTION | COOLER | | | | | |
|--------------------------------|------------------|---------|------------------|---------|------------------|---------|
| | FRAME 1 | | FRAME 2 | | FRAME 3 | |
| | STANDARD NOZZLES | FLANGED | STANDARD NOZZLES | FLANGED | STANDARD NOZZLES | FLANGED |
| NIH, 1 Pass Cover, 150 psig | 177 | 204 | 287 | 318 | 287 | 318 |
| NIH, 2 Pass Cover, 150 psig | 185 | 218 | 287 | 340 | 287 | 340 |
| NIH, 3 Pass Cover, 150 psig | 180 | 196 | 294 | 310 | 294 | 310 |
| MWB End Cover, 150 psig | — | — | 315 | 315 | 315 | 315 |
| NIH/MWB Return Cover, 150 psig | 136 | 136 | 243 | 243 | 243 | 243 |
| NIH, 1 Pass Cover, 300 psig | 248 | 301 | 411 | 486 | 411 | 486 |
| NIH, 2 Pass Cover, 300 psig | 255 | 324 | 411 | 518 | 411 | 518 |
| NIH, 3 Pass Cover, 300 psig | 253 | 288 | 433 | 468 | 433 | 468 |
| NIH Plain End Cover, 300 psig | 175 | 175 | 291 | 291 | 291 | 291 |
| MWB End Cover, 300 psig | — | — | 619 | 619 | 619 | 619 |
| MWB Return Cover, 300 psig | — | — | 445 | 445 | 445 | 445 |

| WATERBOX DESCRIPTION | CONDENSER | | | | | |
|--------------------------------|------------------|---------|------------------|---------|------------------|---------|
| | FRAME 1 | | FRAME 2 | | FRAME 3 | |
| | STANDARD NOZZLES | FLANGED | STANDARD NOZZLES | FLANGED | STANDARD NOZZLES | FLANGED |
| NIH, 1 Pass Cover, 150 psig | 177 | 204 | 260 | 297 | 260 | 297 |
| NIH, 2 Pass Cover, 150 psig | 185 | 218 | 265 | 318 | 265 | 318 |
| NIH, 3 Pass Cover, 150 psig | 180 | 196 | 272 | 288 | 272 | 288 |
| MWB End Cover, 150 psig | — | — | 234 | 234 | 234 | 234 |
| NIH/MWB Return Cover, 150 psig | 136 | 136 | 225 | 225 | 225 | 225 |
| NIH, 1 Pass Cover, 300 psig | 248 | 301 | 379 | 454 | 379 | 454 |
| NIH, 2 Pass Cover, 300 psig | 255 | 324 | 379 | 486 | 379 | 486 |
| NIH, 3 Pass Cover, 300 psig | 253 | 288 | 401 | 436 | 401 | 436 |
| NIH Plain End Cover, 300 psig | 175 | 175 | 270 | 270 | 270 | 270 |
| MWB End Cover, 300 psig | — | — | 474 | 474 | 474 | 474 |
| MWB Return Cover, 300 psig | — | — | 359 | 359 | 359 | 359 |

LEGEND
NIH — Nozzle-in-Head
MWB — Marine Waterbox

NOTE: Weight for NIH 2-pass cover, 150 psig, is included in the heat exchanger weights shown in Tables 6A and 6B.

Table 8A — 19XR Waterbox Cover Weights — English (lb) (cont)

| WATERBOX DESCRIPTION | COOLER | | | | | |
|-----------------------------|------------------|---------|------------------|---------|------------------|---------|
| | FRAME 4 | | FRAME 5 | | FRAME 6 | |
| | STANDARD NOZZLES | FLANGED | STANDARD NOZZLES | FLANGED | STANDARD NOZZLES | FLANGED |
| NIH, 1 Pass Cover, 150 psig | 148 | 185 | 168 | 229 | 187 | 223 |
| NIH, 2 Pass Cover, 150 psig | 202 | 256 | 224 | 276 | 257 | 330 |
| NIH, 3 Pass Cover, 150 psig | 473 | 489 | 617 | 634 | 765 | 791 |
| MWB End Cover, 150 psig | 317 | 317 | 393 | 393 | 487 | 487 |
| MWB Return Cover, 150 psig | 138 | 138 | 154 | 154 | 172 | 172 |
| NIH, 1 Pass Cover, 300 psig | 633 | 709 | 764 | 839 | 978 | 1053 |
| NIH, 2 Pass Cover, 300 psig | 626 | 689 | 761 | 867 | 927 | 1078 |
| NIH, 3 Pass Cover, 300 psig | 660 | 694 | 795 | 830 | 997 | 1050 |
| NIH/MWB End Cover, 300 psig | 522 | 522 | 658 | 658 | 834 | 834 |

| WATERBOX DESCRIPTION | CONDENSER | | | | | |
|---|------------------|---------|------------------|---------|------------------|---------|
| | FRAME 4 | | FRAME 5 | | FRAME 6 | |
| | STANDARD NOZZLES | FLANGED | STANDARD NOZZLES | FLANGED | STANDARD NOZZLES | FLANGED |
| NIH, 1 Pass Cover, 150 psig | 148 | 185 | 168 | 229 | 187 | 223 |
| NIH, 2 Pass Cover, 150 psig | 191 | 245 | 224 | 298 | 245 | 330 |
| NIH, 3 Pass Cover, 150 psig | 503 | 519 | 629 | 655 | 772 | 843 |
| MWB End Cover and Bolt-on End Cover, 150 psig | 317 | 317 | 393 | 393 | 487 | 487 |
| NIH/MWB Return Cover, 150 psig | 138 | 138 | 154 | 154 | 172 | 172 |
| NIH, 1 Pass Cover, 300 psig | 633 | 709 | 764 | 839 | 978 | 1053 |
| NIH, 2 Pass Cover, 300 psig | 622 | 729 | 727 | 878 | 923 | 1074 |
| NIH, 3 Pass Cover, 300 psig | 655 | 689 | 785 | 838 | 995 | 1049 |
| NIH/MWB End Cover, 300 psig | 522 | 522 | 658 | 658 | 834 | 834 |

LEGEND

NIH — Nozzle-in-Head
MWB — Marine Waterbox

NOTE: Weight for NIH 2-pass cover, 150 psig, is included in the heat exchanger weights shown in Tables 6A and 6B.

Table 8A — 19XR Waterbox Cover Weights — English (lb) (cont)

| WATERBOX DESCRIPTION | COOLER | | | |
|--------------------------------|------------------|---------|------------------|---------|
| | FRAME 7 | | FRAME 8 | |
| | STANDARD NOZZLES | FLANGED | STANDARD NOZZLES | FLANGED |
| NIH, 1 Pass Cover, 150 psig | 329 | 441 | 417 | 494 |
| NIH, 2 Pass Cover, 150 psig | 426 | 541 | 540 | 693 |
| NIH, 3 Pass Cover, 150 psig | 1250 | 1291 | 1629 | 1687 |
| MWB End Cover, 150 psig | 844 | 844 | 1125 | 1125 |
| NIH/MWB Return Cover, 150 psig | 315 | 315 | 404 | 404 |
| NIH, 1 Pass Cover, 300 psig | 1712 | 1883 | 2359 | 2523 |
| NIH, 2 Pass Cover, 300 psig | 1662 | 1908 | 2369 | 2599 |
| NIH, 3 Pass Cover, 300 psig | 1724 | 1807 | 2353 | 2516 |
| NIH/MWB End Cover, 300 psig | 1378 | 1378 | 1951 | 1951 |

| WATERBOX DESCRIPTION | CONDENSER | | | |
|---------------------------------|------------------|---------|------------------|---------|
| | FRAME 7 | | FRAME 8 | |
| | STANDARD NOZZLES | FLANGED | STANDARD NOZZLES | FLANGED |
| NIH, 1 Pass Cover, 150 psig | 329 | 441 | 417 | 494 |
| NIH, 2 Pass Cover, 150 psig | 404 | 520 | 508 | 662 |
| NIH, 3 Pass Cover, 150 psig | 1222 | 1280 | 1469 | 1527 |
| MWB End Cover, 150 psig | 781 | 781 | 1007 | 1007 |
| Bolt-on MWB End Cover, 150 psig | 700 | 700 | 1307 | 1307 |
| NIH/MWB Return Cover, 150 psig | 315 | 315 | 404 | 404 |
| NIH, 1 Pass Cover, 300 psig | 1690 | 1851 | 1986 | 2151 |
| NIH, 2 Pass Cover, 300 psig | 1628 | 1862 | 1893 | 2222 |
| NIH, 3 Pass Cover, 300 psig | 1714 | 1831 | 1993 | 2112 |
| NIH/MWB End Cover, 300 psig | 1276 | 1276 | 1675 | 1675 |

LEGEND
NIH — Nozzle-in-Head
MWB — Marine Waterbox

NOTE: Weight for NIH 2-pass cover, 150 psig, is included in the heat exchanger weights shown in Tables 6A and 6B.

Table 8B — 19XR Waterbox Cover Weights — SI (kg)

| WATERBOX DESCRIPTION | COOLER | | | | | |
|--------------------------------|------------------|---------|------------------|---------|------------------|---------|
| | FRAME 1 | | FRAME 2 | | FRAME 3 | |
| | STANDARD NOZZLES | FLANGED | STANDARD NOZZLES | FLANGED | STANDARD NOZZLES | FLANGED |
| NIH, 1 Pass Cover, 1034 kPa | 80 | 92 | 130 | 144 | 130 | 144 |
| NIH, 2 Pass Cover, 1034 kPa | 84 | 99 | 130 | 154 | 130 | 154 |
| NIH, 3 Pass Cover, 1034 kPa | 82 | 88 | 133 | 141 | 133 | 141 |
| MWB End Cover, 1034 kPa | — | — | 143 | 143 | 143 | 143 |
| NIH/MWB Return Cover, 1034 kPa | 62 | 62 | 110 | 110 | 110 | 110 |
| NIH, 1 Pass Cover, 2068 kPa | 112 | 137 | 186 | 220 | 186 | 220 |
| NIH, 2 Pass Cover, 2068 kPa | 116 | 147 | 186 | 235 | 186 | 235 |
| NIH, 3 Pass Cover, 2068 kPa | 115 | 131 | 196 | 212 | 196 | 212 |
| NIH Plain End Cover, 2068 kPa | 79 | 79 | 132 | 132 | 132 | 132 |
| MWB End Cover, 2068 kPa | — | — | 281 | 281 | 281 | 281 |
| MWB Return Cover, 2068 kPa | — | — | 202 | 202 | 202 | 202 |

| WATERBOX DESCRIPTION | CONDENSER | | | | | |
|--------------------------------|------------------|---------|------------------|---------|------------------|---------|
| | FRAME 1 | | FRAME 2 | | FRAME 3 | |
| | STANDARD NOZZLES | FLANGED | STANDARD NOZZLES | FLANGED | STANDARD NOZZLES | FLANGED |
| NIH, 1 Pass Cover, 1034 kPa | 80 | 92 | 118 | 135 | 118 | 135 |
| NIH, 2 Pass Cover, 1034 kPa | 84 | 99 | 120 | 144 | 120 | 144 |
| NIH, 3 Pass Cover, 1034 kPa | 82 | 88 | 123 | 131 | 123 | 131 |
| MWB End Cover, 1034 kPa | — | — | 106 | 106 | 106 | 106 |
| NIH/MWB Return Cover, 1034 kPa | 62 | 62 | 102 | 102 | 102 | 102 |
| NIH, 1 Pass Cover, 2068 kPa | 112 | 137 | 172 | 206 | 172 | 206 |
| NIH, 2 Pass Cover, 2068 kPa | 116 | 147 | 172 | 220 | 172 | 220 |
| NIH, 3 Pass Cover, 2068 kPa | 115 | 131 | 182 | 198 | 182 | 198 |
| NIH Plain End Cover, 2068 kPa | 79 | 79 | 122 | 122 | 122 | 122 |
| MWB End Cover, 2068 kPa | — | — | 215 | 215 | 215 | 215 |
| MWB Return Cover, 2068 kPa | — | — | 163 | 163 | 163 | 163 |

LEGEND

NIH — Nozzle-in-Head
MWB — Marine Waterbox

NOTE: Weight for NIH 2-pass cover, 1034 kPa, is included in the heat exchanger weights shown in Tables 6A and 6B.

Table 8B — 19XR Waterbox Cover Weights — SI (kg) (cont)

| WATERBOX DESCRIPTION | COOLER | | | | | |
|--------------------------------|------------------|---------|------------------|---------|------------------|---------|
| | FRAME 4 | | FRAME 5 | | FRAME 6 | |
| | STANDARD NOZZLES | FLANGED | STANDARD NOZZLES | FLANGED | STANDARD NOZZLES | FLANGED |
| NIH, 1 Pass Cover, 1034 kPa | 67 | 84 | 76 | 104 | 85 | 101 |
| NIH, 2 Pass Cover, 1034 kPa | 92 | 116 | 102 | 125 | 117 | 150 |
| NIH, 3 Pass Cover, 1034 kPa | 215 | 222 | 280 | 288 | 347 | 359 |
| MWB End Cover, 1034 kPa | 144 | 144 | 178 | 178 | 221 | 221 |
| NIH/MWB Return Cover, 1034 kPa | 63 | 63 | 70 | 70 | 78 | 78 |
| NIH, 1 Pass Cover, 2068 kPa | 287 | 322 | 347 | 381 | 444 | 478 |
| NIH, 2 Pass Cover, 2068 kPa | 284 | 313 | 345 | 394 | 420 | 489 |
| NIH, 3 Pass Cover, 2068 kPa | 299 | 315 | 361 | 376 | 452 | 476 |
| NIH/MWB End Cover, 2068 kPa | 237 | 237 | 298 | 298 | 378 | 378 |

| WATERBOX DESCRIPTION | CONDENSER | | | | | |
|---|------------------|---------|------------------|---------|------------------|---------|
| | FRAME 4 | | FRAME 5 | | FRAME 6 | |
| | STANDARD NOZZLES | FLANGED | STANDARD NOZZLES | FLANGED | STANDARD NOZZLES | FLANGED |
| NIH, 1 Pass Cover, 1034 kPa | 67 | 84 | 76 | 104 | 85 | 101 |
| NIH, 2 Pass Cover, 1034 kPa | 87 | 111 | 102 | 135 | 111 | 150 |
| NIH, 3 Pass Cover, 1034 kPa | 228 | 235 | 285 | 297 | 350 | 382 |
| MWB End Cover and Bolt-on End Cover, 1034 kPa | 144 | 144 | 178 | 178 | 221 | 221 |
| NIH/MWB Return Cover, 1034 kPa | 63 | 63 | 70 | 70 | 78 | 78 |
| NIH, 1 Pass Cover, 2068 kPa | 287 | 322 | 347 | 381 | 444 | 478 |
| NIH, 2 Pass Cover, 2068 kPa | 282 | 331 | 330 | 393 | 419 | 487 |
| NIH, 3 Pass Cover, 2068 kPa | 297 | 313 | 356 | 376 | 451 | 476 |
| NIH/MWB End Cover, 2068 kPa | 237 | 237 | 298 | 298 | 378 | 378 |

LEGEND

NIH — Nozzle-in-Head
MWB — Marine Waterbox

NOTE: Weight for NIH 2-pass cover, 1034 kPa, is included in the heat exchanger weights shown in Tables 6A and 6B.

Table 8B — 19XR Waterbox Cover Weights — SI (kg) (cont)

| WATERBOX DESCRIPTION | COOLER | | | |
|--------------------------------|------------------|---------|------------------|---------|
| | FRAME 7 | | FRAME 8 | |
| | STANDARD NOZZLES | FLANGED | STANDARD NOZZLES | FLANGED |
| NIH, 1 Pass Cover, 1034 kPa | 149 | 200 | 189 | 224 |
| NIH, 2 Pass Cover, 1034 kPa | 193 | 245 | 245 | 314 |
| NIH, 3 Pass Cover, 1034 kPa | 567 | 586 | 739 | 765 |
| MWB End Cover, 1034 kPa | 383 | 383 | 510 | 510 |
| NIH/MWB Return Cover, 1034 kPa | 143 | 143 | 183 | 183 |
| NIH, 1 Pass Cover, 2068 kPa | 777 | 854 | 1070 | 1144 |
| NIH, 2 Pass Cover, 2068 kPa | 754 | 865 | 1075 | 1179 |
| NIH, 3 Pass Cover, 2068 kPa | 782 | 820 | 1067 | 1141 |
| NIH/MWB End Cover, 2068 kPa | 625 | 625 | 885 | 885 |

| WATERBOX DESCRIPTION | CONDENSER | | | |
|---------------------------------|------------------|---------|------------------|---------|
| | FRAME 7 | | FRAME 8 | |
| | STANDARD NOZZLES | FLANGED | STANDARD NOZZLES | FLANGED |
| NIH, 1 Pass Cover, 1034 kPa | 149 | 200 | 189 | 224 |
| NIH, 2 Pass Cover, 1034 kPa | 183 | 236 | 230 | 300 |
| NIH, 3 Pass Cover, 1034 kPa | 554 | 580 | 666 | 693 |
| MWB End Cover, 1034 kPa | 354 | 354 | 457 | 457 |
| Bolt-on MWB End Cover, 1034 kPa | 318 | 318 | 593 | 593 |
| NIH/MWB Return Cover, 1034 kPa | 143 | 143 | 183 | 183 |
| NIH, 1 Pass Cover, 2068 kPa | 767 | 840 | 901 | 976 |
| NIH, 2 Pass Cover, 2068 kPa | 738 | 845 | 859 | 1008 |
| NIH, 3 Pass Cover, 2068 kPa | 777 | 831 | 904 | 958 |
| NIH/MWB End Cover, 2068 kPa | 579 | 579 | 760 | 760 |

LEGEND

NIH — Nozzle-in-Head
MWB — Marine Waterbox

NOTE: Weight for NIH 2-pass cover, 1034 kPa, is included in the heat exchanger weights shown in Tables 6A and 6B.

RIG MACHINE COMPONENTS — Refer to instructions below, Fig. 7-10, and Carrier Certified Prints for machine component disassembly.

IMPORTANT: Only a qualified service technician should perform this operation.

⚠ WARNING

Do not attempt to disconnect flanges while the machine is under pressure. Failure to relieve pressure can result in personal injury or damage to the unit.

⚠ CAUTION

Before rigging the compressor, disconnect all wires entering the power panel to avoid unit damage.

NOTE: If the cooler and condenser vessels must be separated, the heat exchangers should be kept level by placing a support plate under the tube sheets. The support plate will also help to keep the vessels level and aligned when the vessels are bolted back together.

NOTE: Wiring must also be disconnected. Label each wire before removal (see Carrier Certified Prints). In order to disconnect the starter from the machine, remove wiring for the oil pump, oil heater, control wiring at the power panel, and the main motor leads at the starter lugs.

Remove all transducer and sensor wires at the sensor. Clip all wire ties necessary to pull heat exchangers apart.

To Separate Cooler and Condenser:

1. Place a support plate under each tube sheet to keep each vessel level (Fig. 7, Item 6).
2. Cut the refrigerant motor cooling line at the location shown (Fig. 7, Item 7).
3. Disconnect the compressor discharge elbow at the compressor (Fig. 8, Item 6).
4. Cut the hot gas bypass line at the location shown (Fig. 7, Item 1).
5. Unbolt the cooler liquid feed line at the location shown (Fig. 7, Item 10).
6. Cover all openings.
7. Disconnect all wires and cables that cross from the cooler side of the machine to the condenser side, including:
 - a. temperature sensor cable at the waterbox (Fig. 9, Item 5)

- b. water-side transducer cables at the transducer (Fig. 9, Item 4)
 - c. condenser transducer cable at the transducer (Fig. 9, Item 7)
 - d. motor power wires at the starter (Fig. 7, Item 4)
 - e. wires and cable housings at the power panel that cross from the starter to the power panel (Fig. 8, Item 2).
8. Disconnect the rabbet-fit connectors on the tube sheets (Fig. 7, Item 5).
 9. Rig the vessels apart.

To Separate the Compressor from the Cooler:

1. Unbolt the compressor suction elbow at the cooler flange (Fig. 7, Item 2).
2. Cut the refrigerant motor cooling line at the location shown (Fig. 7, Item 7).
3. Disconnect the motor refrigerant return line (Fig. 7, Item 8).
4. Disconnect the following:
 - a. compressor oil sump temperature sensor cable (Fig. 10, Item 4)
 - b. bearing temperature sensor cable (Fig. 10, Item 2)
 - c. motor temperature sensor cable (Fig. 10, Item 1)
 - d. wires and cable housings that cross from the power panel to the starter and control panel (Fig. 8, Item 2)
 - e. discharge temperature sensor cable (Fig. 10, Item 6)
 - f. compressor oil sump pressure cable (Fig. 10, Item 3)

- g. compressor oil discharge pressure cable (Fig. 10, Item 5)
- h. guide vane actuator cable (Fig. 8, Item 1)
- i. diffuser actuator cable (Frame 5 compressor and Frame 4 units with split ring diffuser) — split ring diffuser not shown (Fig. 9, Item 2)
- j. diffuser pressure cable (Frame 5 compressor and Frame 4 units with split ring diffuser) (Fig. 10, Item 8).

5. Disconnect the flared fitting for the oil reclaim line (Fig. 7, Item 3).
6. Unbolt the compressor discharge elbow (Fig. 8, Item 6).
7. Cover all openings.
8. Disconnect motor power cables at the starter lugs (Fig. 7, Item 4).
9. Unbolt the compressor mounting from the cooler (Fig. 7, Item 9).

To Rig Compressor:

NOTE: The motor end of the 19XR compressor is heavy and will tip backwards unless these directions are followed:

1. Cut two 4 in. x 6 in. wooden beams to the same length as the compressor.
2. Drill holes into the beams and bolt them to the base of the compressor.

Additional Notes

1. Use silicon grease on new O-rings when refitting.
2. Use gasket sealant on new gaskets when refitting.
3. Cooler and condenser vessels may be rigged vertically. Rigging should be fixed to all 4 corners of the tube sheet.



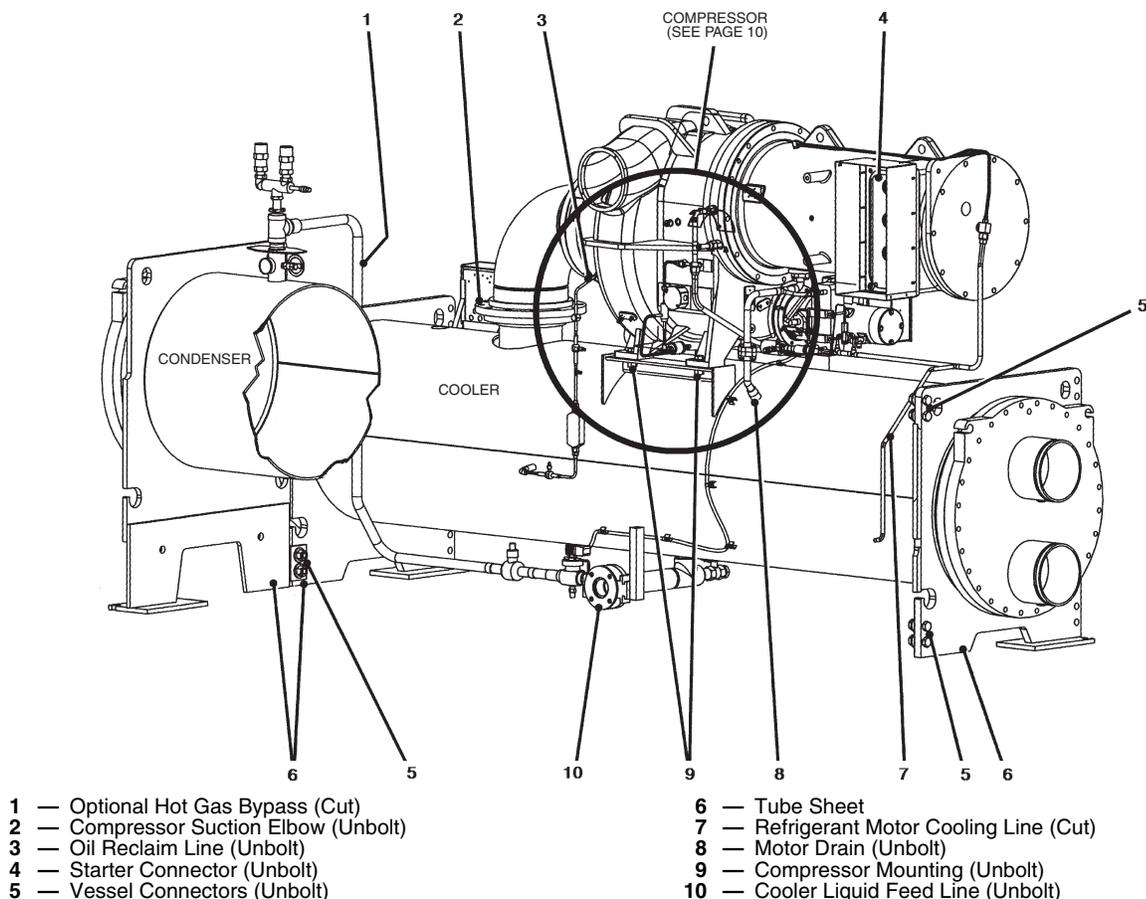


Fig. 7 — Cooler, Side View

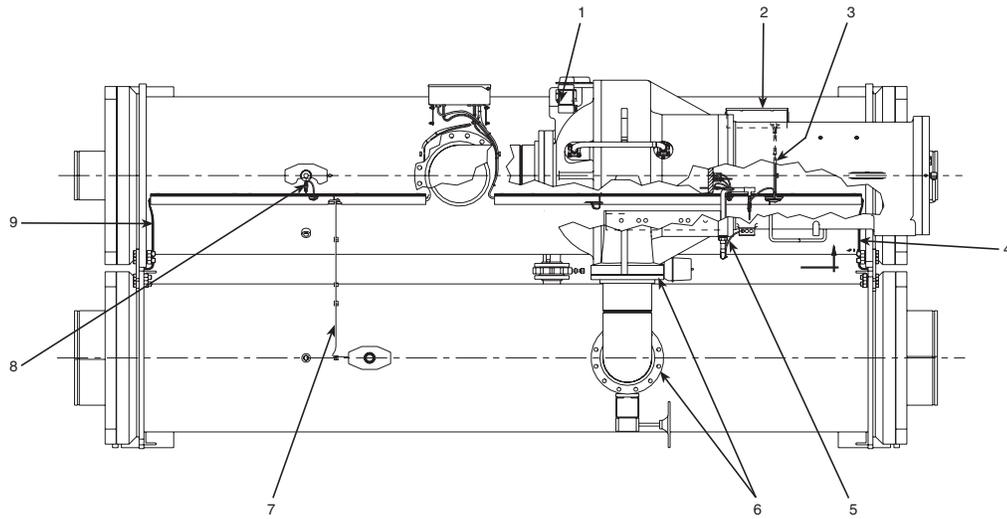


- | | |
|-------------------------------------|---------------------------------------|
| 1 — Guide Vane Actuator Cable | 6 — Compressor Discharge Elbow Joints |
| 2 — Power Panel | 7 — Condenser Pressure Cable |
| 3 — Communication Cable | 8 — Cooler Pressure Connection |
| 4 — Water Sensor Cables | 9 — Water Sensor Cables |
| 5 — Motor Winding Temperature Cable | |

Fig. 8 — 19XR Chiller Top View

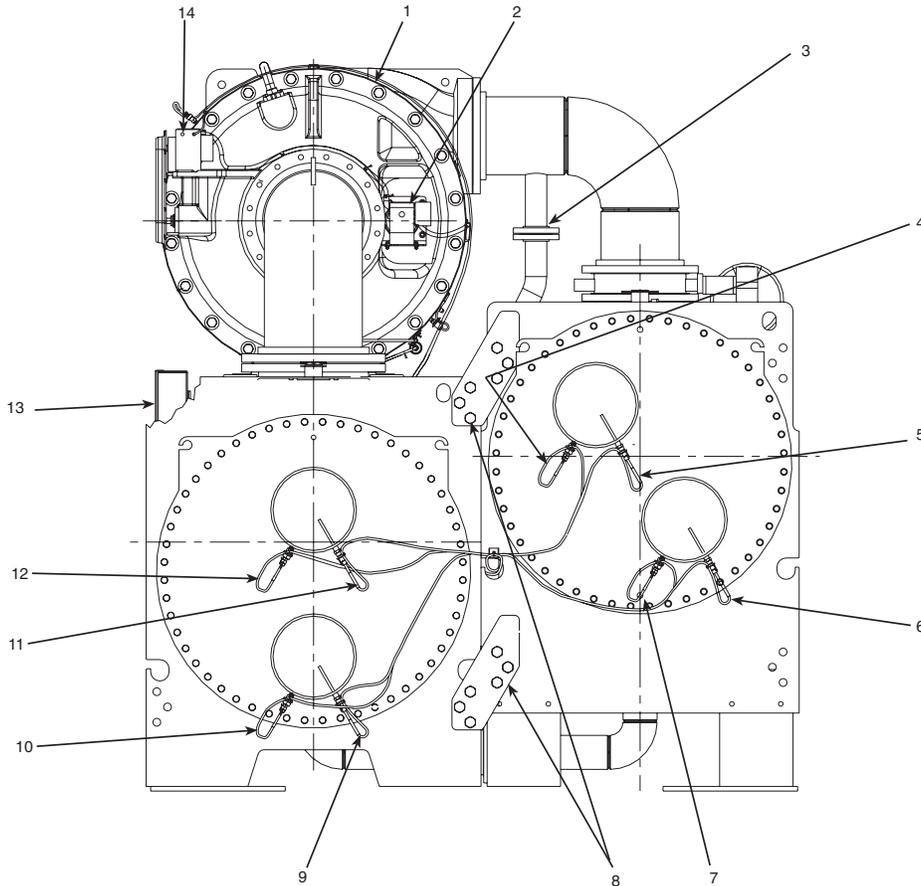

- | | |
|---|--|
| 1 — Guide Vane Actuator Cables | 9 — Cooler Entering Water Temperature Cable |
| 2 — Diffuser Actuator (Frame 5 Compressor, Frame 4 Optional) | 10 — Cooler Entering Water Pressure Cable (Optional for ICVC Units) |
| 3 — Hot Gas Bypass Line (Optional) | 11 — Cooler Leaving Water Temperature Cable |
| 4 — Condenser Leaving Water Pressure Cable (Optional for ICVC Units) | 12 — Cooler Leaving Water Pressure Cable (Optional for ICVC Units) |
| 5 — Condenser Leaving Water Temperature Cable | 13 — Chiller Visual Controller (CVC) or International Chiller Visual Controller (ICVC) |
| 6 — Condenser Entering Water Temperature Cable | 14 — Guide Vane Actuator |
| 7 — Condenser Entering Water Pressure Cable (Optional for ICVC Units) | |
| 8 — Vessel Take-Apart Connectors | |

Fig. 9 — Chiller End View

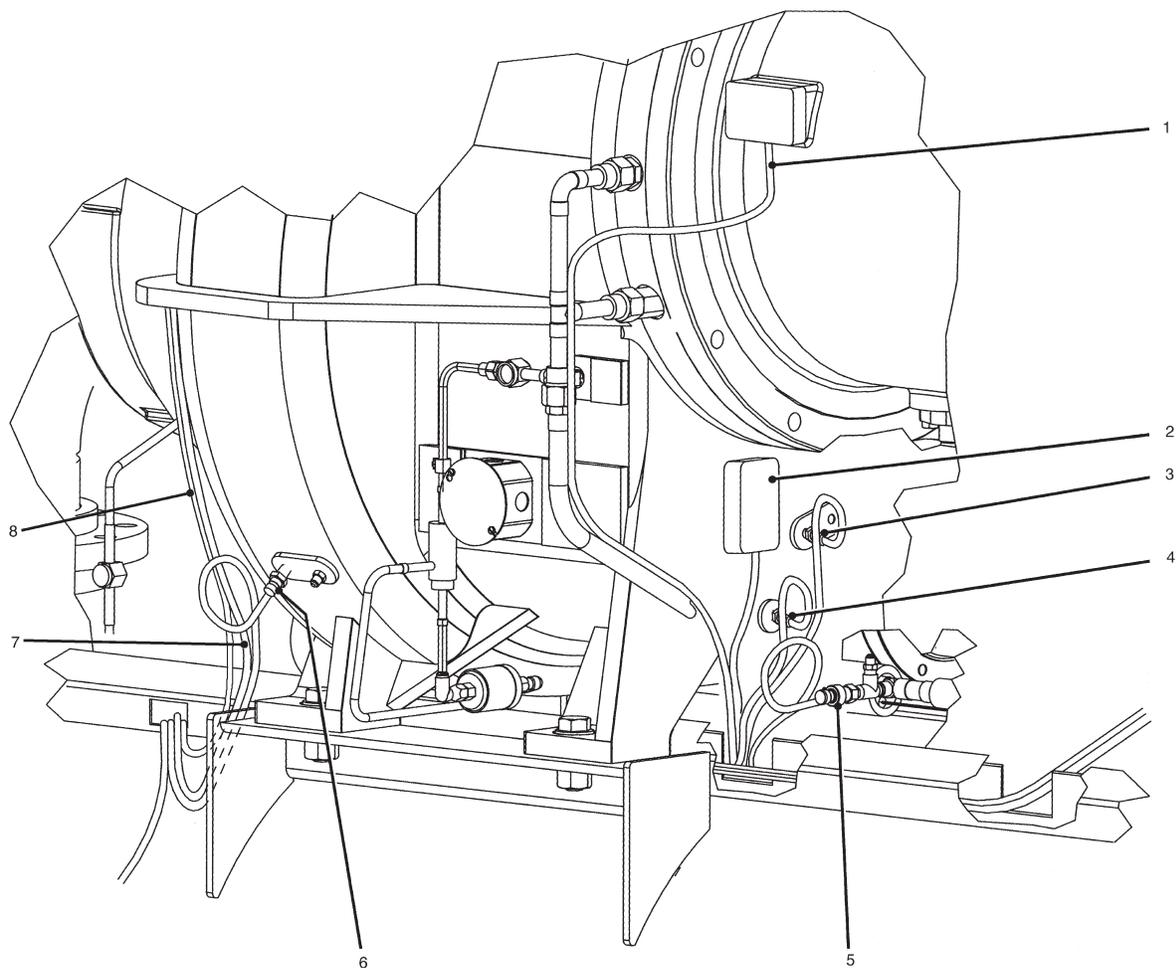

- | | |
|--|--|
| <ul style="list-style-type: none"> 1 — Motor Temperature Sensor Cable 2 — Bearing Temperature Sensor Cable Connection (Inside Box) 3 — Compressor Oil Sump Pressure Cable 4 — Compressor Oil Sump Temperature Sensor Cable | <ul style="list-style-type: none"> 5 — Compressor Oil Discharge Pressure Cable 6 — Discharge Temperature Sensor Cable 7 — Guide Vane Actuator Cable 8 — Diffuser Pressure and Actuator Cable (Frame 5 Compressor Only, Optional for Frame 4) |
|--|--|

Fig. 10 — Compressor Detail

Step 3 — Install Machine Supports

INSTALL STANDARD ISOLATION — Figures 11 and 12 show the position of support plates and shear flex pads, which together form the standard machine support system.


IMPORTANT: Chiller housekeeping pad, anchor bolts, and attachment points that are designed by others must be in accordance with all applicable national and local codes.

INSTALL ACCESSORY ISOLATION (IF REQUIRED) — Uneven floors or other considerations may dictate the use of accessory soleplates (supplied by Carrier for field installation) and leveling pads. Refer to Fig. 11 and 13.

Level machine by using jacking screws in isolation soleplates. Use a level at least 24-in. (600 mm) long.

For adequate and long lasting machine support, proper grout selection and placement is essential. Carrier recommends that only pre-mixed, epoxy type, non-shrinking grout be used for machine installation. Follow manufacturer's instructions in applying grout.

1. Check machine location prints for required grout thickness.
2. Carefully wax jacking screws for easy removal from grout.
3. Grout must extend above the base of the soleplate and there must be no voids in grout beneath the plates.
4. Allow grout to set and harden, per manufacturer's instructions, before starting machine.
5. Remove jacking screws from leveling pads after grout has hardened.

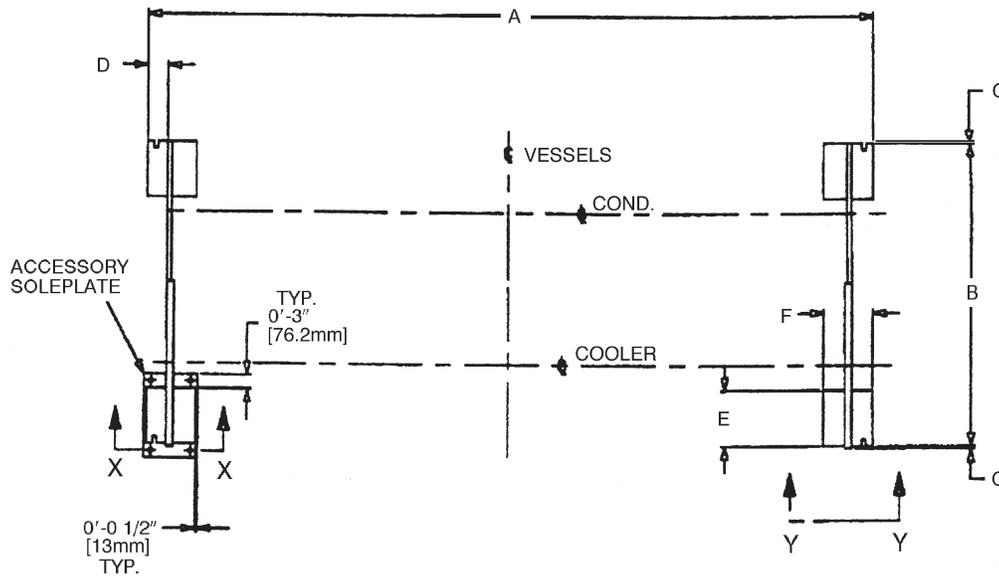

| 19XR, XRV HEAT EXCHANGER SIZE | DIMENSIONS | | | | | | | | | | | | | |
|-------------------------------------|------------|------|----------|------|---------|----|-----------|-----|---------|-----|--------|-----|---------|----|
| | A | | B | | C | | D | | E | | F | | G | |
| | FT-IN. | MM | FT-IN. | MM | FT-IN. | MM | FT-IN. | MM | FT-IN. | MM | FT-IN. | MM | FT-IN. | MM |
| 10-12 | 10- 7/4 | 3232 | 4-10 1/4 | 1480 | 0-1 | 25 | 0-3 5/8 | 92 | 1-3 1/4 | 382 | 0-9 | 229 | 0-1 1/2 | 13 |
| 15-17 | 12-10 3/4 | 3931 | 4-10 1/4 | 1480 | 0-1 | 25 | 0-3 5/8 | 92 | 1-3 1/4 | 382 | 0-9 | 229 | 0-1 1/2 | 13 |
| 20-22 | 10- 7/4 | 3232 | 5- 4 1/4 | 1632 | 0-1 | 25 | 0-3 5/8 | 92 | 1-3 1/4 | 382 | 0-9 | 229 | 0-1 1/2 | 13 |
| 30-32 | 12-10 3/4 | 3931 | 5- 4 1/4 | 1632 | 0 | 0 | 0-3 5/8 | 92 | 1-3 1/4 | 382 | 0-9 | 229 | 0-1 1/2 | 13 |
| 35-37 | 14- 7/4 | 4451 | 5- 4 1/4 | 1632 | 0 | 0 | 0-3 5/8 | 92 | 1-3 1/4 | 382 | 0-9 | 229 | 0-1 1/2 | 13 |
| 40-42 | 12-10 3/4 | 3931 | 6- 0 | 1829 | 0-1 1/2 | 38 | 0-3 5/8 | 92 | 1-3 1/4 | 382 | 0-9 | 229 | 0-1 1/2 | 13 |
| 45-47 | 14- 7/4 | 4451 | 6- 0 | 1829 | 0-1 1/2 | 38 | 0-3 5/8 | 92 | 1-3 1/4 | 382 | 0-9 | 229 | 0-1 1/2 | 13 |
| 50-54, 5A-5C, 5K-5R | 12-10 3/4 | 3931 | 6- 5 1/2 | 1968 | 0- 1/2 | 13 | 0-3 5/8 | 92 | 1-3 1/4 | 382 | 0-9 | 229 | 0-1 1/2 | 13 |
| 55-59, 5F-5H, 5T-5Z | 14- 7/4 | 4451 | 6- 5 1/2 | 1968 | 0- 1/2 | 13 | 0-3 5/8 | 92 | 1-3 1/4 | 382 | 0-9 | 229 | 0-1 1/2 | 13 |
| 60-64, 6K-6R | 12-10 3/4 | 3931 | 6- 9 1/2 | 2070 | 0- 1/2 | 13 | 0-3 5/8 | 92 | 1-3 1/4 | 382 | 0-9 | 229 | 0-1 1/2 | 13 |
| 65-69, 6T-6Z | 14- 7/4 | 4451 | 6- 9 1/2 | 2070 | 0- 1/2 | 13 | 0-3 5/8 | 92 | 1-3 1/4 | 382 | 0-9 | 229 | 0-1 1/2 | 13 |
| 70-74, 7K-7R | 15- 1 7/8 | 4620 | 7-10 1/2 | 2400 | 0- 1/4 | 6 | 0-6 15/16 | 176 | 1-10 | 559 | 1-4 | 406 | 0-3/4 | 19 |
| 75-79, 7T-7Z | 17- 1 7/8 | 5229 | 7-10 1/2 | 2400 | 0- 1/4 | 6 | 0-6 15/16 | 176 | 1-10 | 559 | 1-4 | 406 | 0-3/4 | 19 |
| 80-84, 8K-8R | 15- 1 7/8 | 4620 | 8- 9 3/4 | 2686 | 0-15/16 | 24 | 0-6 15/16 | 176 | 1-10 | 559 | 1-4 | 406 | 0-1/16 | 2 |
| 85-89, 8T-8Z | 17- 1 7/8 | 5229 | 8- 9 3/4 | 2686 | 0-15/16 | 24 | 0-6 15/16 | 176 | 1-10 | 559 | 1-4 | 406 | 0-1/16 | 2 |


Fig. 11 — 19XR, XRV Machine Footprint

INSTALL SPRING ISOLATION — Spring isolation may be purchased as an accessory from Carrier for field installation. It may also be field supplied and installed. Spring isolators may be placed directly under machine support plates or located under machine soleplates. See Fig. 14. Consult job data for specific arrangement. Low profile spring isolation assemblies can be field supplied to keep the machine at a convenient working height.

Obtain specific details on spring mounting and machine weight distribution from job data. Also, check job data for methods to support and isolate pipes that are attached to spring isolated machines.

NOTE: It is recommended that any installation other than the ground floor should have spring isolation for the chiller and piping vibration isolation.

NOTE: These isolators are not intended for seismic duty, but are intended to reduce the vibration and noise levels transmitted from the chiller to the surrounding environment. For installations adjacent to areas that are sensitive to noise and/or vibration, use the services of a qualified consulting engineer or acoustics expert to determine whether these springs will provide adequate noise/vibration suppression.

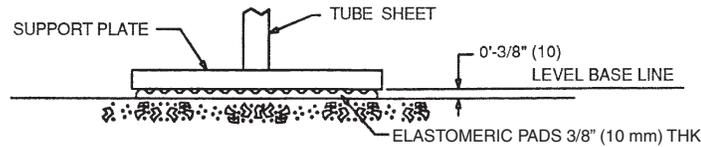


NOTES:


1. Dimensions in () are in millimeters.
2. Isolation package includes 4 elastomeric pads.

VIEW Y-Y

Fig. 12 — Standard Isolation

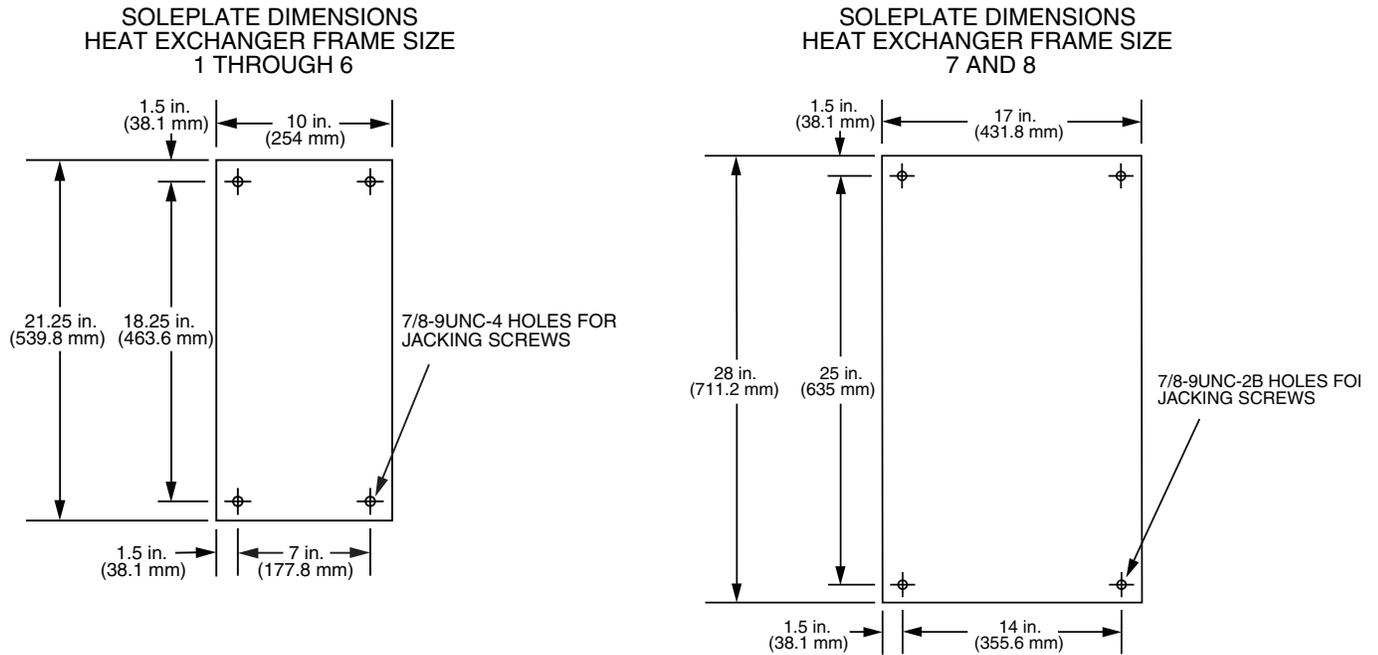

ACCESSORY SOLEPLATE DETAIL

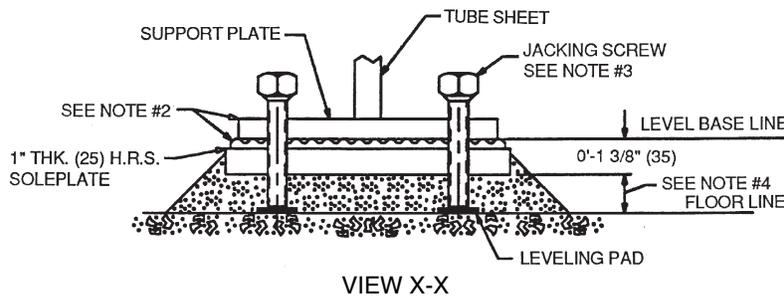


LEGEND

HRS — Hot Rolled Steel

NOTES:

1. Dimensions in () are in millimeters.
2. Accessory (Carrier supplied, field installed) soleplate package includes 4 soleplates, 16 jacking screws and leveling pads.
3. Jacking screws to be removed after grout has set.
4. Thickness of grout will vary, depending on the amount necessary to level chiller. Use only pre-mixed non-shrinking grout, Ceilcote 748 or Chemrex Embeco 636 Plus Grout, 1½ in. (38.1 mm) to 2¼ in. (57.2 mm) thick.

Fig. 13 — Accessory Isolation

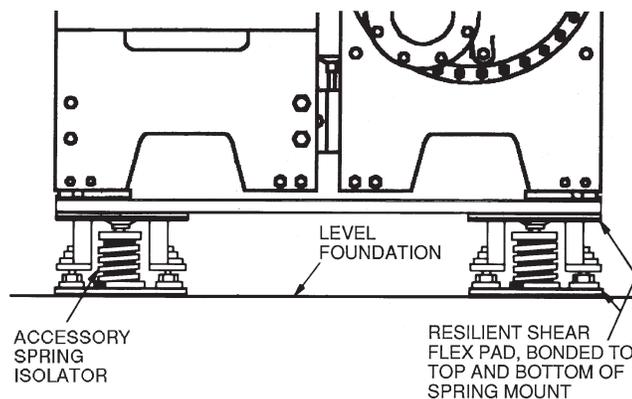

NOTE: The accessory spring isolators are supplied by Carrier for installation in the field.

Fig. 14 — 19XR Accessory Spring Isolation (Shown with Accessory Soleplates)

Step 4 — Connect Piping

INSTALL WATER PIPING TO HEAT EXCHANGERS — Refer to Table 9 for nozzle sizes. Install piping using job data, piping drawings, and procedures outlined below. A typical piping installation is shown in Fig. 15.

⚠ CAUTION

Factory-supplied insulation is not flammable but can be damaged by welding sparks and open flame. Protect insulation with a wet canvas cover.

⚠ CAUTION

To prevent damage to sensors, remove chilled and condenser water temperature sensors before welding connecting piping to water nozzles. Refer to Fig. 9. Replace sensors after welding is complete.

⚠ CAUTION

When flushing the water systems, isolate the chiller from the water circuits to prevent damage to the heat exchanger tubes.

1. Offset pipe flanges to permit removal of waterbox cover for maintenance and to provide clearance for pipe cleaning. No flanges are necessary with marine waterbox option; however, water piping should not cross in front of the waterbox or access will be blocked.
2. Provide openings in water piping for required pressure gages and thermometers. For thorough mixing and temperature stabilization, wells in the leaving water pipe should extend inside pipe at least 2 in. (50 mm).
3. Install air vents at all high points in piping to remove air and prevent water hammer.
4. Field-installed piping must be arranged and supported to avoid stress on the equipment and transmission of vibration from the equipment as well as to prevent interference with routine access for the reading, adjusting, and servicing of the equipment. Provisions should be made

for adjusting the piping in each plane and for periodic and major servicing of the equipment.

5. Water flow direction must be as specified in Fig. 16-19.
NOTE: Entering water is always the lower of the 2 nozzles. Leaving water is always the upper nozzle for cooler or condenser.
6. Install waterbox vent and drain piping in accordance with individual job data. All connections are $\frac{3}{4}$ -in. FPT.
7. Install waterbox drain plugs in the unused waterbox drains and vent openings.
8. Install optional pumpout system or pumpout system and storage tank as shown in Fig. 20-23.
9. Isolation valves are recommended on the cooler and condenser piping to each chiller for service.
10. Apply appropriate torque on the retaining bolts in a criss-cross pattern for the waterbox covers before insulating the waterbox cover. The gasket can relax during transportation and storage, and the waterbox cover requires retightening of the bolts.


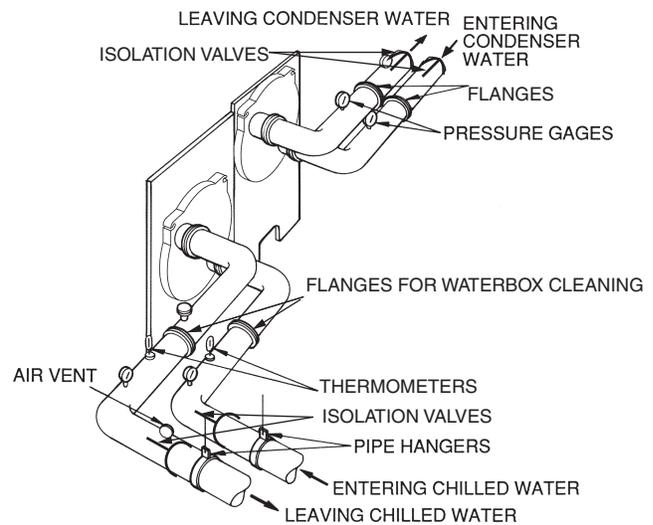


Fig. 15 — Typical Nozzle Piping


NOZZLE-IN HEAD WATERBOXES

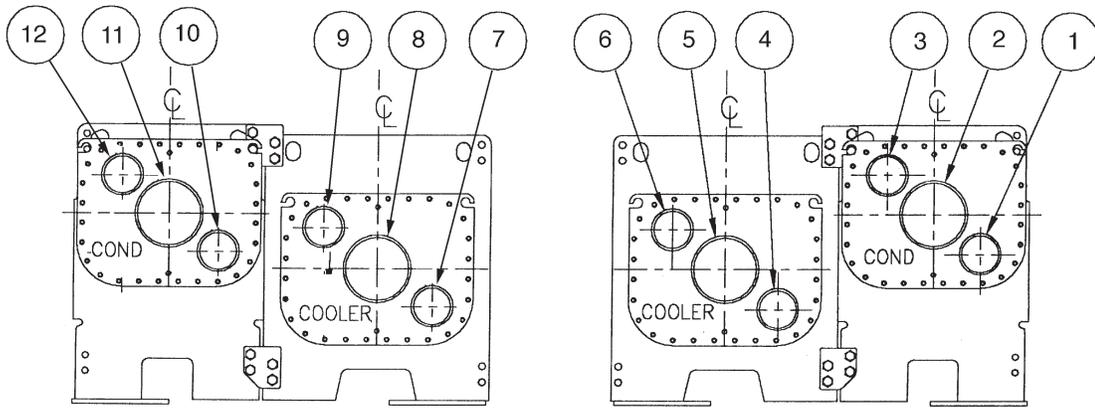

DRIVE END

COMPRESSOR END

FRAMES 1, 2, AND 3

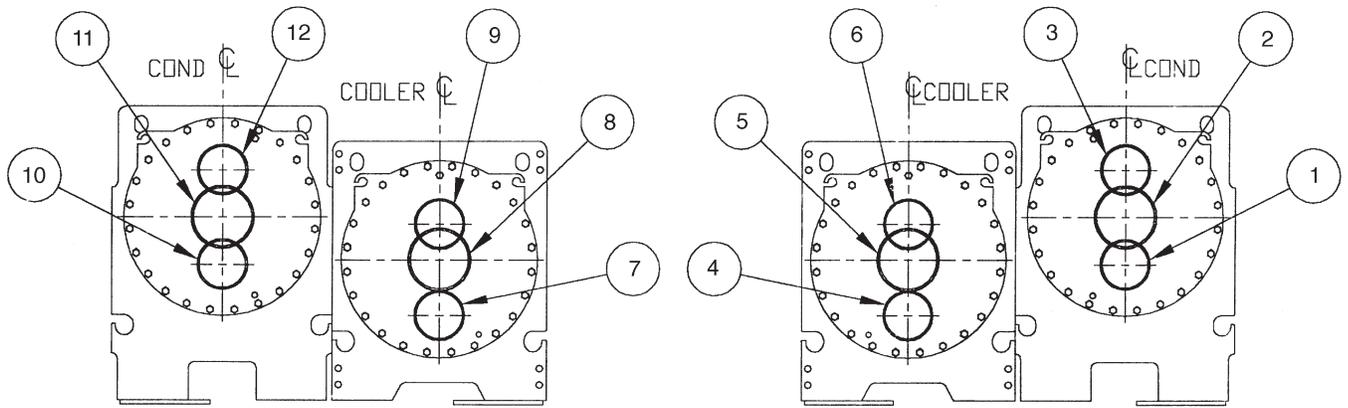

DRIVE END

COMPRESSOR END

FRAMES 4, 5, AND 6

NOZZLE ARRANGEMENT CODES FOR ALL 19XR NOZZLE-IN-HEAD WATERBOXES


| PASS | COOLER WATERBOXES | | |
|------|-------------------|-----|-------------------|
| | IN | OUT | ARRANGEMENT CODE* |
| 1 | 8 | 5 | A |
| | 5 | 8 | B |
| 2 | 7 | 9 | C |
| | 4 | 6 | D |
| 3 | 7 | 6 | E |
| | 4 | 9 | F |

| PASS | CONDENSER WATERBOXES | | |
|------|----------------------|-----|-------------------|
| | IN | OUT | ARRANGEMENT CODE* |
| 1 | 11 | 2 | P |
| | 2 | 11 | Q |
| 2 | 10 | 12 | R |
| | 1 | 3 | S |
| 3 | 10 | 3 | T |
| | 1 | 12 | U |

*Refer to certified drawings.

Fig. 16 — Piping Flow Data (NIH, Frames 1 Through 6)

NOZZLE-IN HEAD WATERBOXES

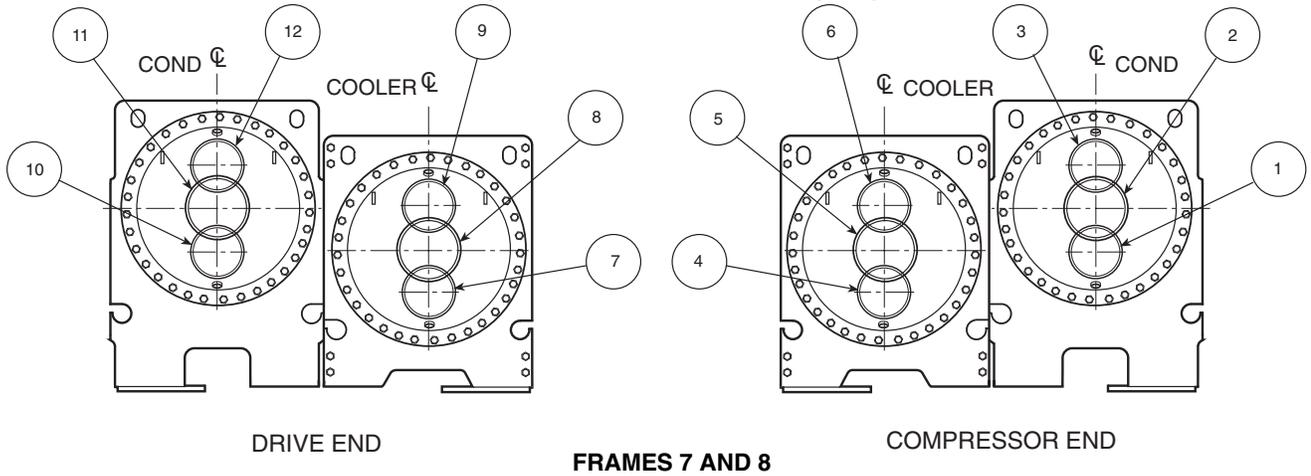

NOZZLE ARRANGEMENT CODES FOR ALL 19XR NOZZLE-IN-HEAD WATERBOXES

| PASS | COOLER WATERBOXES | | |
|------|-------------------|-----|-------------------|
| | IN | OUT | ARRANGEMENT CODE* |
| 1 | 8 | 5 | A |
| | 5 | 8 | B |
| 2 | 7 | 9 | C |
| | 4 | 6 | D |
| 3 | 7 | 6 | E |
| | 4 | 9 | F |

| PASS | CONDENSER WATERBOXES | | |
|------|----------------------|-----|-------------------|
| | IN | OUT | ARRANGEMENT CODE* |
| 1 | 11 | 2 | P |
| | 2 | 11 | Q |
| 2 | 10 | 12 | R |
| | 1 | 3 | S |
| 3 | 10 | 3 | T |
| | 1 | 12 | U |


*Refer to certified drawings.

Fig. 17 — Piping Flow Data (NIH, Frames 7 and 8)

MARINE WATERBOXES

NOTE :
COOLER 3-PASS NOZZLE @ 45°
(NOT SHOWN) SIMILIAR TO
CONDENSER 2-PASS

NOTE :
COOLER 3-PASS NOZZLE @ 45°
(NOT SHOWN) SIMILIAR TO
CONDENSER 2-PASS

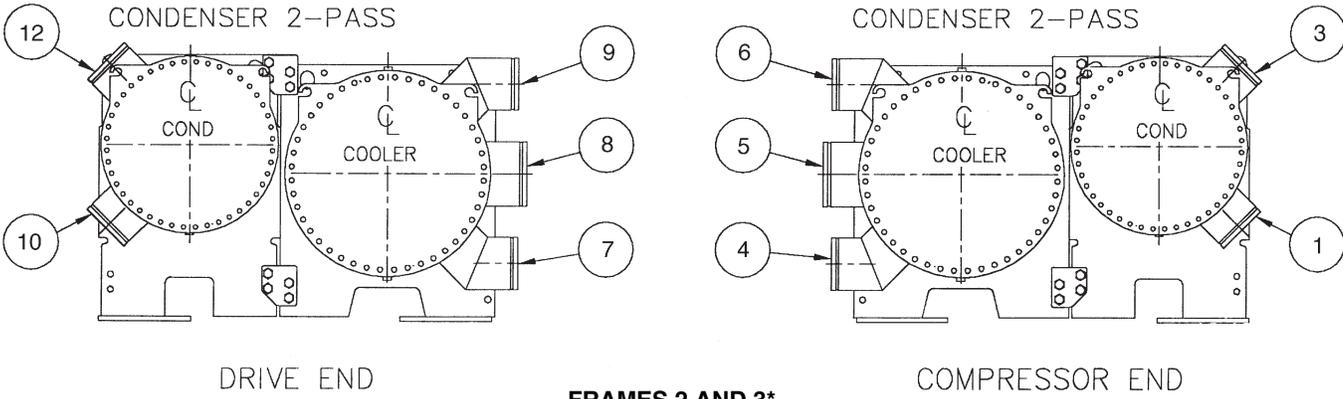


*There is no Frame 1 marine waterbox.

NOZZLE ARRANGEMENT CODES

| PASS | COOLER WATERBOXES | | | CONDENSER WATERBOXES | | |
|------|-------------------|-----|------------------|----------------------|-----|------------------|
| | IN | OUT | ARRANGEMENT CODE | IN | OUT | ARRANGEMENT CODE |
| 1 | 8 | 5 | A | — | — | — |
| | 5 | 8 | B | — | — | — |
| 2 | 7 | 9 | C | 10 | 12 | R |
| | 4 | 6 | D | 1 | 3 | S |
| 3 | 7 | 6 | E | — | — | — |
| | 4 | 9 | F | — | — | — |

Fig. 18 — Piping Flow Data (MWB, Frames 2 and 3)


MARINE WATERBOXES

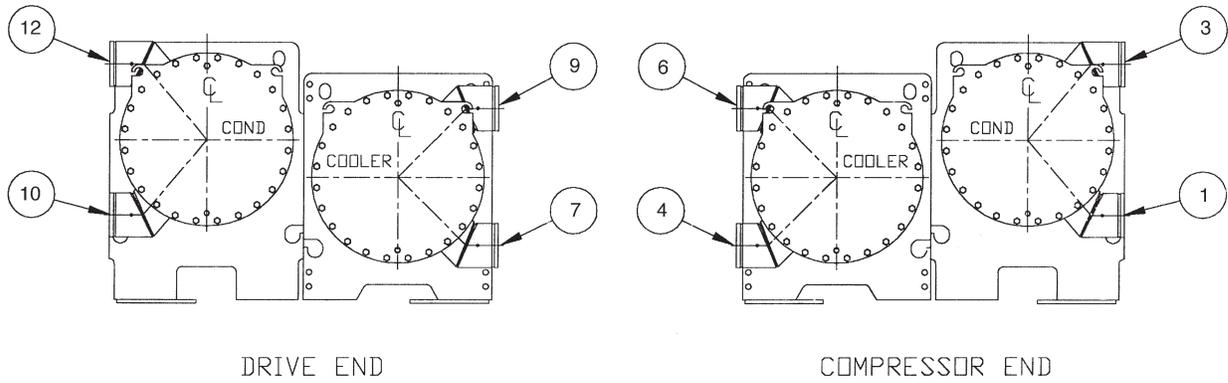

FRAMES 4, 5, AND 6

NOZZLE ARRANGEMENT CODES

| PASS | COOLER WATERBOXES | | | CONDENSER WATERBOXES | | |
|------|-------------------|-----|------------------|----------------------|-----|------------------|
| | IN | OUT | ARRANGEMENT CODE | IN | OUT | ARRANGEMENT CODE |
| 1 | 9 | 6 | A | — | — | — |
| | 6 | 9 | B | — | — | — |
| 2 | 7 | 9 | C | 10 | 12 | R |
| | 4 | 6 | D | 1 | 3 | S |
| 3 | 7 | 6 | E | — | — | — |
| | 4 | 9 | F | — | — | — |

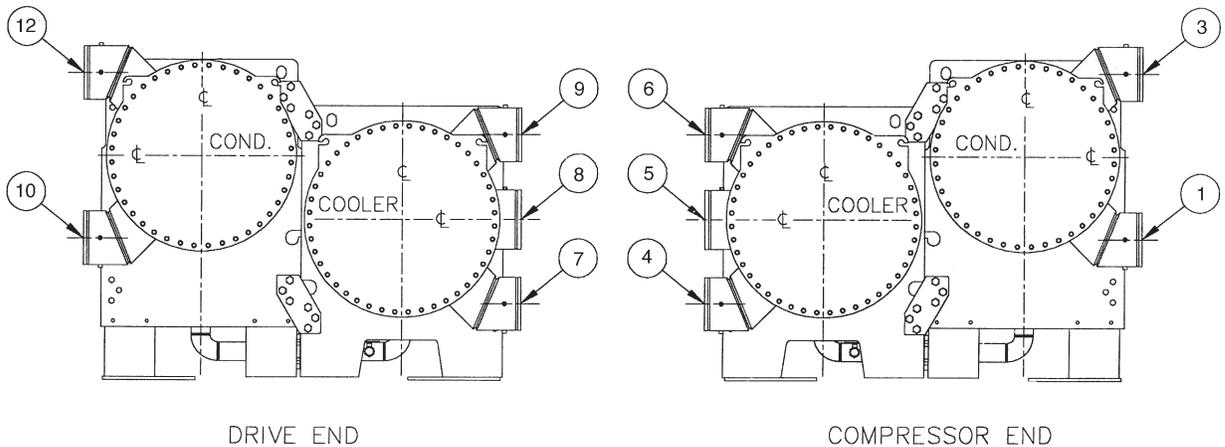

FRAMES 7 AND 8


NOZZLE ARRANGEMENT CODES

| PASS | COOLER WATERBOXES | | | CONDENSER WATERBOXES | | |
|------|-------------------|-----|------------------|----------------------|-----|------------------|
| | IN | OUT | ARRANGEMENT CODE | IN | OUT | ARRANGEMENT CODE |
| 1 | 8 | 5 | A | — | — | — |
| | 5 | 8 | B | — | — | — |
| 2 | 7 | 9 | C | 10 | 12 | R |
| | 4 | 6 | D | 1 | 3 | S |
| 3 | 7 | 6 | E | — | — | — |
| | 4 | 9 | F | — | — | — |

Fig. 19 — Piping Flow Data (MWB, Frames 4 Through 8)

Table 9 — 19XR Waterbox Nozzle Sizes

| FRAME SIZE | PRESSURE PSIG (KPA) | PASS | NOMINAL PIPE SIZE (IN.) | | ACTUAL PIPE ID (IN.) | |
|------------|------------------------|------|-------------------------|-----------|----------------------|-----------|
| | | | COOLER | CONDENSER | COOLER | CONDENSER |
| 1 | 150/300 (1034/2068) | 1 | 8 | 8 | 7.981 | 7.981 |
| | | 2 | 6 | 6 | 6.065 | 6.065 |
| | | 3 | 6 | 6 | 6.065 | 6.065 |
| 2 | 150/300 (1034/2068) | 1 | 10 | 10 | 10.020 | 10.020 |
| | | 2 | 8 | 8 | 7.981 | 7.981 |
| | | 3 | 6 | 6 | 6.065 | 6.065 |
| 3 | 150/300 (1034/2068) | 1 | 10 | 10 | 10.020 | 10.020 |
| | | 2 | 8 | 8 | 7.981 | 7.981 |
| | | 3 | 6 | 6 | 6.065 | 6.065 |
| 4 | 150/300 (1034/2068) | 1 | 10 | 10 | 10.020 | 10.020 |
| | | 2 | 8 | 8 | 7.981 | 7.981 |
| | | 3 | 6 | 6 | 6.065 | 6.065 |
| 5 | 150/300 (1034/2068) | 1 | 10 | 10 | 10.020 | 10.020 |
| | | 2 | 8 | 10 | 7.981 | 10.020 |
| | | 3 | 6 | 8 | 6.065 | 7.981 |
| 6 | 150/300 (1034/2068) | 1 | 10 | 10 | 10.020 | 10.020 |
| | | 2 | 10 | 10 | 10.020 | 10.020 |
| | | 3 | 8 | 8 | 7.981 | 7.981 |
| 7 | 150 (1034) | 1 | 14 | 14 | 13.250 | 13.250 |
| | | 2 | 12 | 12 | 12.000 | 12.000 |
| | | 3 | 10 | 12 | 10.020 | 12.000 |
| | 300 (2068) | 1 | 14 | 14 | 12.500 | 12.500 |
| | | 2 | 12 | 12 | 11.376 | 11.750 |
| | | 3 | 10 | 12 | 9.750 | 11.750 |
| 8 | 150 (1034) | 1 | 14 | 14 | 13.250 | 13.250 |
| | | 2 | 14 | 14 | 13.250 | 13.250 |
| | | 3 | 12 | 12 | 12.000 | 12.000 |
| | 300 (2068) | 1 | 14 | 14 | 12.500 | 12.500 |
| | | 2 | 14 | 14 | 12.500 | 12.500 |
| | | 3 | 12 | 12 | 11.376 | 11.376 |


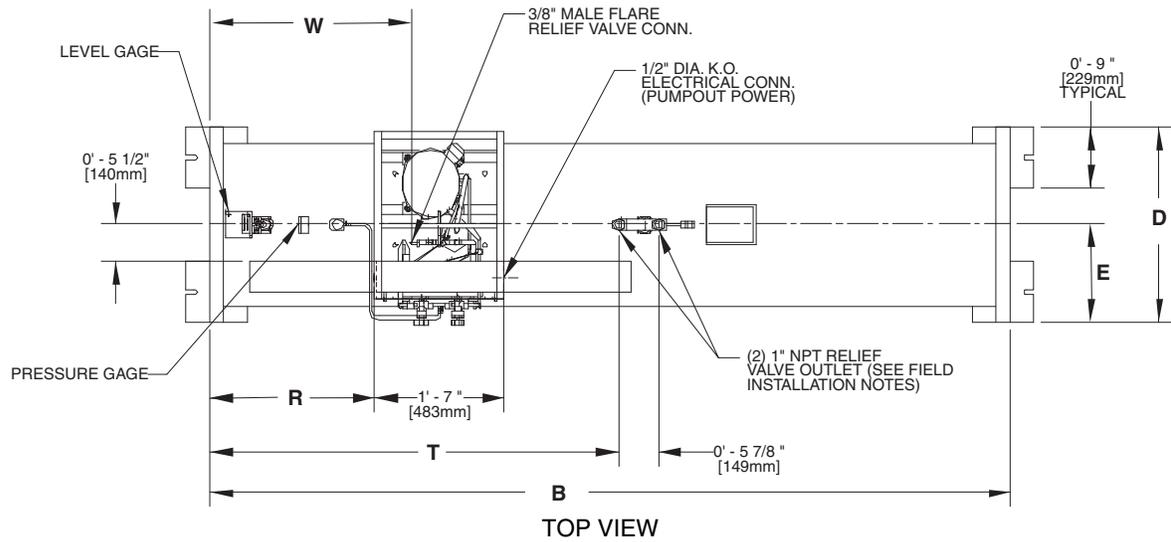


NOTES:

1. Denotes center of gravity.
2. Dimensions in [] are in millimeters.
3. The weights and center of gravity values given are for an empty storage tank.
4. For additional information on the pumpout unit, see certified drawings.
5. Conduit knockout is located on the side of the control box.
6. 28 cubic ft storage tank weight: 2334 lb (1059 kg).
7. 52 cu ft storage tank weight: 3414 lb (1549 kg).

AVAILABLE CONDUIT KNOCKOUT SIZES

| TRADE SIZE | QTY | LOCATION |
|------------|-----|----------|
| 1/2" | 1 | TOP |
| 3/4" | 1 | BOTTOM |
| 1" | 1 | MIDDLE |
| 1 1/4" | 1 | MIDDLE |

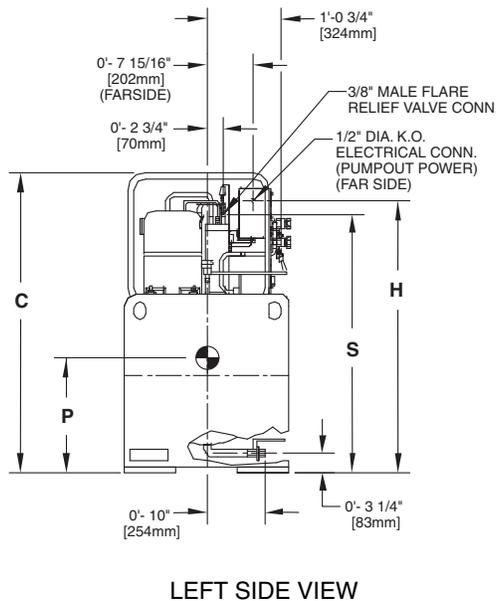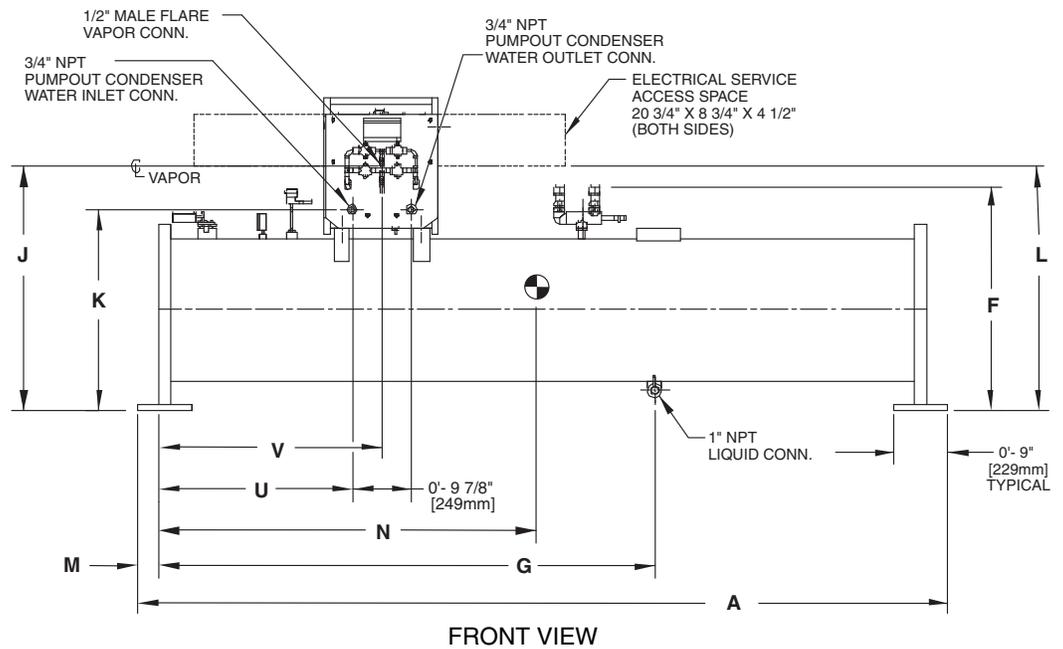

**DIMENSIONS
ENGLISH (ft-in.)**

| TANK SIZE | A | B | C | D | E | F | G | H | J | K |
|-----------|-----------|-----------|---------|---------|---------|---------|----------|----------|---------|-----------|
| 0428 | 10- 5 | 9-10 | 4-4 1/4 | 2-4 3/4 | 1-2 3/8 | 3-1 1/4 | 6-4 3/16 | 3-11 3/8 | 3-4 7/8 | 2-9 9/16 |
| 0452 | 14-11 1/4 | 14- 4 1/2 | 4-8 1/4 | 2-8 1/2 | 1-4 1/4 | 3-4 1/2 | 7-2 1/4 | 4- 3 1/4 | 3-8 3/4 | 3-17 1/16 |

| TANK SIZE | L | M | N | P | R | S | T | U | V | W |
|-----------|---------|---------|----------|---------|---------|-----|---------|---------|----------|---------|
| 0428 | 3-4 5/8 | 0-3 1/2 | 4- 9 1/2 | 1-7 7/8 | 2-0 3/8 | 3-9 | 5-0 1/4 | 2-5 | 2-9 7/8 | 2-5 3/4 |
| 0452 | 3-8 1/2 | 0-3 3/8 | 6-11 5/8 | 1-8 3/4 | 2-0 5/8 | 4-1 | 5-0 1/2 | 2-5 1/4 | 2-10 1/8 | 2-6 |

SI (mm)

| TANK SIZE | A | B | C | D | E | F | G | H | J | K |
|-----------|------|------|------|-----|-----|------|------|------|------|-----|
| 0428 | 3175 | 2997 | 1327 | 730 | 365 | 946 | 1935 | 1203 | 1038 | 852 |
| 0452 | 4553 | 4381 | 1429 | 826 | 413 | 1029 | 2191 | 1302 | 1137 | 951 |

| TANK SIZE | L | M | N | P | R | S | T | U | V | W |
|-----------|------|----|------|-----|-----|------|------|-----|-----|-----|
| 0428 | 1032 | 89 | 1451 | 505 | 619 | 1143 | 1530 | 737 | 860 | 756 |
| 0452 | 1130 | 86 | 2124 | 527 | 625 | 1225 | 1537 | 742 | 867 | 762 |

Fig. 20 — Optional Pumpout Unit and Storage Tank

RATED DRY WEIGHT AND REFRIGERANT CAPACITY

| ENGLISH (LB) | | | | | SI (KG) | | | | |
|--------------|---------------|------------------|-----------------------------------|---------|-----------|--------------|------------------|-----------------------------------|---------|
| TANK SIZE | TANK OD (IN.) | DRY WEIGHT* (LB) | MAXIMUM REFRIGERANT CAPACITY (LB) | | TANK SIZE | TANK OD (MM) | DRY WEIGHT* (KG) | MAXIMUM REFRIGERANT CAPACITY (KG) | |
| | | | ANSI/ASHRAE 15 | UL 1963 | | | | ANSI/ASHRAE 15 | UL 1963 |
| 0428 | 24.00 | 2334 | 1860 | 1716 | 0428 | 610 | 1059 | 844 | 778 |
| 0452 | 27.25 | 3414 | 3563 | 3286 | 0452 | 692 | 1549 | 1616 | 1491 |

LEGEND

- ANSI — American National Standard Institute
- ASHRAE — American Society of Heating, Refrigerating, and Air-Conditioning Engineers
- OD — Outside Diameter
- UL — Underwriters Laboratories

*The above dry weight includes the pumpout condensing unit weight of 164 lb (75 kg).

Fig. 20 — Optional Pumpout Unit and Storage Tank (cont)

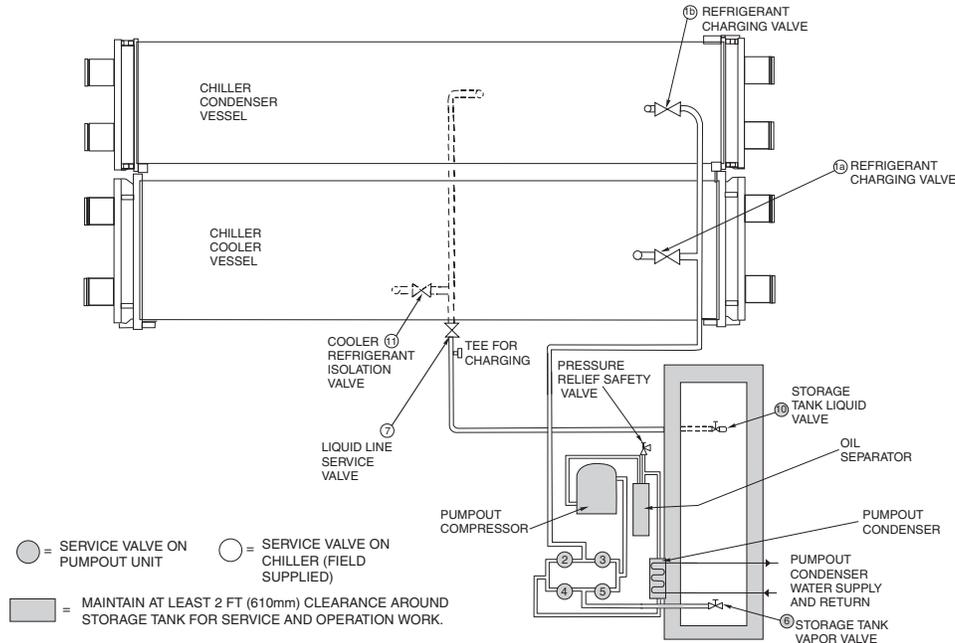


Fig. 21 — Optional Pumpout System Piping Schematic with Storage Tank

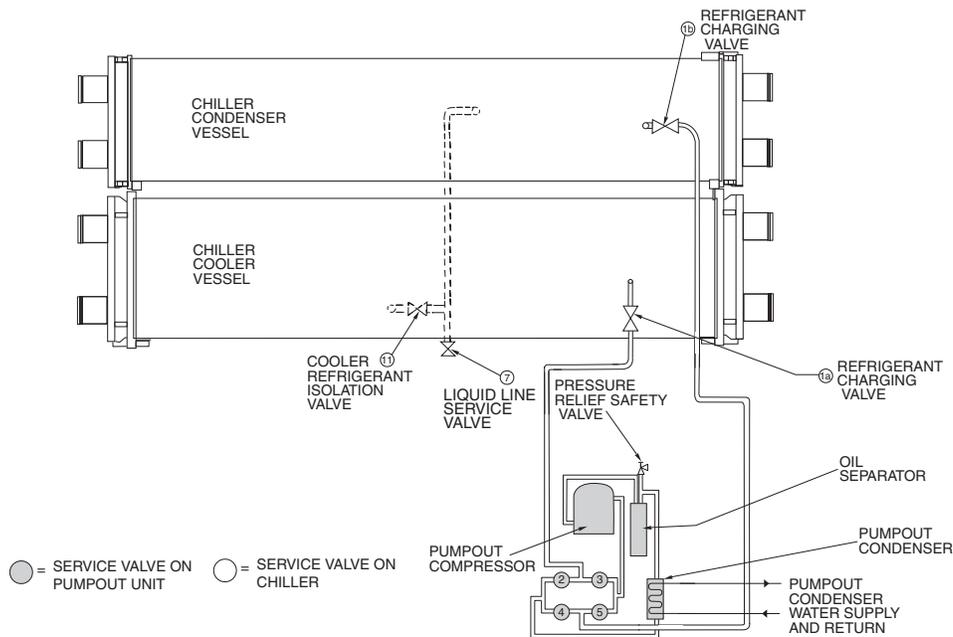


Fig. 22 — Optional Pumpout System Piping Schematic without Storage Tank

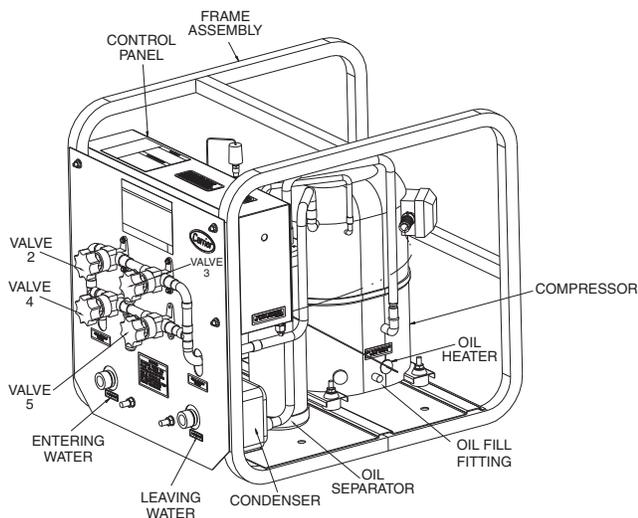


Fig. 23 — Pumpout Unit

INSTALL VENT PIPING TO RELIEF VALVES — The 19XR,XRV chiller is factory equipped with relief valves on the cooler and condenser shells. Refer to Fig. 24 and Tables 10 and

11 for size and location of relief devices. Vent relief devices to the outdoors in accordance with ANSI/ASHRAE 15 (latest edition) Safety Code for Mechanical Refrigeration and all other applicable codes.

⚠ DANGER

Refrigerant discharged into confined spaces can displace oxygen and cause asphyxiation.

1. If relief devices are manifolded, the cross-sectional area of the relief pipe must at least equal the sum of the areas required for individual relief pipes.
2. Provide a pipe plug near outlet side of each relief device for leak testing. Provide pipe fittings that allow vent piping to be disconnected periodically for inspection of valve mechanism.
3. Piping to relief devices must not apply stress to the device. Adequately support piping. A length of flexible tubing or piping near the device is essential on spring-isolated machines.
4. Cover the outdoor vent with a rain cap and place a condensation drain at the low point in the vent piping to prevent water build-up on the atmospheric side of the relief device.

Table 10 — Relief Valve Locations

| LOCATION | FRAME SIZE | RELIEF VALVE OUTLET SIZE | QUANTITY OF RELIEF VALVES | |
|-----------|------------|-----------------------------|---|--|
| | | | WITH DISCHARGE AND COOLER INLET ISOLATION | WITHOUT DISCHARGE AND COOLER INLET ISOLATION |
| COOLER | 1, 2 | 1" NPT FEMALE CONNECTOR | 1 | 2 |
| | 3-6 | 1 1/4" NPT FEMALE CONNECTOR | 1 | 2 |
| | 7,8 | 1 1/4" NPT FEMALE CONNECTOR | 2 | 4 |
| CONDENSER | 1, 2 | 1" NPT FEMALE CONNECTOR | 2 | 2 |
| | 3-6 | 1 1/4" NPT FEMALE CONNECTOR | 2 | 2 |

NOTE: All valves relieve at 185 psi (1275 kPa).

Table 11 — Cooler/Relief Valve Arrangement

| HEAT EXCHANGER FRAME SIZE | COMPRESSOR FRAME SIZE | ISOLATION VALVES | COOLER ARRANGEMENT SEE FIGURE NO. | CONDENSER ARRANGEMENT SEE FIGURE NO. |
|---------------------------|-----------------------|------------------|-----------------------------------|--------------------------------------|
| 2 | 2 | Yes | 24A | 24E |
| | | No | 24C | 24E |
| 3 | 2 | Yes | 24A | 24E |
| | | No | 24C | 24E |
| 3 | 3 | Yes | 24A | 24E |
| | | No | 24C | 24E |
| 4 | 3 | Yes | 24A | 24E |
| | | No | 24C | 24E |
| 5 | 3 | Yes | 24A | 24E |
| | | No | 24C | 24E |
| 5 | 4 | Yes | 24A | 24E |
| | | No | 24C | 24E |
| 6 | 4 | Yes | 24A | 24E |
| | | No | 24C | 24E |
| 7 | 4 | Yes | 24B | 24F |
| | | No | 24D | 24F |
| 7 | 5 | Yes | 24B | 24F |
| | | No | 24D | 24F |
| 8 | 5 | Yes | 24B | 24F |
| | | No | 24D | 24F |

WITH OPTIONAL ISOLATION OF DISCHARGE AND COOLER (Fig. A, B)

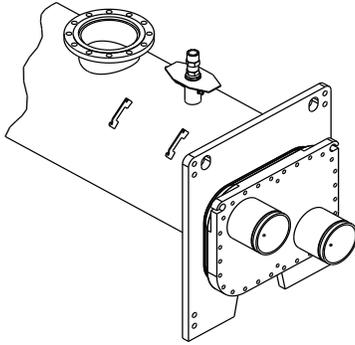


FIG. A

FRAME 1-6

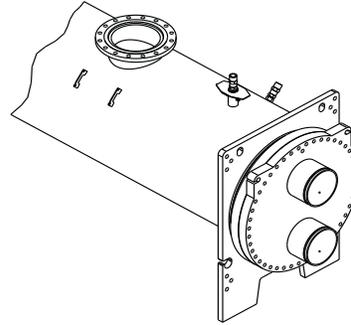


FIG. B

FRAMES 7, 8

WITHOUT ISOLATION OPTION OF DISCHARGE AND COOLER (Fig. C, D)

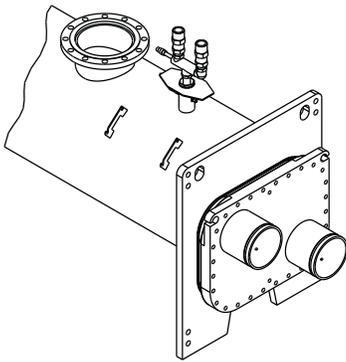


FIG. C

FRAME 1-6

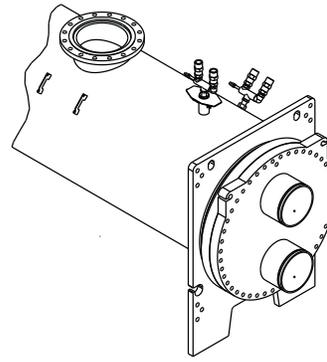


FIG. D

FRAME 7, 8

CONDENSER RELIEF VALVE ARRANGEMENT — WITH OR WITHOUT OPTIONAL ISOLATION (Fig. E, F)

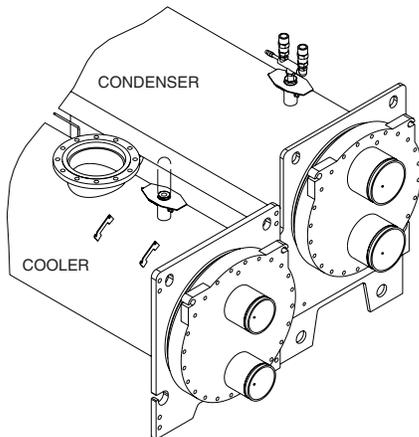


FIG. E

FRAME 1-6

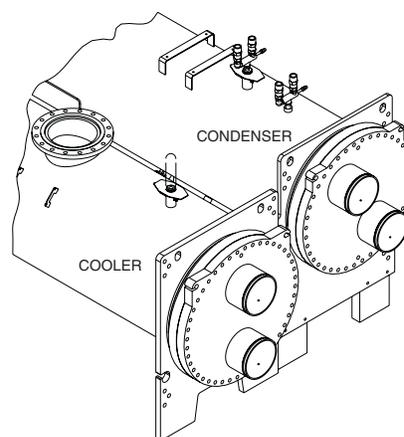


FIG. F

FRAME 7, 8

Fig. 24 — Relief Valve Arrangements

INSTALL CIRCUIT BREAKER HANDLE EXTENSION (FIG. 25) — Unit-mounted standard tier Frame E765-E1530 and LF2 Frame 900-1169 amp VFDs are shipped with handle extension for the VFD main circuit breaker strapped to the VFD mounting frame. This handle extension must be installed by sliding the clip over the circuit breaker handle (Fig. 26).

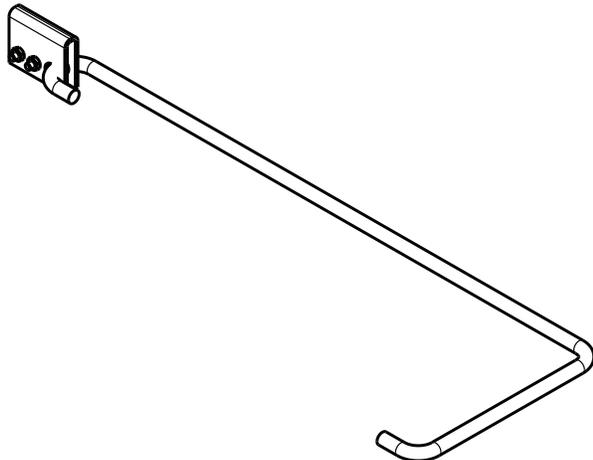


Fig. 25 — Circuit Breaker Handle Extension

Step 5 — Make Electrical Connections — Field wiring must be installed in accordance with job wiring diagrams and all applicable electrical codes.

CAUTION

Do not run 120-v wiring into the control cabinet. The control cabinet should only be used for additional extra-low voltage wiring (50 v maximum). Damage to machine could result.

Wiring diagrams in this publication (Fig. 27-36) are for reference only and are not intended for use during actual installation; follow job specific wiring diagrams.

CAUTION

Do not attempt to start compressor or oil pump (even for a rotation check) or apply test voltage of any kind while either chiller module is under dehydration vacuum. Motor insulation breakdown and serious damage may result.

CONNECT CONTROL INPUTS — Wiring may be specified for a spare safety switch, and a remote start/stop contact can be wired to the starter terminal strip. Additional spare sensors and Carrier Comfort Network® modules may be specified as well. These are wired to the machine control panel as indicated in Fig. 27. The PIC II control panel optional wiring and power panel component layout is shown in Fig. 28.

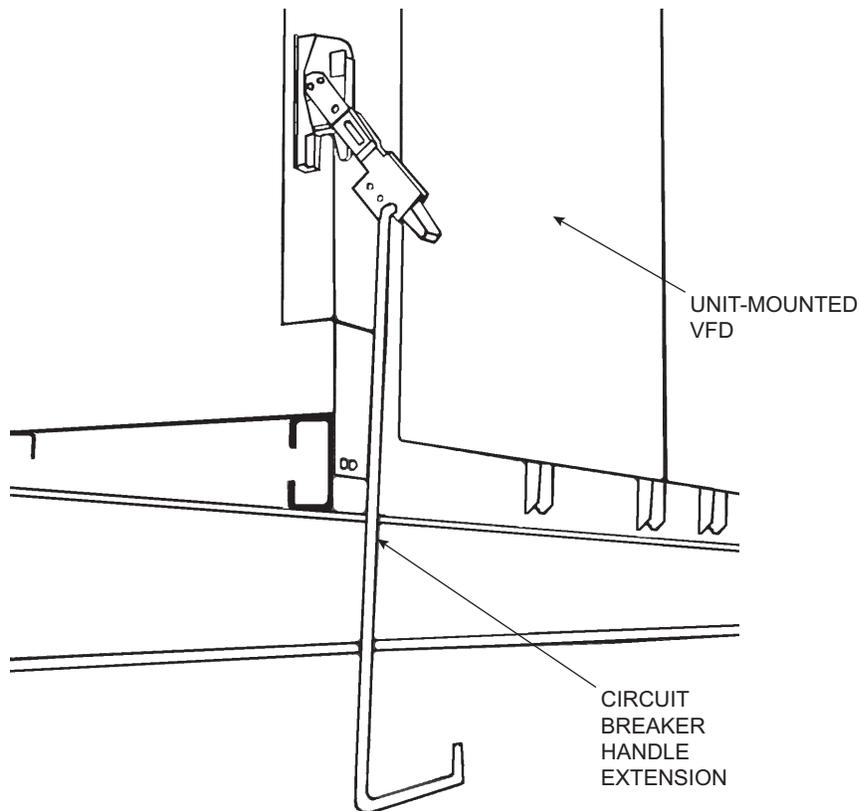


Fig. 26 — Circuit Breaker Handle Extension Installed



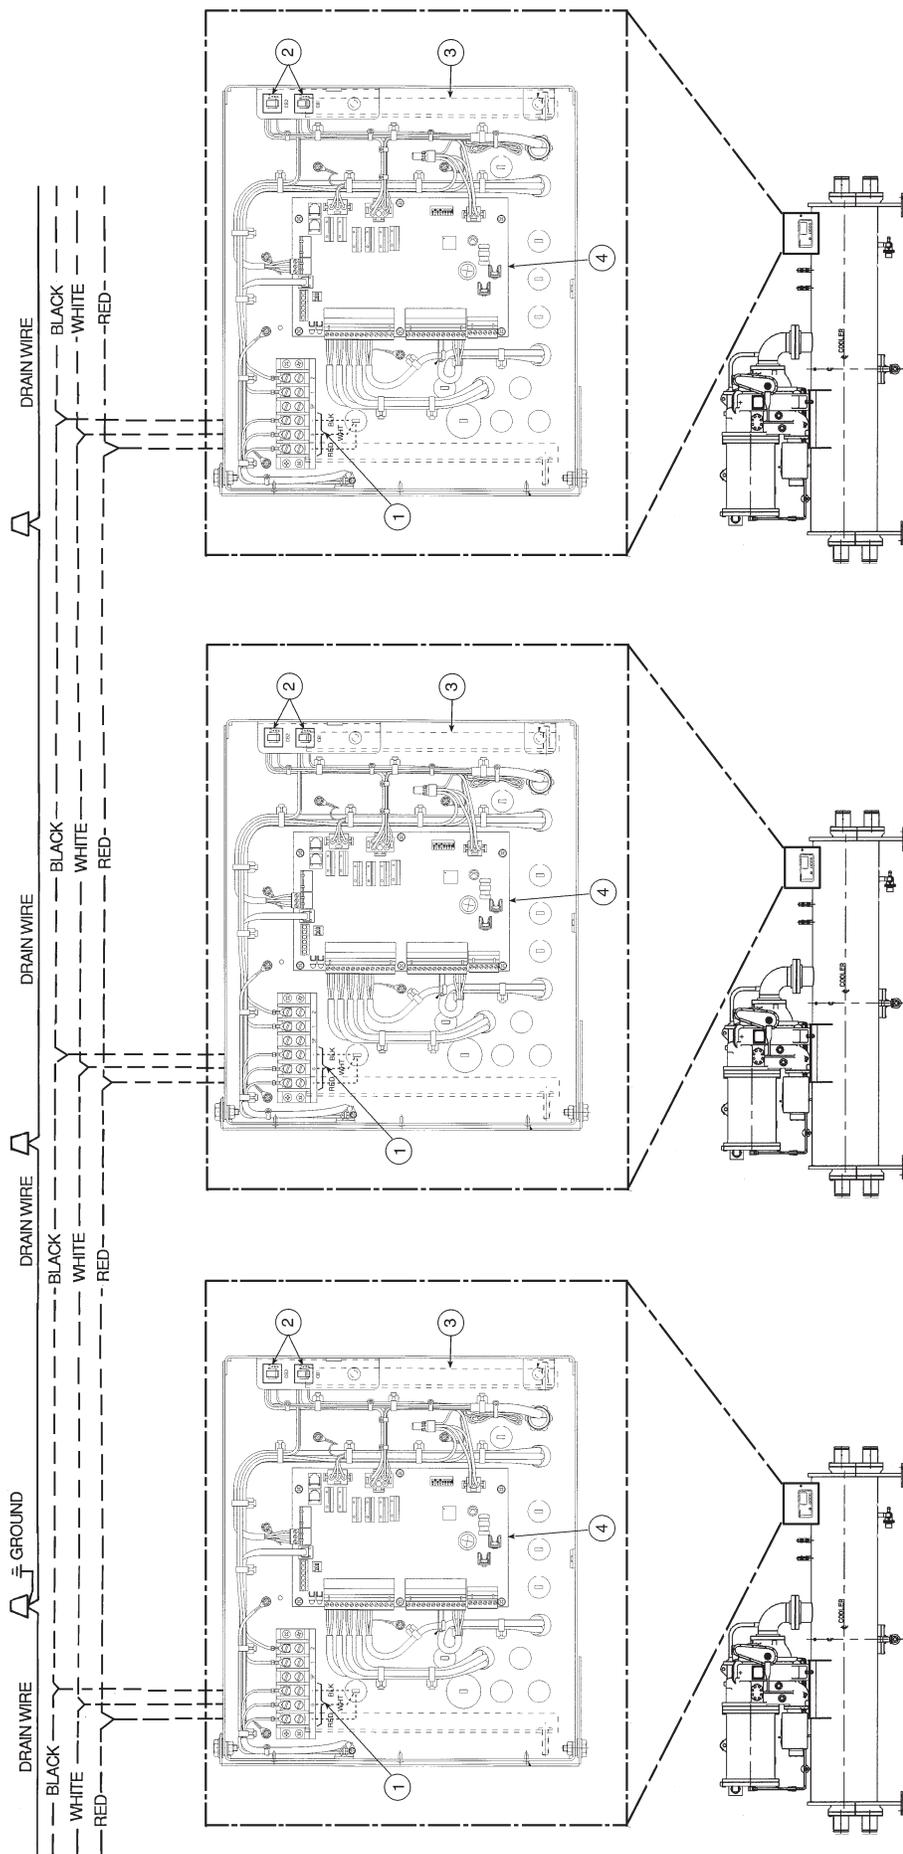


Fig. 27 — CCN Communication Wiring for Multiple Chillers (Typical)

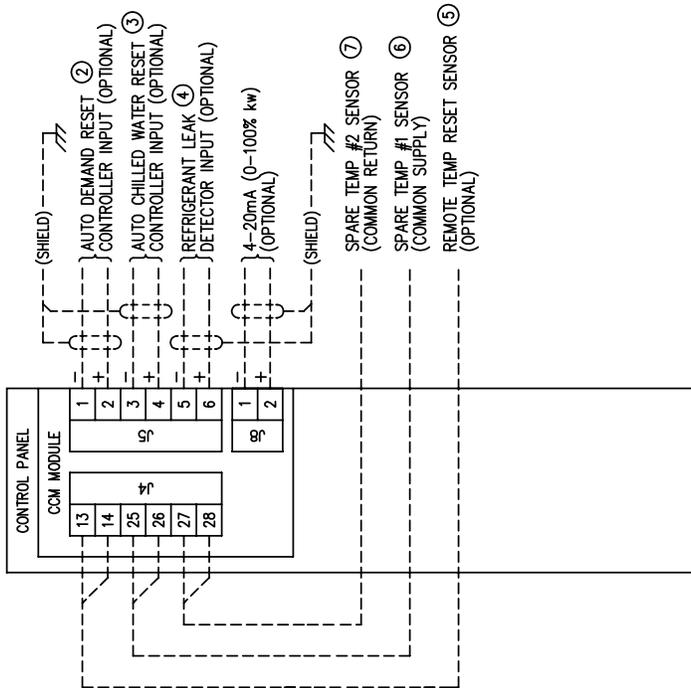

NOTES:


1. THIS FEATURE IS STANDARD IN THE PIC II CONTROLS, BUT REQUIRES A 4-20mA OR 1-5Vdc CONTROLLER, NOT BY CARRIER.
2. THIS FEATURE IS STANDARD IN THE PIC II CONTROLS, BUT REQUIRES AN EXTERNAL 4-20mA CONTROLLER, NOT BY CARRIER.
3. THIS FEATURE IS STANDARD IN THE PIC II CONTROLS, BUT REQUIRES A SENSOR PACKAGE OPTION, BY CARRIER.

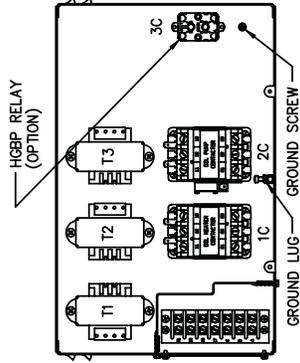


POWER PANEL COMPONENT LAYOUT
(SHOWN WITH COVER REMOVED)

CONTROL PANEL OPTIONAL WIRING

| ITEM | DESCRIPTION | BY CARRIER | |
|------|--|------------|----|
| | | YES | NO |
| 1A | N/A | | |
| 1B | N/A | | |
| 2 | AUTO DEMAND RESET OPTION (4-20mA CONTROLLER) SEE NOTE 1 | | |
| 3 | AUTO CHILLED WATER RESET OPTION (4-20mA CONTROLLER) SEE NOTE 1 | | |
| 4 | REFRIGERANT LEAK SENSOR SEE NOTE 2 | | |
| 5 | REMOTE TEMP RESET SENSOR SEE NOTE 3 | | |
| 6 | SPARE TEMP 1 (COMMON SUPPLY SENSOR) SEE NOTE 3 | | |
| 7 | SPARE TEMP 2 (COMMON RETURN SENSOR) SEE NOTE 3 | | |

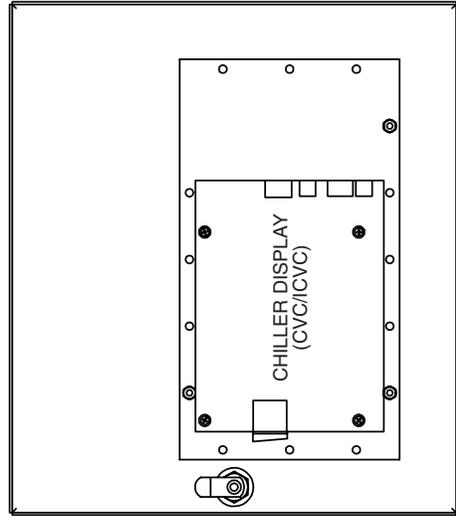

INSIDE PANEL COVER

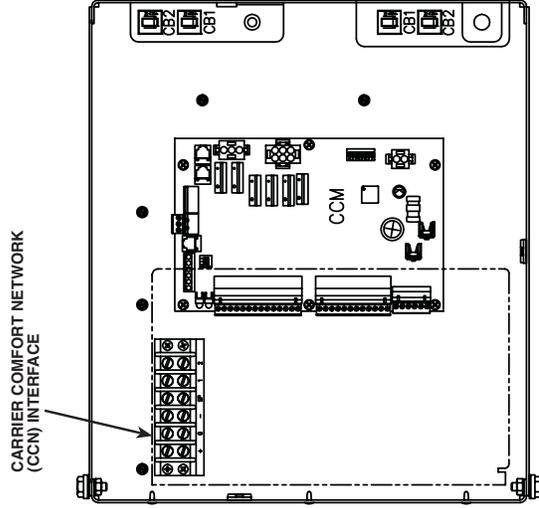

CONTROL PANEL COMPONENT LAYOUT

Fig. 28 — PIC II Control Panel Optional Wiring and Power Panel Component Layout

CONNECT CONTROL OUTPUTS — Connect auxiliary equipment, chilled and condenser water pumps, and spare alarms as required and indicated on job wiring drawings.


CONNECT STARTER — The 19XR chiller is available with a unit-mounted, factory-installed starter or VFD (variable frequency drive) (Fig. 29-31) or a free-standing, field-installed starter or VFD (Fig. 32-36).

Unit-Mounted, Factory-Installed Starter or VFD — Attach power leads by connecting them from inside the starter cabinet to the line side circuit breaker terminals. See Fig. 28-31.

Machines with electro-mechanical starters (wye-delta) will have a top hat shipped with the machine if the RLA (rated load amps) is greater than 740 amps. If the machine is equipped

with a solid-state starter, a top hat is provided if the RLA exceeds 740 amps. The top hat is shipped in the knocked-down position and must be assembled and installed on top of the starter cabinet, over the line side circuit breaker. During assembly, remove the access plate and use it as the cover piece of the top hat. The top hat provides additional wire bending space to attach line side power leads to the circuit breaker within the starter.

IMPORTANT: Be sure to ground the power circuit in accordance with the National Electrical Code (NEC), applicable local codes, and job wiring diagrams. Also, make sure correct phasing is observed for proper rotation.

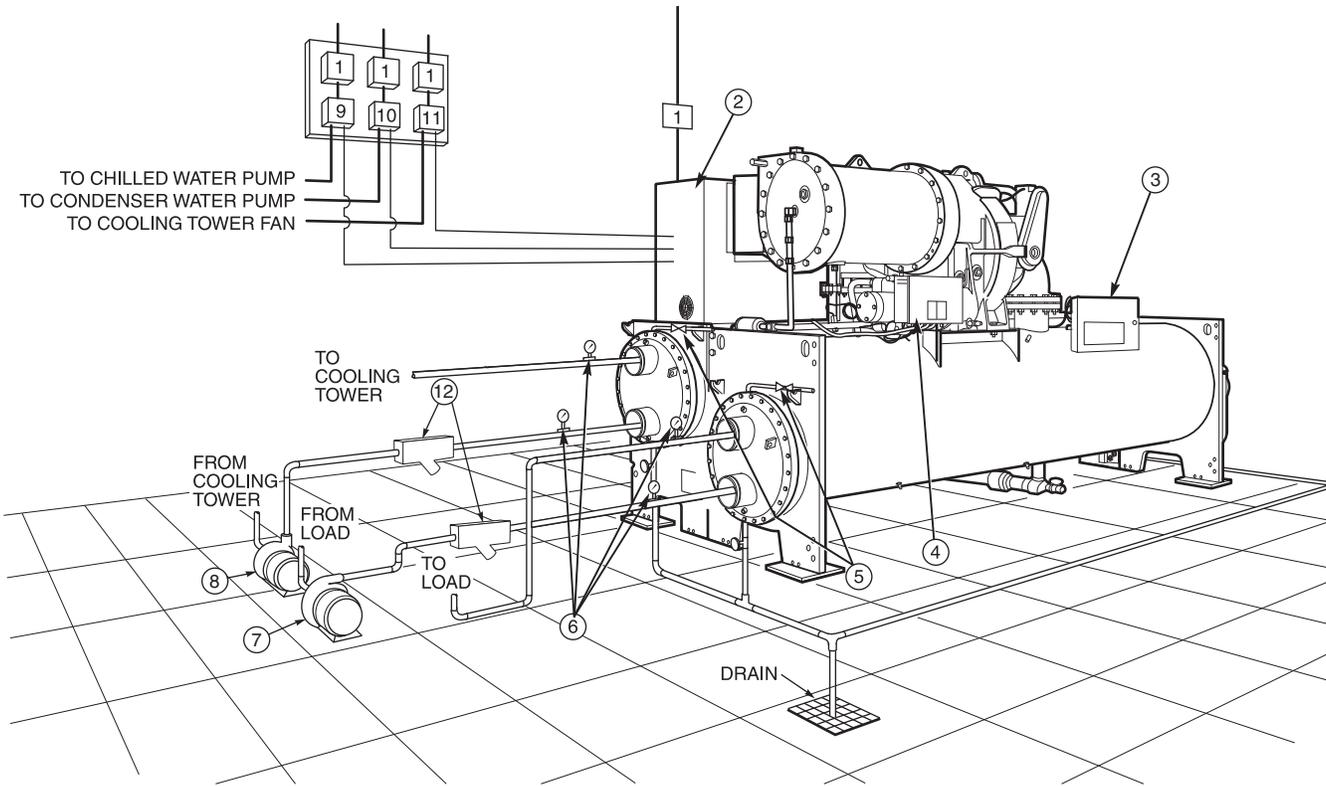

LEGEND

- 1 — Disconnect
- 2 — Unit-Mounted Starter or VFD
- 3 — Control Panel
- 4 — Power Panel
- 5 — Vents
- 6 — Pressure Gages
- 7 — Chilled Water Pump
- 8 — Condenser Water Pump
- 9 — Chilled Water Pump Starter
- 10 — Condensing Water Pump Starter
- 11 — Cooling Tower Fan Starter (Low Fan, High Fan)
- 12 — Strainers
- Piping
- Control Wiring
- Power Wiring

IMPORTANT: Wiring and piping shown are for general point-of-connection only and are not intended to show details for a specific installation. Certified field wiring and dimensional diagrams are available on request.

NOTES:


1. All wiring must comply with applicable codes.
2. Wiring not shown for optional devices such as:
 - Remote Start/Stop
 - Remote Alarms
 - Optional Safety Device
 - 4 to 20 mA Resets
 - Optional Remote Sensors
3. **IMPORTANT:** Carrier suggests that a structural engineer be consulted if transmission of vibrations from mechanical equipment is of concern.
4. Isolation valves are recommended on the cooler and condenser piping to each chiller for service.

Fig. 29 — 19XR with Unit-Mounted Starter or VFD with ISM (Integrated Start Module)

**LEGEND FOR FIG. 30
19XR with Unit-Mounted Starter**

| REFERENCE NUMBER | EXPLANATION |
|--|--|
| 1 | 3 Phase Under/Over Voltage |
| | Phase Loss/Imbalance/Reversal |
| | Motor Overload Protection |
| | Frequency Shift |
| | kW Transducer/kW Hours/Demand kW |
| | Single Cycle Dropout |
| | Motor/Starter Overcurrent |
| | Control Power Transformer (3KVA) (Integral) |
| | Controls and Oil Heater Circuit Breaker (integral) |
| | Oil Pump Circuit Breaker (Integral) |
| | 4-20ma Head Pressure Reference Output |
| | 3 Phase Analog Volts/Amps Meter Package |
| | Power Factor Correction Package |
| | Lightning/Surge Arrestor Package |
| Phase to Phase to Ground Fault Detection | |
| Phase to Ground Fault Detection | |
| 2 | Compressor Motor Starter Branch Disconnect |
| A | Evaporator Liquid Pump Starter Disconnect |
| B | Evaporator Liquid Pump Motor Starter |
| C | Condenser Liquid Pump Starter Disconnect |
| D | Condenser Liquid Pump Motor Starter |
| E | Cooling Tower Fan Motor Starter Disconnect (Low Fan/#1) |
| F | Cooling Tower Fan Motor Starter (Low Fan/#1) |
| G | Cooling Tower Fan Motor Starter Disconnect (High Fan/#2) |
| H | Cooling Tower Fan Motor Starter (High Fan/#2) |
| J | Spare Safety Devices [N.C.] See Note 3.1 |
| K | Remote Start/Stop Device [N.O] See Note 3.1 |
| L | Remote Alarm See Note 3.3 |
| M | Remote Annunciator See Note 3.3 |
| N | Lug Adapters See Note 2.1 |
| P | Ice Build Start/Terminate Device See Note 3.1 |

See Notes on page 50.

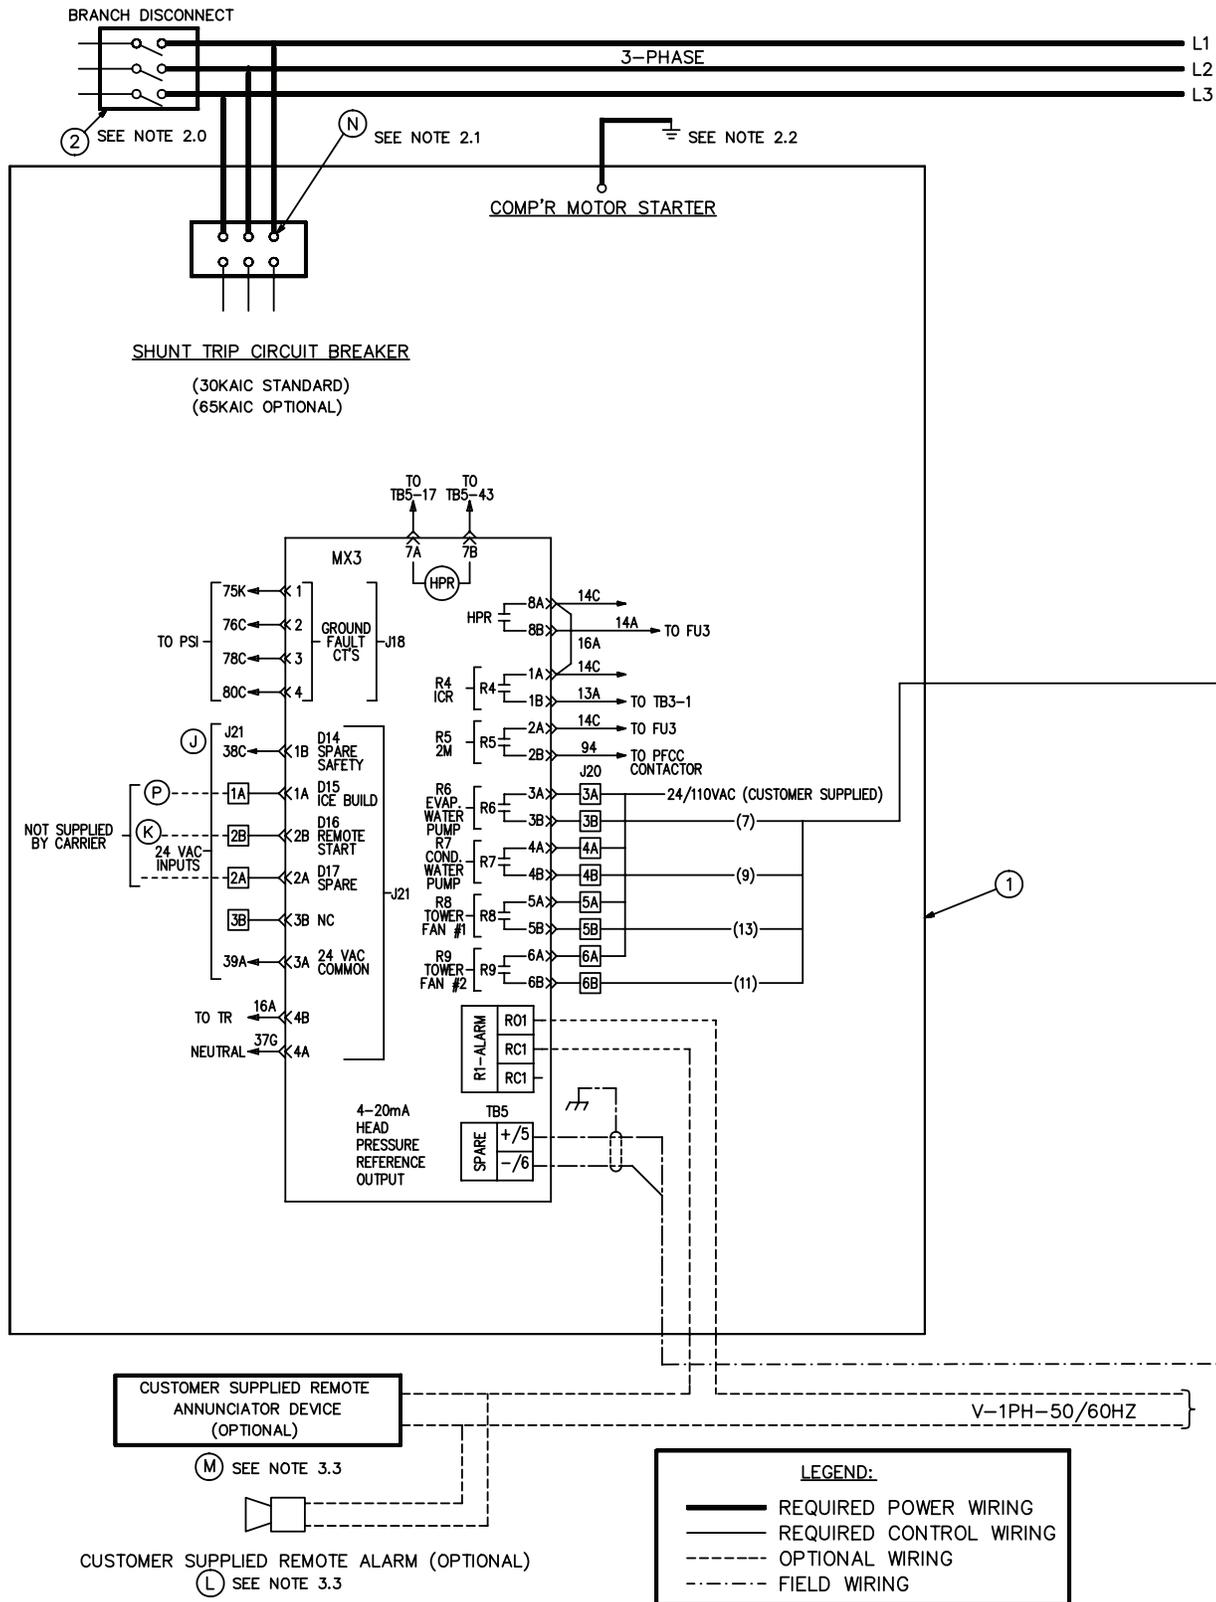

NOTE: See Legend on page 47.

Fig. 30 — 19XR Typical Field Wiring with Unit-Mounted Starter

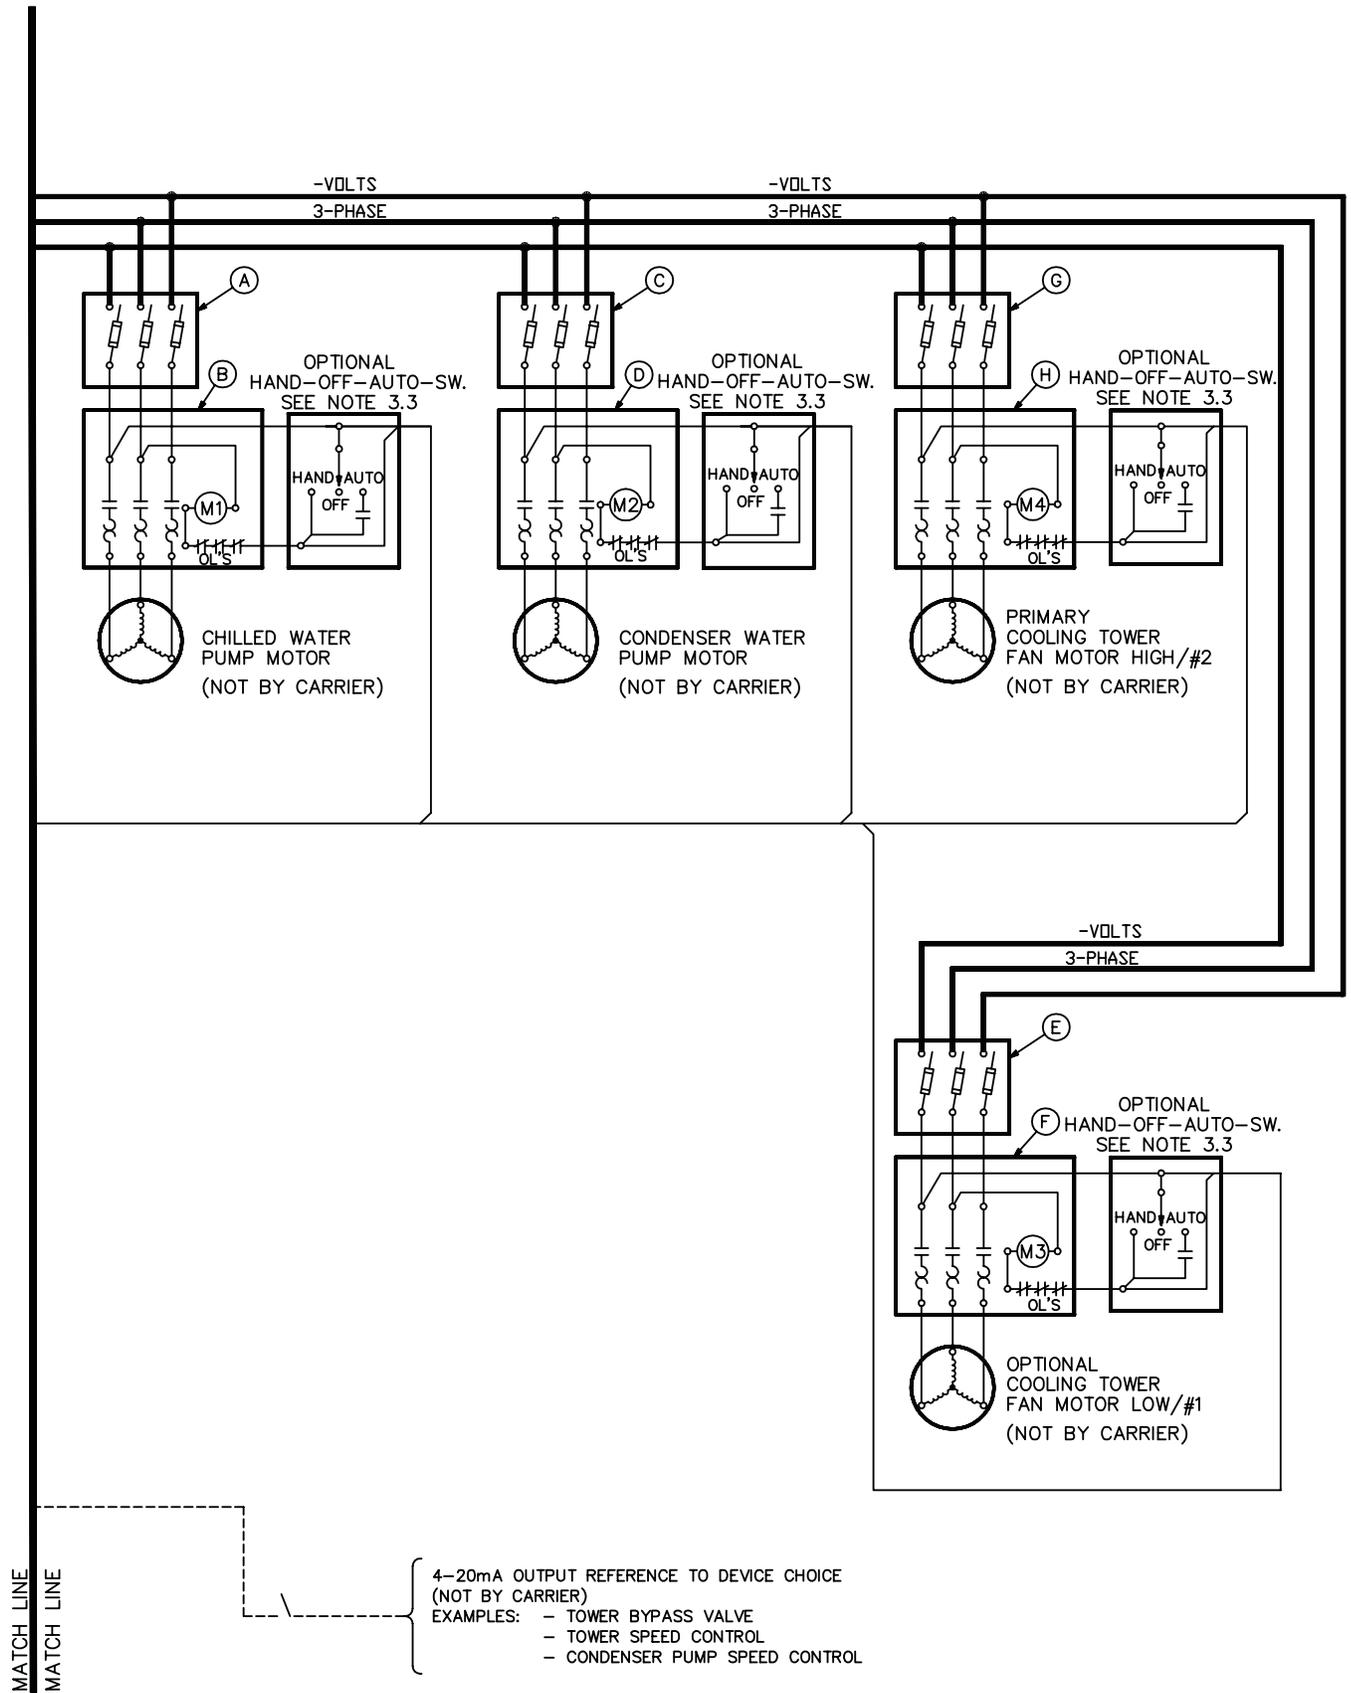


Fig. 30 — 19XR Typical Field Wiring with Unit-Mounted Starter (cont)

NOTES FOR FIG. 30 19XR with Unit-Mounted Starter

I. GENERAL

- 1.0 Starters shall be designed and manufactured in accordance with Carrier Engineering Requirement Z-415.
- 1.1 All field-supplied conductors, devices, and the field-installation wiring, and termination of conductors and devices, must be in compliance with all applicable codes and job specifications.

⚠ CAUTION

To prevent damage to machine, do NOT punch holes or drill into the top surface of the starter enclosure for field wiring. Knock-outs are provided on the side of the starter enclosure for field wiring connections.

- 1.2 The routing of field-installed conduit and conductors and the location of field-installed devices must not interfere with equipment access or the reading, adjusting, or servicing of any component.
 - 1.3 Equipment installation and all starting and control devices, must comply with details in equipment submittal drawings and literature.
 - 1.4 Contacts and switches are shown in the position they would assume with the circuit de-energized and the chiller shut down.
- 1.5 WARNING — Do not use aluminum conductors.**
- 1.6 Installer is responsible for any damage caused by improper wiring between starter and machine.

II. POWER WIRING TO STARTER

- 2.0 Provide a means of disconnecting power to starter.
- 2.1 Power conductor rating must meet minimum unit nameplate voltage and compressor motor FLA (minimum circuit ampacity).
- 2.2 Lug adapters may be required if installation conditions dictate that conductors be sized beyond the minimum ampacity required. Breaker lugs will accommodate the quantity (#) and size (MCM) cables (per phase) as indicated in tables below.

ALLEN BRADLEY (WYE-DELTA)

| STARTER RLA | LUG CAPACITY (PER PHASE) | |
|-------------|--------------------------|-------------------|
| | # CONDUCTORS | CONDUCTOR RANGE |
| 186-207A | 1 | 3 AWG — 350 MCM |
| 208-296A | 2 | 2/0 AWG — 250 MCM |
| 297-444A | 2 | 250 — 350 MCM |
| 445-606A | 2 | 1 AWG — 500 MCM |
| 607-888A | 4 | 4/0 AWG — 500 MCM |
| 889-1316A | 4 | 500 — 1000 MCM |

BENSHAW (SOLID-STATE)

| STARTER RLA | LUG CAPACITY (PER PHASE) | | |
|-------------|--------------------------|-------------------|------------|
| | # CONDUCTORS | CONDUCTOR RANGE | FRAME SIZE |
| 95-200A | 1 | 6 AWG — 350 MCM | 2, 3 |
| 201-480A | 2 | 3/0 AWG — 500 MCM | 2, 3 |
| 481-640A | 3 | 1/0 AWG — 500 MCM | 2, 3 |
| 641-739A | 4 | 250 — 500 MCM | 2, 3 |
| 740-979A | 5 | 6 AWG — 350 MCM | 4, 5 |
| 980-1390A | 2 | 3/0 AWG — 500 MCM | 4, 5 |

BENSHAW (WYE-DELTA)

| STARTER RLA | LUG CAPACITY (PER PHASE) CIRCUIT BREAKER OR TERMINAL BLOCK (OPTION) | | |
|-------------|---|-------------------|------------|
| | # CONDUCTORS | CONDUCTOR RANGE | FRAME SIZE |
| 112-185A | 1 | 6 AWG — 350 MCM | 2, 3 |
| 186-474A | 2 | 3/0 AWG — 500 MCM | 2, 3 |
| 475-606A | 3 | 1/0 AWG — 500 MCM | 2, 3 |
| 607-775A | 4 | 250 — 500 MCM | 4 |
| 776-804A | 4 | 250 — 500 MCM | 4, 5 |
| 805-1138A | 5 | 300 — 600 MCM | 4, 5 |
| 1139-1151 | 5 | 300 — 600 MCM | 4, 5 |

CUTLER-HAMMER (WYE-DELTA)

| STARTER RLA | LUG CAPACITY (PER PHASE) | |
|-------------|--------------------------|-------------------|
| | # CONDUCTORS | CONDUCTOR RANGE |
| 112-185A | 1 | 4 AWG — 350 MCM |
| 186-296A | 2 | 2/0 AWG — 250 MCM |
| 297-444A | 2 | 250 — 350 MCM |
| 445-606A | 2 | 1 AWG — 500 MCM |
| 607-888A | 4 | 4/0 AWG — 500 MCM |
| 889-1316A | 4 | 500 — 1000 MCM |


- 2.3 Power conductors to starter must enter through top of enclosure. Flexible conduit should be used for the last few feet to the enclosure to provide unit vibration isolation.
 - 2.4 Compressor motor and controls must be grounded by using equipment grounding lugs provided inside unit-mounted starter enclosure.
 - 2.5 Starters with "Rated Load Amps" (RLA) greater than 740 require the assembly and the installation of a "Top Hat" (located inside enclosure) to provide the required wire bending space for incoming power leads.
 - 2.6 Metering current transformers (CTs), if present, have an inner diameter of 2³/₄ inches. Caution should be taken when selecting power wiring so that all power cables can pass through the CTs.
- ### III. CONTROL WIRING
- 3.0 Field-supplied control conductors to be at least 18 AWG or larger.
 - 3.1 Ice build start/terminate device contacts, remote start/stop device contacts and spare safety device contacts (devices not supplied by Carrier), must have 24 VAC rating. MAX current is 60 mA, nominal current is 10 mA. Switches with gold plated bifurcated contacts are recommended.
 - 3.2 Remove jumper wire between J2-1 and J2-2 before connecting auxiliary safeties between these terminals.
 - 3.3 Each integrated contact output can control loads (VA) for evaporator pump, condenser pump, tower fan low, tower fan high, and alarm annunciator devices rated 5 amps at 115 VAC and up to 3 amps at 277 VAC.

⚠ CAUTION

Control wiring for Carrier to start pumps and tower fan motors and establish flows must be provided to assure machine protection. If primary pump, tower fan, and flow control is by other means, also provide parallel means for control by Carrier. Failure to do so could result in machine freeze-up or overpressure.

Do not use control transformers in the control center as the power source for external or field-supplied contactor coils, actuator motors or any other loads.


- 3.4 If one single speed fan is used, connect fan control leads J9-13 and -14, jumper ISM J9-13 to -11, and jumper J9-14 to -12. This will allow the fan to be actuated by closure of either "low fan" or "high fan" ISM channel contact.
- 3.5 Do not route control wiring carrying 30 v or less within a conduit which has wires carrying 50 v or higher or along side wires carrying 50 v or higher.
- 3.6 Control wiring between starter and power panel must be separate shielded cables with minimum rating of 600 v, 80 C. Ground shield at starter.
- 3.7 Spare 4-20 mA output signal is designed for controllers with a non-grounded 4-20 mA input signal and a maximum input impedance of 500 ohms.
- 3.8 Flow devices to confirm evaporator or condenser pump flow are not required. However, if flow devices are used, wire as shown in diagram below. Remove jumper installed at these terminals and wire in a 4.3 K resistor in its place. The flow device and resistor must be installed in parallel at these terminals such that the resistor provides a signal when the flow device is open.

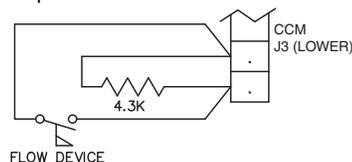

**LEGEND FOR FIG. 31
19XR with Unit-Mounted VFD with ISM**

| REFERENCE NUMBER | EXPLANATION |
|-------------------------|--|
| 1 | 3 Phase Under/Over Voltage (Line Side) |
| | Phase Loss/Imbalance/Reversal (Line Side) |
| | Frequency Shift (Line Side) |
| | kW Transducer/kW Hours/Demand kW |
| | Over Current |
| | Control Power Transformer (3KVA) |
| | Controls and Oil Heater Fused Disconnect (FU2) |
| | Oil Pump Circuit Fused Disconnect (FU1) |
| | Phase to Ground Fault Protection |
| | 3 Phase Analog Volts/Amps Meter Package |
| 2 | System Feeder (Short Circuit, Ground Fault and Protection) |
| A | Evaporator Liquid Pump Starter Disconnect |
| B | Evaporator Liquid Pump Motor Starter |
| C | Condenser Liquid Pump Starter Disconnect |
| D | Condenser Liquid Pump Motor Starter |
| E | Cooling Tower Fan Motor Starter Disconnect (Low Fan/#1) |
| F | Cooling Tower Fan Motor Starter (Low Fan/#1) |
| G | Cooling Tower Fan Motor Starter Disconnect (High Fan/#2) |
| H | Cooling Tower Fan Motor Starter (High Fan/#2) |
| J | Spare Safety Devices [N.C.] See Note 3.1 |
| K | Remote Start/Stop Device [N.O] See Note 3.1 |
| L | Remote Alarm See Note 3.3 |
| M | Remote Annunciator See Note 3.3 |
| N | Lug Adapters See Note 2.3 |
| P | Ice Build Start/Terminate Device See Note 3.1 |

See Notes on page 54.

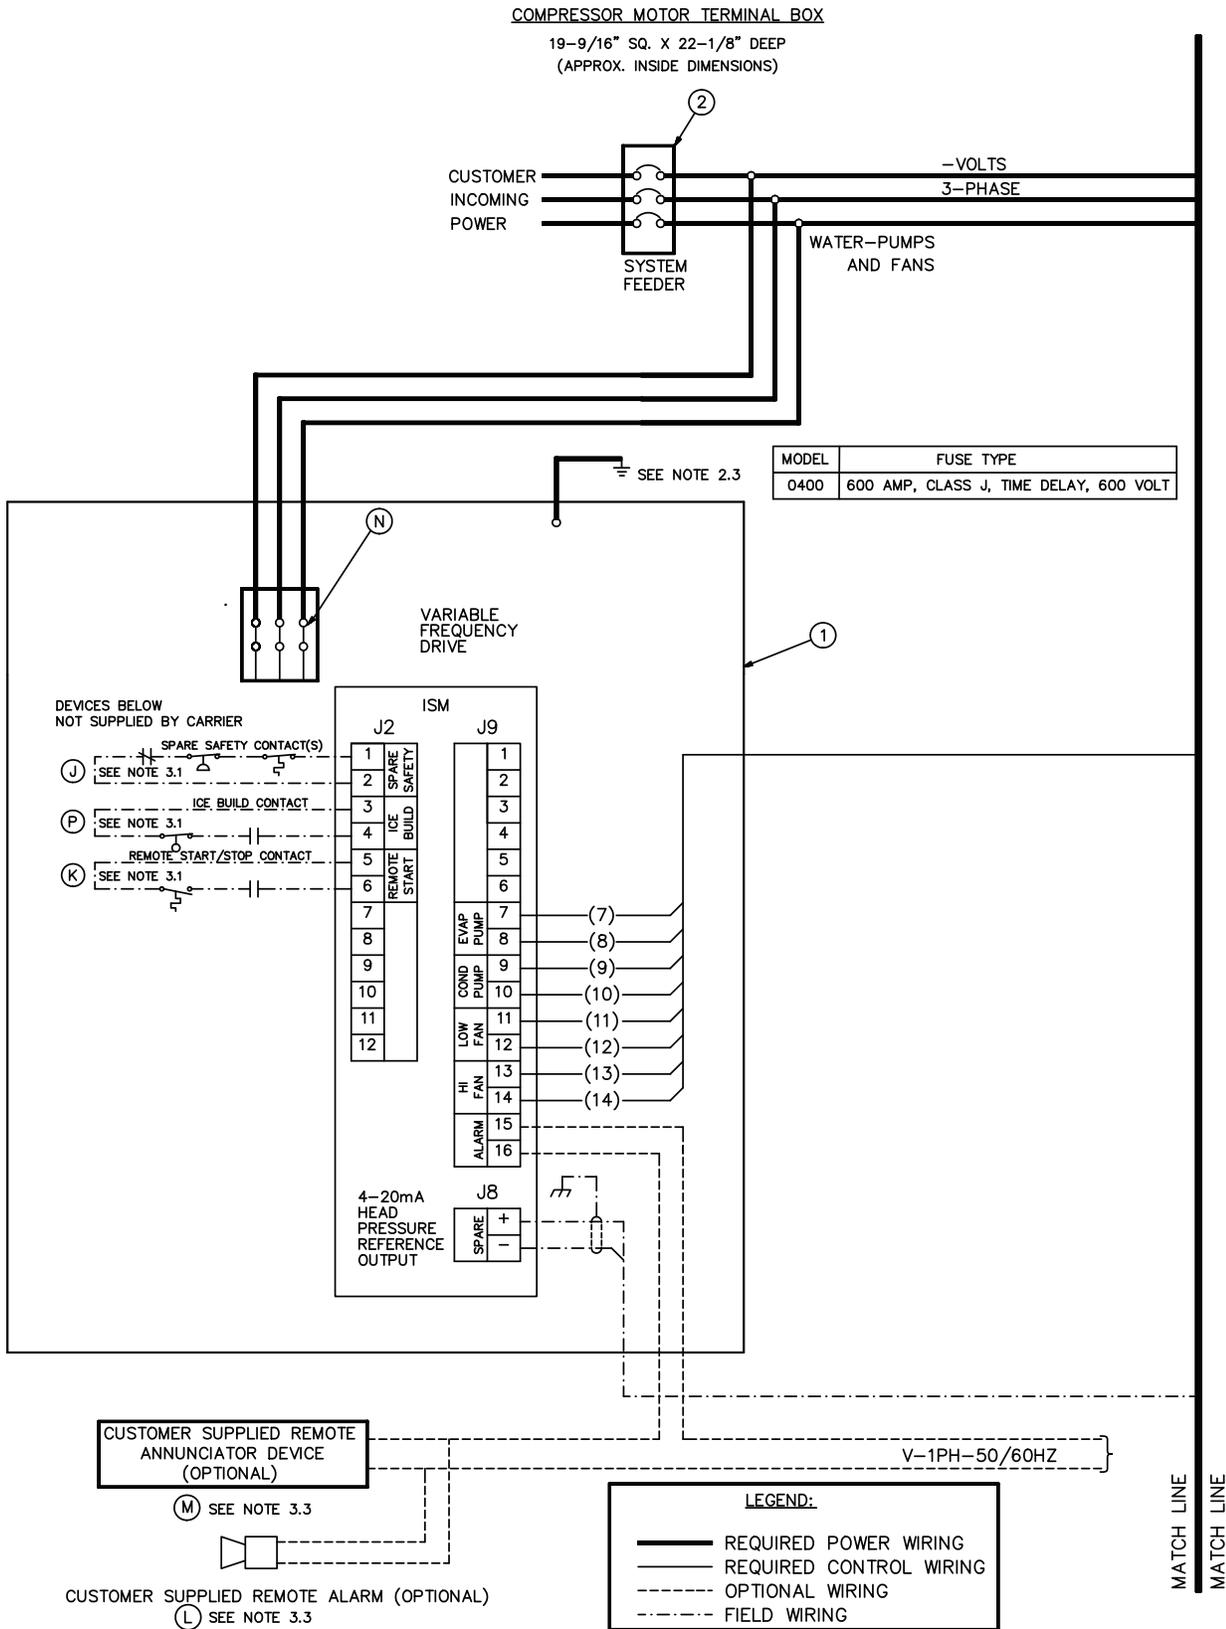

NOTE: See Legend on page 51.

Fig. 31 — 19XR Typical Wiring with Unit-Mounted Variable Frequency Drive with ISM (Integrated Start Module)

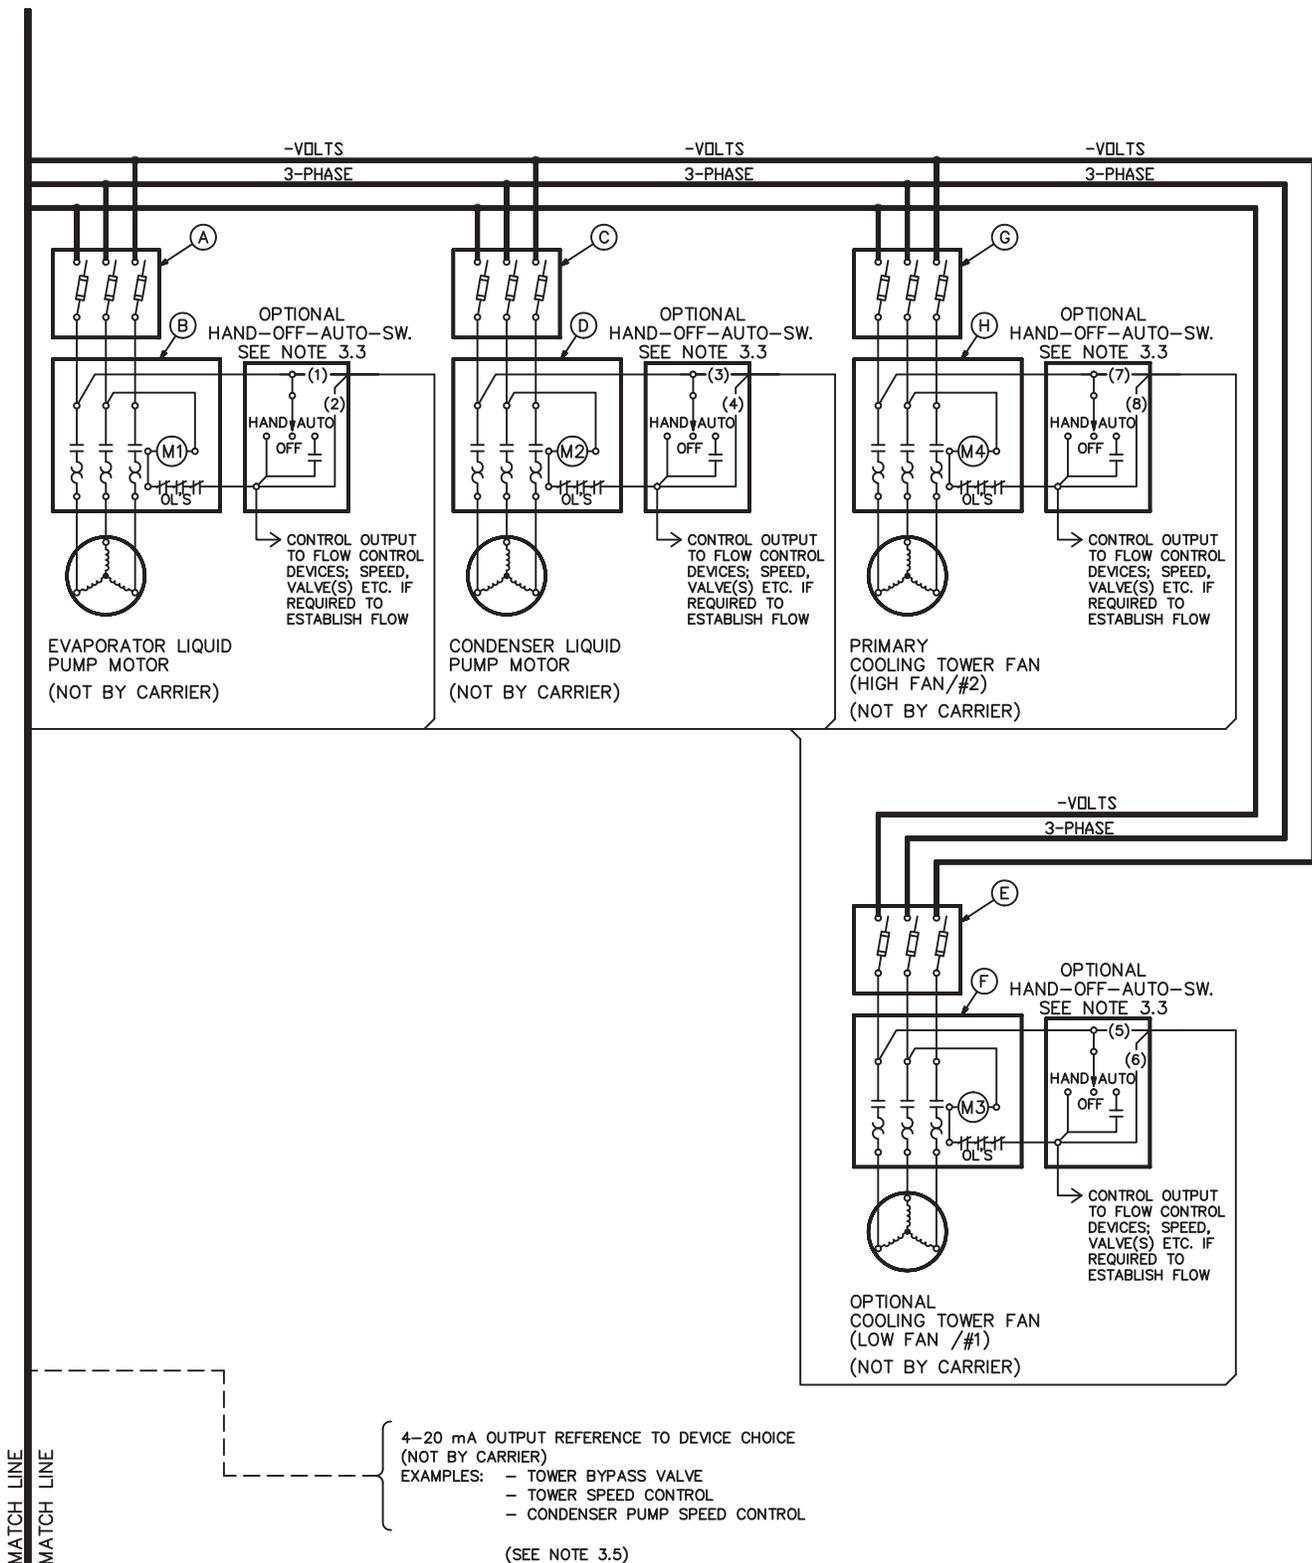


Fig. 31 — 19XR Typical Wiring with Unit-Mounted Variable Frequency Drive with ISM (Integrated Start Module) (cont)

NOTES FOR FIG. 31 19XR with Unit-Mounted VFD with ISM

I. GENERAL

- 1.0 Variable frequency drive (VFD) starters shall be designed and manufactured in accordance with Carrier Engineering Requirement Z-416.
- 1.1 All field-supplied conductors, devices, and the field installation wiring, and termination of conductors and devices, must be in compliance with all applicable codes and job specifications.

| |
|---|
| ⚠ CAUTION |
| To prevent damage to machine, do NOT punch holes or drill into the top surface of the VFD enclosure for field wiring. Knockouts are provided on the side of the VFD enclosure for field wiring connections. |

- 1.2 The routing of field-installed conduit and conductors and the location of field-installed devices must not interfere with equipment access or the reading, adjusting, or servicing of any component.
 - 1.3 Equipment installation and all starting and control devices, must comply with details in equipment submittal drawings and literature.
 - 1.4 Contacts and switches are shown in the position they would assume with the circuit de-energized and the chiller shut down.
- 1.5 WARNING — Do not use aluminum conductors.**
- 1.6 Installer is responsible for any damage caused by improper wiring between VFD and machine.
 - 1.7 All field-installed wiring is field-supplied.

II. POWER WIRING TO VFD

- 2.0 Provide a local means of disconnecting power to VFD. Provide short circuit protection for the chiller and interconnecting wire at the branch feeder. The short circuit protection shall be fused type or equivalent circuit breaker.
- 2.1 Metal conduit must be used for the power wires from VFD to branch feeder.
- 2.2 Line side power conductor rating must meet the VFD nameplate voltage and chiller full load amps (minimum circuit ampacity).
- 2.3 Lug adapters may be required if installation conditions dictate that conductors be sized beyond the minimum ampacity required. Disconnect lugs will accommodate the quantity (#) and size (MCM) cables (per phase) as indicated in table below. If larger lugs are required, the lugs can be purchased from Cutler-Hammer.

| VFD MAX INPUT AMPS | STANDARD 65KAIC LUG CAPACITY (PER PHASE) | |
|--------------------------|---|-----------------|
| | NO. OF CONDUCTORS | CONDUCTOR RANGE |
| 390 | 3 | 2/0-400 MCM |

- 2.4 Compressor motor and controls must be grounded by using equipment grounding lugs provided inside unit-mounted VFD enclosure.

- 2.5 Metering current transformers (CTs), if present, have an inner diameter of 2³/₄ inches. Caution should be taken when selecting power wiring so that all power cables can pass through the CTs.


III. CONTROL WIRING

- 3.0 Field-supplied control conductors to be at least 18 AWG or larger.
- 3.1 Ice build start/terminate device contacts, remote start/stop device contacts and spare safety device contacts (devices not supplied by Carrier), must have 24 VAC rating. MAX current is 60 mA, nominal current is 10 mA. Switches with gold plated bifurcated contacts are recommended.
- 3.2 Each integrated contact output can control loads (VA) for evaporator pump, condenser pump, tower fan low, tower fan high, and alarm annunciator devices rated 5 amps at 115 VAC and up to 3 amps at 277 VAC.

| |
|---|
| ⚠ CAUTION |
| Control wiring for Carrier to start pumps and tower fan motors and establish flows must be provided to assure machine protection. If primary pump, tower fan, and flow control is by other means, also provide parallel means for control by Carrier. Failure to do so could result in machine freeze-up or overpressure. |

Do not use control transformers in the control center as the power source for external or field-supplied contactor coils, actuator motors or any other loads.

- 3.4 Do not route control wiring carrying 30 v or less within a conduit which has wires carrying 50 v or higher or along side wires carrying 50 v or higher.
- 3.5 Spare 4-20 mA output signal is designed for controllers with a non-grounded 4-20 mA input signal and a maximum input impedance of 500 ohms.
- 3.8 Flow devices to confirm evaporator or condenser pump flow are not required. However, if flow devices are used, wire as shown in diagram below. Remove jumper installed at these terminals and wire in a 4.3 K resistor in its place. The flow device and resistor must be installed in parallel at these terminals such that the resistor provides a signal when the flow device is open.

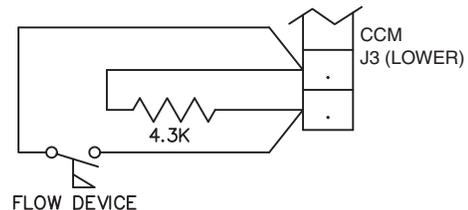


Free-Standing, Field-Installed Starter or VFD — Assemble and install compressor terminal box in desired orientation, and cut necessary conduit openings in conduit support plates. See Fig. 32-36. Attach power leads to compressor terminals in accordance with job wiring drawings, observing caution label in terminal box. Use only copper conductors. The motor must be grounded in accordance with NEC (National Electrical Code), applicable local codes, and job wiring diagrams. Installer is responsible for any damage caused by improper wiring between starter and compressor motor.

IMPORTANT: Do not insulate terminals until wiring arrangement has been checked and approved by Carrier start-up personnel. Also, make sure correct phasing is followed for proper motor rotation.

Insulate Motor Terminals and Lead Wire Ends — Insulate compressor motor terminals, lead wire ends, and electrical wires to prevent moisture condensation and electrical arcing. For low-voltage units (up to 600 v), obtain insulation material from machine shipping package consisting of 3 rolls of insulation putty and one roll of vinyl tape.

1. Insulate each terminal by wrapping with one layer of insulation putty.
2. Overwrap putty with 4 layers of vinyl tape.

High Voltage Units — High-voltage units require special terminal preparation. Follow local electrical codes for high-voltage installation. Vinyl tape is not acceptable; a high voltage terminal method must be used.

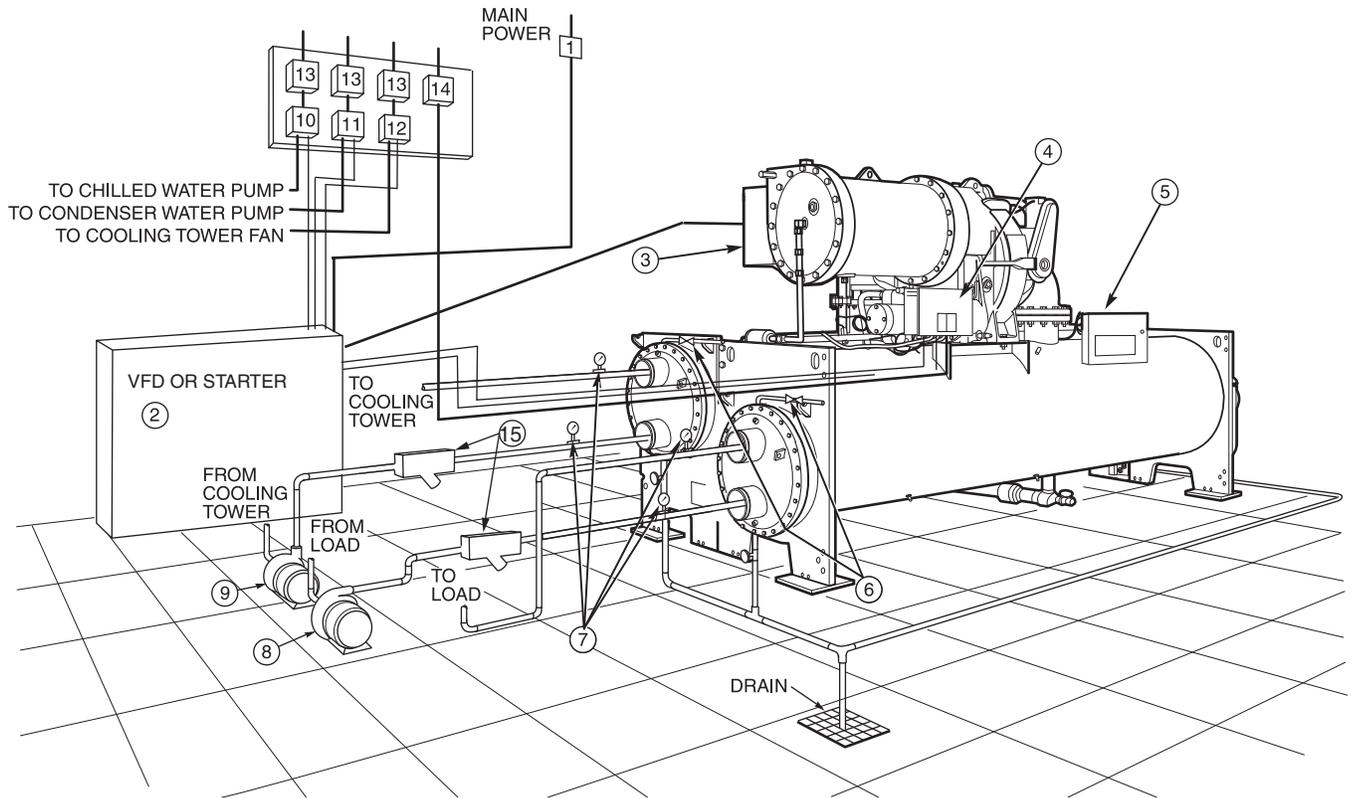

LEGEND

- 1 — Disconnect
 - 2 — Free-standing Compressor Motor Starter
 - 3 — Compressor Motor Terminal Box
 - 4 — Power Panel
 - 5 — Control Panel
 - 6 — Vents
 - 7 — Pressure Gages
 - 8 — Chilled Water Pump
 - 9 — Condenser Water Pump
 - 10 — Chilled Water Pump Starter
 - 11 — Condensing Water Pump Starter
 - 12 — Cooling Tower Fan Starter (Low Fan, High Fan)
 - 13 — Disconnect
 - 14 — Oil Pump Disconnect (See Note 3)
 - 15 — Strainers
- Piping
 Control Wiring
 Power Wiring

IMPORTANT: Wiring and piping shown are for general point-of-connection only and are not intended to show details for a specific installation. Certified field wiring and dimensional diagrams are available on request.


NOTES:

1. All wiring must comply with applicable codes.
2. Wiring not shown for optional devices such as:
 - Remote Start/Stop
 - Remote Alarms
 - Optional Safety Device
 - 4 to 20 mA Resets
 - Optional Remote Sensors
3. Oil pump disconnect may be located within the enclosure of Item 2 — Free-standing Compressor Motor Starter.
4. **IMPORTANT:** Carrier suggests that a structural engineer be consulted if transmission of vibrations from mechanical equipment is of concern.
5. Isolation valves are recommended on the cooler and condenser piping to each chiller for service.

Fig. 32 — 19XR with Free-Standing Starter or VFD

COMPRESSOR MOTOR TERMINAL BOX

| 19XR COMPRESSOR | MOTOR TERMINAL BOX SIZE |
|-----------------|--|
| FRAME 4 | 29-7/8" SQ. X 19-7/8" DEEP (APPROX. INSIDE DIMENSIONS) |
| FRAME 5 | 30-1/2" SQ. X 20" DEEP (APPROX. INSIDE DIMENSIONS) |

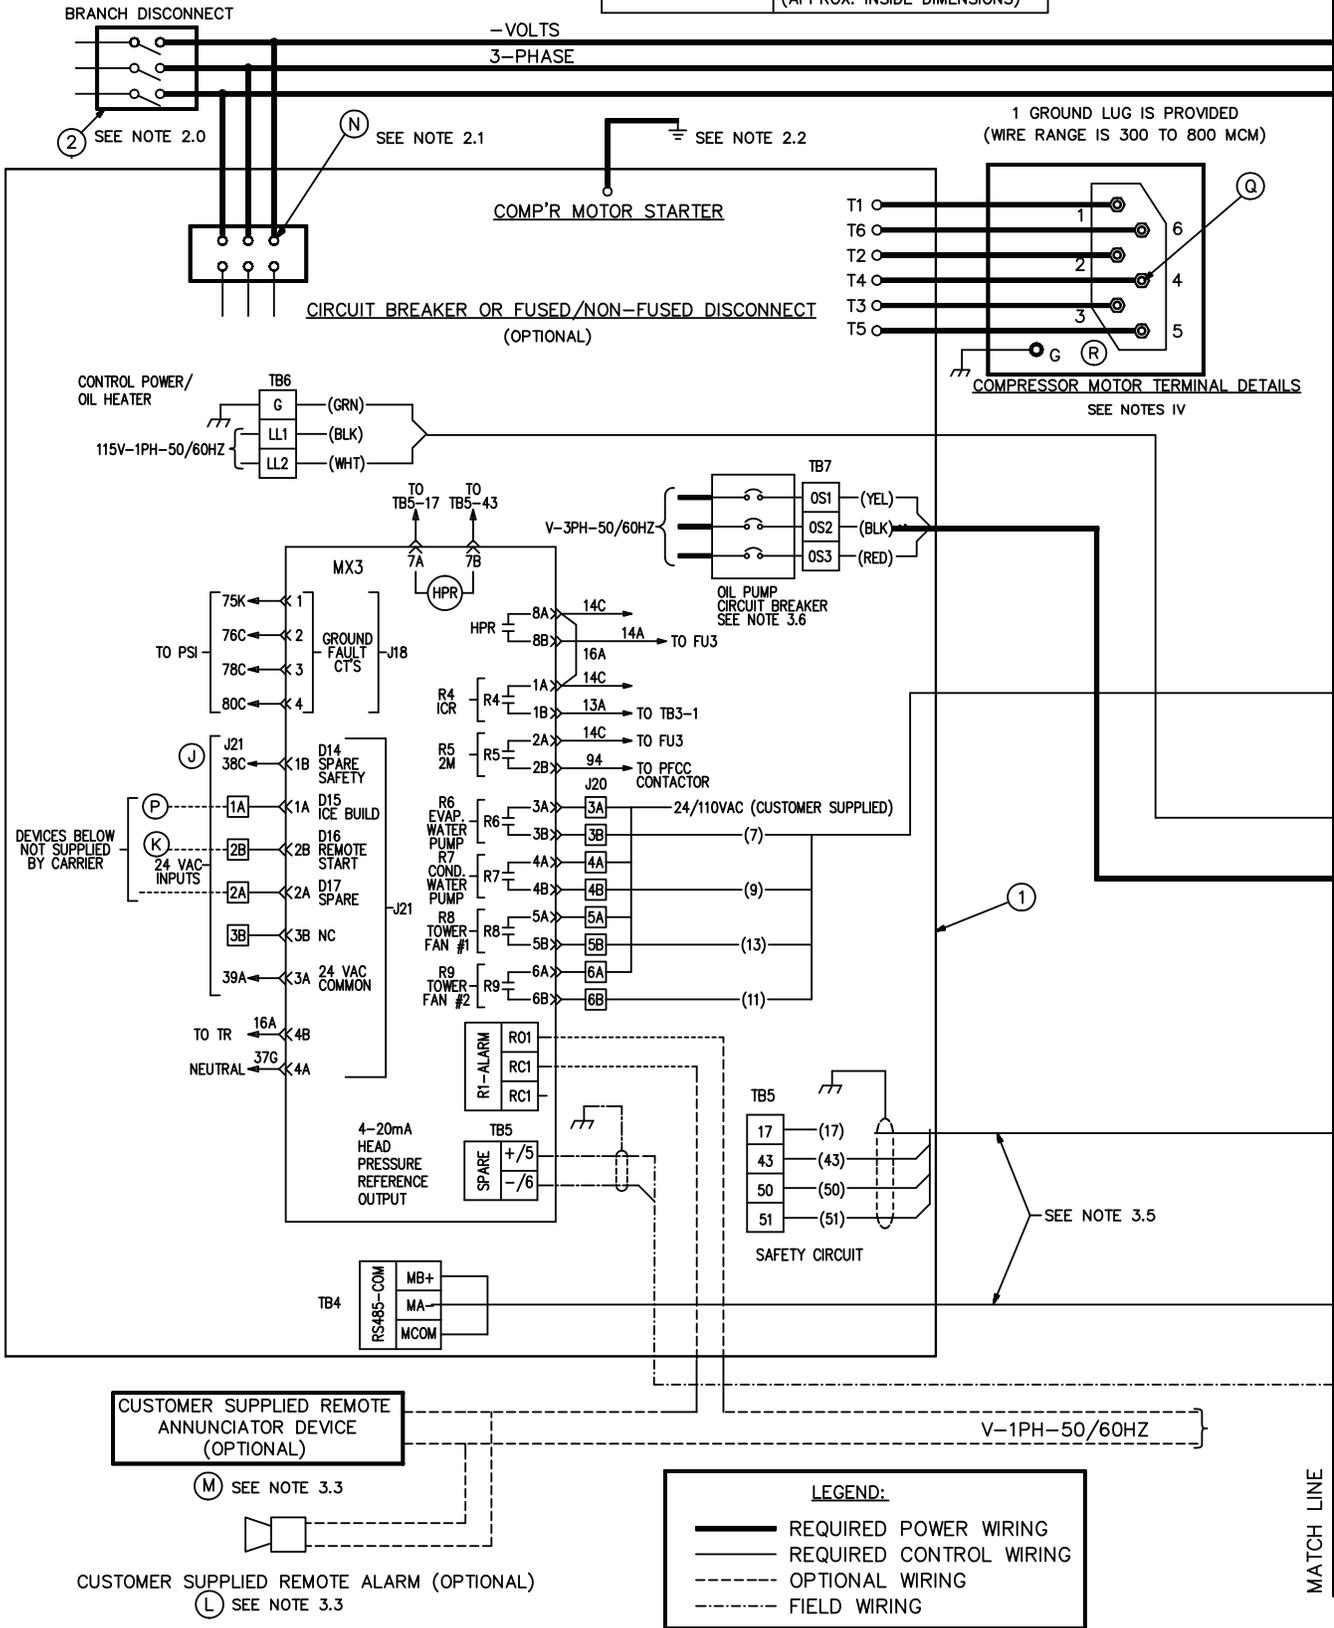

NOTE: See Legend on page 58.

Fig. 33 — 19XR Typical Field Wiring with Free-Standing Starter (Low Voltage)

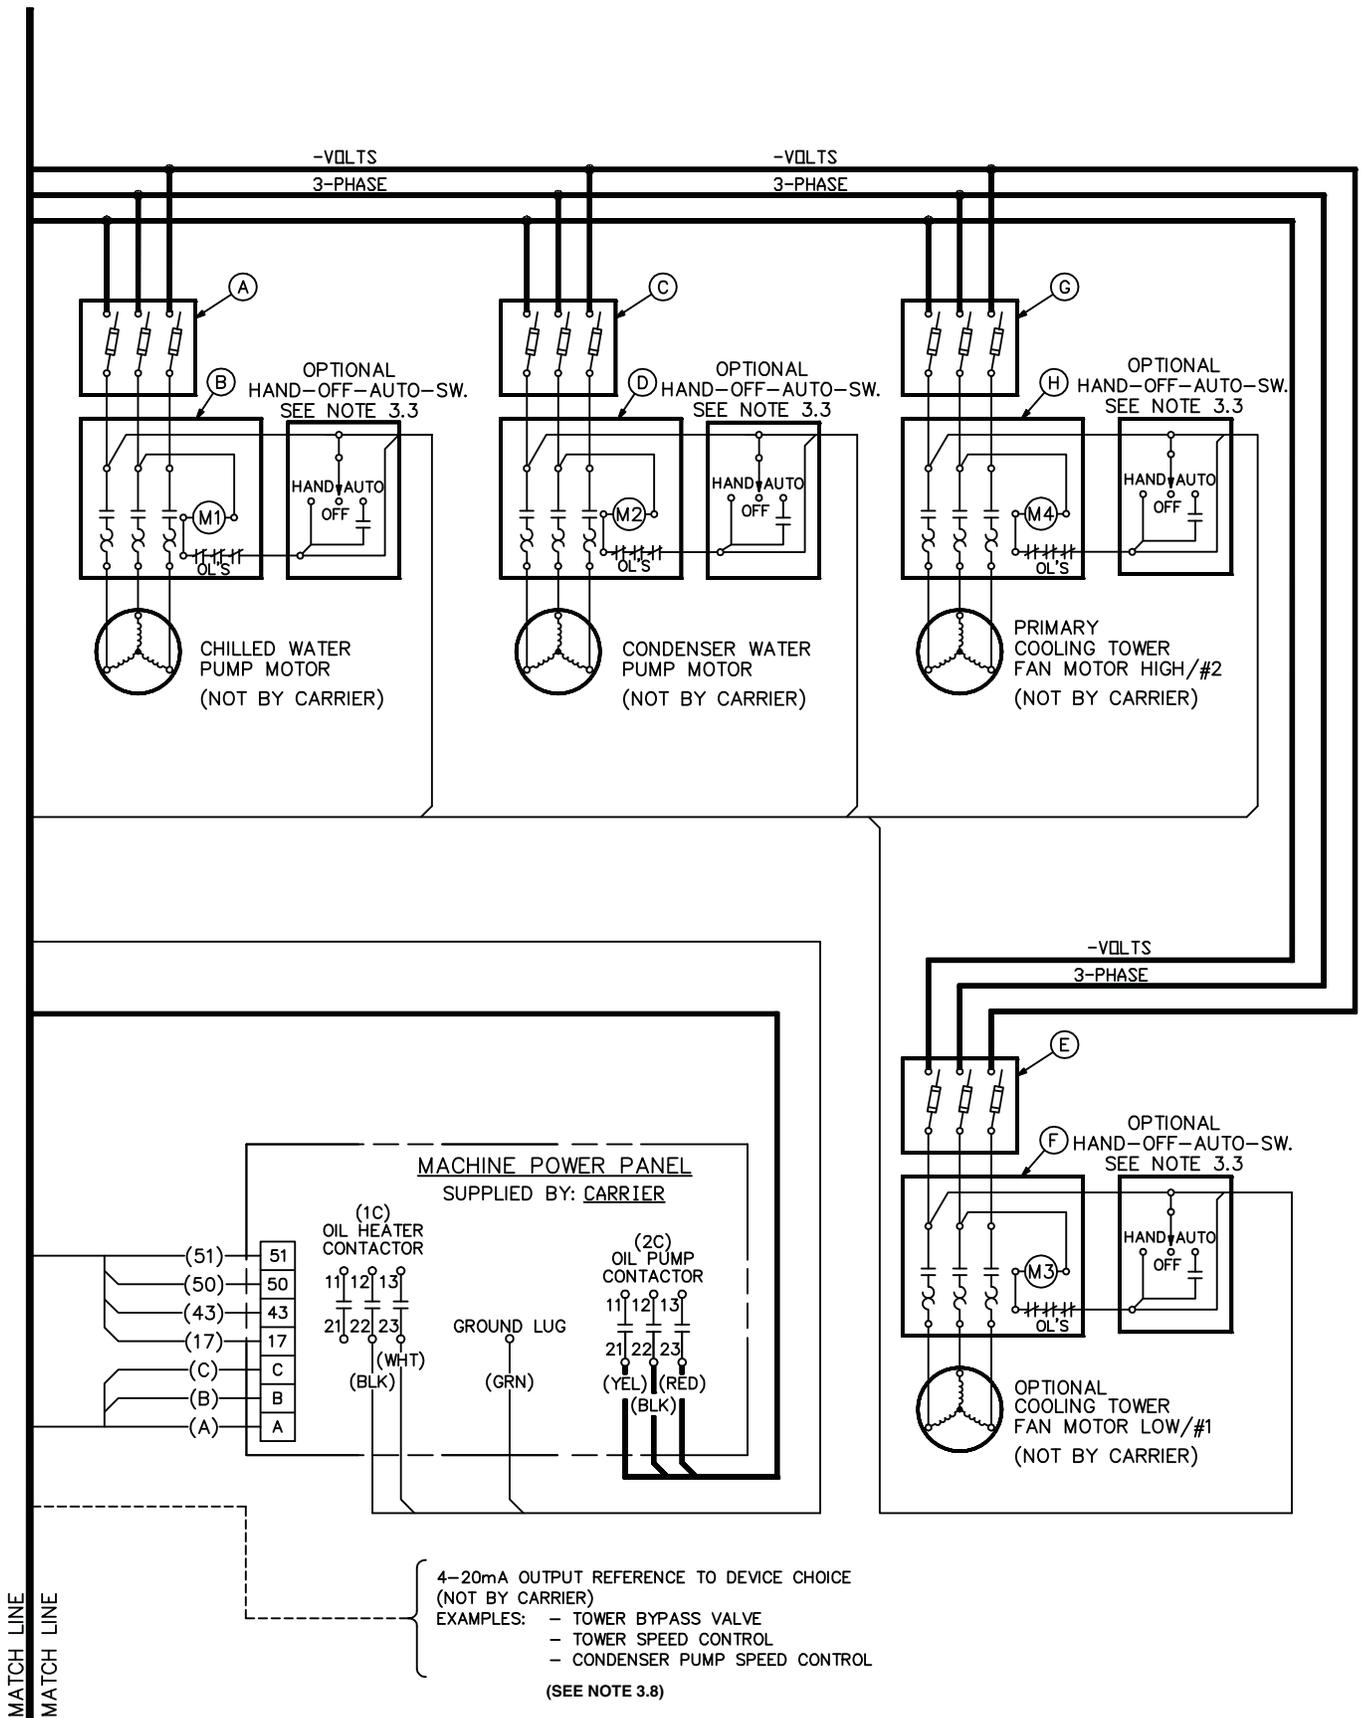


Fig. 33 — 19XR Typical Field Wiring with Free-Standing Starter (Low Voltage) (cont)

LEGEND FOR FIG. 33
19XR with Free-Standing Starter (Low Voltage)

| REFERENCE NUMBER | EXPLANATION |
|-----------------------------------|--|
| 1 | 3 Phase Under/Over Voltage |
| | Phase Loss/Imbalance/Reversal |
| | Motor Overload Protection |
| | Frequency Shift |
| | kW Transducer/kW Hours/Demand kW |
| | Single Cycle Dropout |
| | Motor/Starter Overcurrent |
| | Control Power Transformer (3KVA) (Integral) |
| | Controls and Oil Heater Circuit Breaker (integral) |
| | Oil Pump Circuit Breaker |
| | 3 Phase Analog Volts/Amps Meter Package |
| | Power Factor Correction Package |
| | Lightning/Surge Arrestor Package |
| | Auxiliary Run Status Contacts N.O./N.C. |
| | Run Indicating Light |
| | Emergency Stop Switch |
| Phase to Phase to Fault Detection | |
| Phase to Ground Fault Detection | |
| 2 | Compressor Motor Starter Branch Disconnect |
| A | Evaporator Liquid Pump Starter Disconnect |
| B | Evaporator Liquid Pump Motor Starter |
| C | Condenser Liquid Pump Starter Disconnect |
| D | Condenser Liquid Pump Motor Starter |
| E | Cooling Tower Fan Motor Starter Disconnect (Low Fan/#1) |
| F | Cooling Tower Fan Motor Starter (Low Fan/#1) |
| G | Cooling Tower Fan Motor Starter Disconnect (High Fan/#2) |
| H | Cooling Tower Fan Motor Starter (High Fan/#2) |
| J | Spare Safety Devices [N.C.] See Note 3.1 |
| K | Remote Start/Stop Device [N.O] See Note 3.1 |
| L | Remote Alarm See Note 3.3 |
| M | Remote Annunciator See Note 3.3 |
| N | Lug Adapters See Note 2.1 |
| P | Ice Build Start/Terminate Device See Note 3.1 |
| Q | Lead Connectors See Note 4.0 |
| R | 6 Lead to 3 Lead Jumpers See Note 4.0 |

See Notes on page 59.

NOTES FOR FIG. 33 19XR with Free-Standing Starter (Low Voltage)

I. GENERAL

- 1.0 Starters shall be designed and manufactured in accordance with Carrier Engineering Requirement Z-415.
- 1.1 All field-supplied conductors, devices, and the field installation wiring, termination of conductors and devices, must be in compliance with all applicable codes and job specifications.

CAUTION

To prevent damage to machine, do NOT punch holes or drill into the top surface of the starter enclosure for field wiring. Knock-outs are provided on the side of the starter enclosure for field wiring connections.

- 1.2 The routing of field-installed conduit and conductors and the location of field-installed devices must not interfere with equipment access or the reading, adjusting, or servicing of any component.
- 1.3 Equipment installation and all starting and control devices, must comply with details in equipment submittal drawings and literature.
- 1.4 Contacts and switches are shown in the position they would assume with the circuit de-energized and the chiller shut-down.
- 1.5 WARNING — Do not use aluminum conductors.**
- 1.6 Installer is responsible for any damage caused by improper wiring between starter and machine.
- 1.7 All field-installed wiring is field-supplied.

II. POWER WIRING TO STARTER

- 2.0 Provide a means of disconnecting power to starter.
- 2.1 Lug adapters may be required if installation conditions dictate that conductors be sized beyond the minimum ampacity required. Contact starter supplier for lug information.
- 2.2 Compressor motor and controls must be grounded by using equipment grounding lug provided inside starter enclosure.

III. CONTROL WIRING

- 3.0 Field-supplied control conductors to be at least 18 AWG or larger.
- 3.1 Ice build start/terminate device contacts, remote start/stop device contacts and spare safety device contacts (devices not supplied by Carrier), must have 24 VAC rating. MAX current is 60 mA, nominal current is 10 mA. Switches with gold plated bifurcated contacts are recommended.
- 3.2 Feed 24 VAC power to safety input terminals. Reference MX3 electrical drawings.
- 3.3 Each integrated contact output can control loads (VA) for evaporator pump, condenser pump, tower fan low, tower fan high, and alarm annunciator devices rated 5 amps at 115 VAC and up to 3 amps at 277 VAC.

CAUTION

Control wiring for Carrier to start pumps and tower fan motors and establish flows must be provided to assure machine protection. If primary pump, tower fan, and flow control is by other means, also provide parallel means for control by Carrier. Failure to do so could result in machine freeze-up or overpressure.

Do not use control transformers in the control center as the power source for external or field-supplied contactor coils, actuator motors or any other loads.

- 3.4 Do not route control wiring carrying 30 v or less within a conduit which has wires carrying 50 v or higher or along side wires carrying 50 v or higher.
- 3.5 Control wiring between starter and power panel must be separate shielded cables with minimum rating 600 v, 80 C. Ground shield at starter.

- 3.6 If optional pumpout/oil pump circuit breaker is not supplied within the starter enclosure, it must be located within sight of machine with wiring routed to suit.
- 3.7 When providing conductors for oil pump motor and oil heater power, refer to sizing data on label located on the chiller power panel, equipment submittal documentation or equipment product data catalog.
- 3.8 Spare 4-20 mA output signal is designed for controllers with a non-grounded 4-20 mA input signal and a maximum input impedance of 500 ohms.

IV. POWER WIRING BETWEEN FREE-STANDING STARTER AND COMPRESSOR MOTOR

- 4.0 Low voltage (600 v or less) compressor motors have (6) $\frac{5}{8}$ in. terminal studs (lead connectors not supplied by Carrier). Either 3 or 6 conductors must be run between compressor motor and starter, depending on the size of the conductors or the type of motor starter employed. If only 3 leads are utilized, jumper motor terminals as follows: 1 to 6, 2 to 4, 3 to 5. Center to center distance between terminals is $3\frac{5}{32}$ in. Compressor motor starter must have nameplate stamped as to conforming with Carrier Engineering requirement "Z-415."
- 4.1 Power conductor rating must meet minimum unit nameplate voltage and compressor motor RLA. Refer to the label located on the side of the chiller control panel, equipment submittal documentation or equipment product data catalog for conductor sizing data. (Conductor as defined below may be a single lead or multiple smaller ampacity leads in parallel for the purpose of carrying the equivalent or higher current of a single larger lead.)

When (3) conductors are used:

Minimum ampacity per conductor = 1.25 x compressor RLA

When (6) conductors are used:

Minimum ampacity per conductor = 0.721 x compressor RLA


- 4.2 When more than one conduit is used to run conductors from starter to compressor motor terminal box, an equal number of leads from the following phases (conductor) must be installed in each conduit to prevent excessive heating.
Inside delta starters: 1, 3, or multiples of 3 conduits are required. (For example: conductors to motor terminals 1, 2, 3, 4, 5 and 6 in a single conduit or conductors to motor terminals 1 and 4 in one conduit, conductors to motor terminals 2 and 5 in one conduit and conductors to motor terminals 3 and 6 in one conduit.)
For all other starters: 1, 2, or multiples of 2 are required. (For example: conductors to motor terminals 1, 2, and 3 in one conduit, and conductors to motor terminals 4, 5, and 6 in one conduit.)

- 4.3 Compressor motor power conductors may enter terminal box through top, left side or bottom left using holes cut by contractor to suit conduit. Flexible conduit should be used for the last few feet to the terminal box for unit vibration isolation. Use of stress cones or 12 conductors larger than 500 MCM may require an oversize (special) motor terminal box (not supplied by Carrier). Lead connections between 3-phase motors and their starters must not be insulated until Carrier personnel have checked compressor and oil pump rotations.

- 4.4 Compressor motor frame to be grounded in accordance with the National Electrical Code (NFPA-70) and applicable codes. Means for grounding compressor motor is pressure connector for #4 AWG to 500 MCM wire, supplied and located in the lower left side corner of the compressor motor terminal box.
- 4.5 Do not allow motor terminals to support weight of wire cables. Use cable supports and strain reliefs as required.
- 4.6 Use backup wrench when tightening lead connectors to motor terminal studs. Torque to 45 lb-ft max.

COMPRESSOR MOTOR TERMINAL BOX

| 19XR COMPRESSOR | MOTOR TERMINAL BOX SIZE |
|--------------------|---|
| 321-389 | 19-9/16" SQ. X 22-1/8" DEEP (APPROX. INSIDE DIMENSIONS) |
| 421-489 | 29-7/8" SQ. X 19-7/8" DEEP (APPROX. INSIDE DIMENSIONS) |
| 521-599 501-509 | 30-1/2" SQ. X 20" DEEP (APPROX. INSIDE DIMENSIONS) |

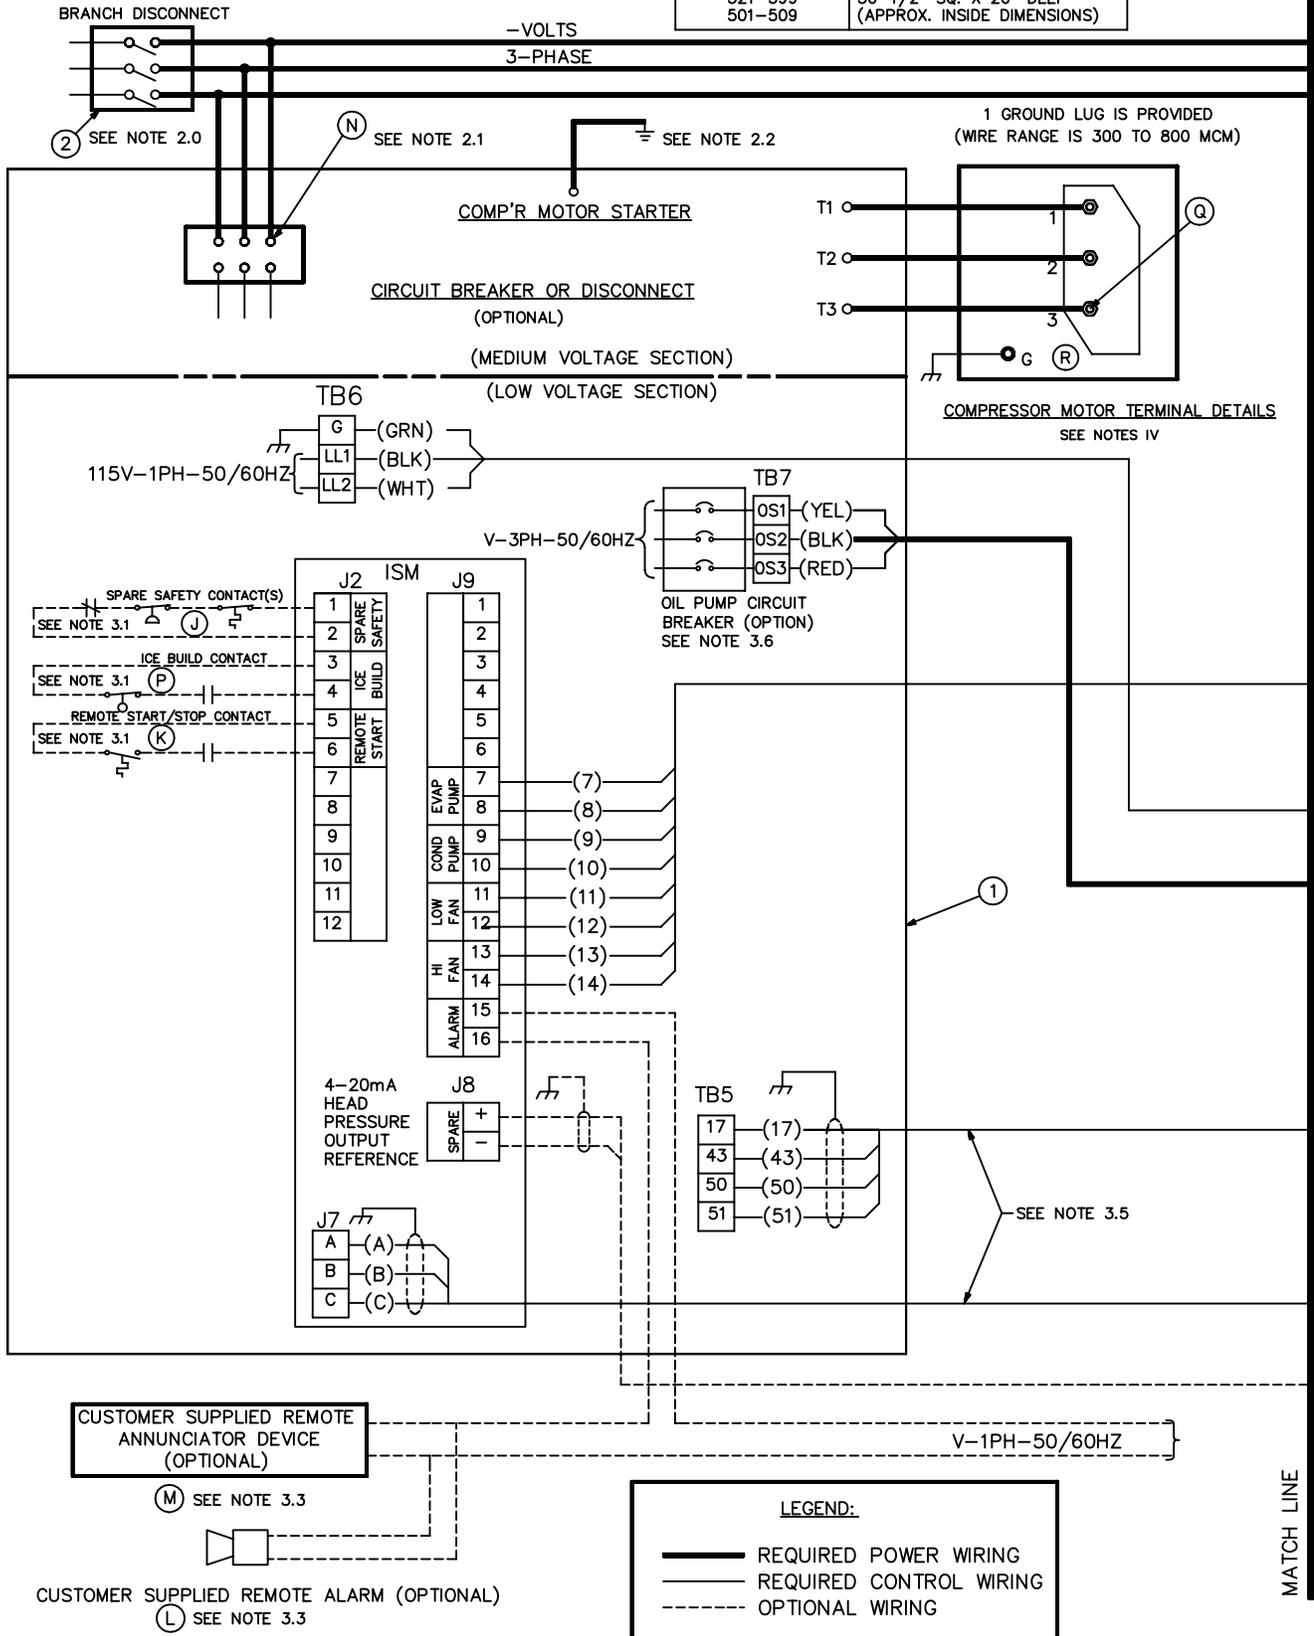

NOTE: See Legend on page 62.

Fig. 34 — 19XR Typical Field Wiring with Free-Standing Starter (Medium Voltage)

**LEGEND FOR FIG. 34
19XR with Free-Standing Starter (Medium Voltage)**

| REFERENCE NUMBER | EXPLANATION |
|---------------------------------|---|
| 1 | 3 Phase Under/Over Voltage |
| | Phase Loss/Imbalance/Reversal |
| | Motor Overload Protection |
| | Frequency Shift |
| | kW Transducer/kW Hours/Demand kW |
| | Single Cycle Dropout |
| | Motor/Starter Overcurrent |
| | Control Power Transformer (3KVA) (Integral) |
| | Controls and Oil Heater Circuit Breaker (integral) |
| | Oil Pump Circuit Breaker |
| | Oil Pump Circuit Breaker with Transformer |
| | 3 Phase Analog Volts/Amps Meter Package |
| | Power Factor Correction Package |
| | Lightning/Surge Arrestor Package |
| | Auxiliary Run Status Contacts N.O./N.C. |
| | Run Indicating Light |
| | Emergency Stop Switch |
| Phase to Ground Fault Detection | |
| 2 | Compressor Motor Starter Branch Disconnect |
| A | Evaporator Liquid Pump Starter Disconnect |
| B | Evaporator Liquid Pump Motor Starter |
| C | Condenser Liquid Pump Starter Disconnect |
| D | Condenser Liquid Pump Motor Starter |
| E | Cooling Tower Fan Motor Starter Disconnect (Low Fan/#1) |
| F | Cooling Tower Fan Motor Starter (Low Fan/#1) |
| G | Cooling Tower Fan Motor Starter Disconnect (High/#2) |
| H | Cooling Tower Fan Motor Starter (High Fan/#2) |
| J | Spare Safety Devices [N.C.] See Note 3.1 |
| K | Remote Start/Stop Device [N.O.] See Note 3.1 |
| L | Remote Alarm See Note 3.3 |
| M | Remote Annunciator See Note 3.3 |
| N | Lug Adapters See Note 2.1 |
| P | Ice Build Start/Terminate Device See Note 3.1 |
| Q | Lead Connectors See Note 4.0 |
| R | 6 Lead to 3 Lead Jumpers See Note 4.0 |

See Notes on page 63.

NOTES FOR FIG. 34 19XR with Free-Standing Starter (Medium Voltage)

I. GENERAL

- 1.0 Starters shall be designed and manufactured in accordance with Carrier Engineering Requirement Z-415.
- 1.1 All field-supplied conductors, devices, and the field installation wiring, termination of conductors and devices, must be in compliance with all applicable codes and job specifications.

CAUTION

To prevent damage to machine, do NOT punch holes or drill into the top surface of the starter enclosure for field wiring. Knock-outs are provided on the side of the starter enclosure for field wiring connections.

- 1.2 The routing of field-installed conduit and conductors and the location of field-installed devices must not interfere with equipment access or the reading, adjusting, or servicing of any component.
- 1.3 Equipment installation and all starting and control devices, must comply with details in equipment submittal drawings and literature.
- 1.4 Contacts and switches are shown in the position they would assume with the circuit de-energized and chiller shutdown.
- 1.5 WARNING — Do not use aluminum conductors.**
- 1.6 Installer is responsible for any damage caused by improper wiring between starter and machine.
- 1.7 All field-installed wiring is field-supplied.

II. POWER WIRING TO STARTER

- 2.0 Provide a means of disconnecting power to starter.
- 2.1 Lug adapters may be required if installation conditions dictate that conductors be sized beyond the minimum ampacity required. Contact starter supplier for lug information.
- 2.2 Compressor motor and controls must be grounded by using equipment grounding lug provided inside starter enclosure.

III. CONTROL WIRING

- 3.0 Field-supplied control conductors to be at least 18 AWG or larger.
- 3.1 Ice build start/terminate device contacts, remote start/stop device contacts and spare safety device contacts (devices not supplied by Carrier), must have 24 VAC rating. MAX current is 60 mA, nominal current is 10 mA. Switches with gold plated bifurcated contacts are recommended.
- 3.2 Remove jumper wire between J2-1 and J2-2 before connecting auxiliary safeties between these terminals.
- 3.3 Each integrated contact output can control loads (VA) for evaporator pump, condenser pump, tower fan low, tower fan high, and alarm annunciator devices rated 5 amps at 115 VAC and up to 3 amps at 277 VAC.

CAUTION

Control wiring for Carrier to start pumps and tower fan motors and establish flows must be provided to assure machine protection. If primary pump, tower fan, and flow control is by other means, also provide parallel means for control by Carrier. Failure to do so could result in machine freeze-up or overpressure.

Do not use control transformers in the control center as the power source for external or field-supplied contactor coils, actuator motors or any other loads.

- 3.4 Do not route control wiring carrying 30 v or less within a conduit which has wires carrying 50 v or higher or along side wires carrying 50 v or higher.
- 3.5 Control wiring between starter and power panel must be separate shielded cables with minimum rating 600 v, 80 C. Ground shield at starter.
- 3.6 If optional pumpout/oil pump circuit breaker is not supplied within the starter enclosure, it must be located within sight of machine with wiring routed to suit.
- 3.7 When providing conductors for oil pump motor and oil heater power, refer to sizing data on label located on the chiller power panel, equipment submittal documentation or equipment product data catalog.
- 3.8 Spare 4-20 mA output signal is designed for controllers with a non-grounded 4-20 mA input signal and a maximum input impedance of 500 ohms.

IV. POWER WIRING BETWEEN FREE-STANDING STARTER AND COMPRESSOR MOTOR


- 4.0 Medium voltage (over 600 volts) compressor motors have (3) terminals. Connections are $\frac{9}{16}$ -in. threaded stud. A compression lug with a single $\frac{9}{16}$ -in. diameter hole can be connected directly to the stud or 3 adapters are supplied for connecting a NEMA lug. Use suitable connectors and insulation for high voltage alternating current cable terminations (these items are not supplied by Carrier). Compressor motor starter must have nameplate stamped as to conforming with Carrier Engineering requirement "Z-415."

- 4.1 Power conductor rating must meet minimum unit nameplate voltage and compressor motor RLA. Refer to the label located on the side of the chiller control panel, equipment submittal documentation or equipment product data catalog for conductor sizing data. (Conductor as defined below may be a single lead or multiple smaller ampacity leads in parallel for the purpose of carrying the equivalent or higher current of a single larger lead.)

When (3) conductors are used:


Minimum ampacity per conductor = 1.25 x compressor RLA

- 4.2 When more than one conduit is used to run conductors from starter to compressor motor terminal box, an equal number of leads from each phase (conductor) must be in each conduit to prevent excessive heating. (For example, conductors to motor terminals 1, 2, and 3 in one conduit, and those to 4, 5, and 6 in another).
- 4.4 Compressor motor power conductors may enter terminal box through top, left side or bottom left using holes cut by contractor to suit conduit. Flexible conduit should be used for the last few feet to the terminal box for unit vibration isolation. Use of stress cones may require an oversize (special) motor terminal box (not supplied by Carrier).
- 4.3 Compressor motor frame to be grounded in accordance with the National Electrical Code (NFPA-70) and applicable codes. Means for grounding compressor motor is a #4 AWG to 500 MCM pressure connector, supplied and located in the lower left side corner of the compressor motor terminal box.
- 4.5 Do not allow motor terminals to support weight of wire cables. Use cable supports and strain reliefs as required.
- 4.6 Use backup wrench when tightening lead connectors to motor terminal studs. Torque to 30-35 ft-lb max.

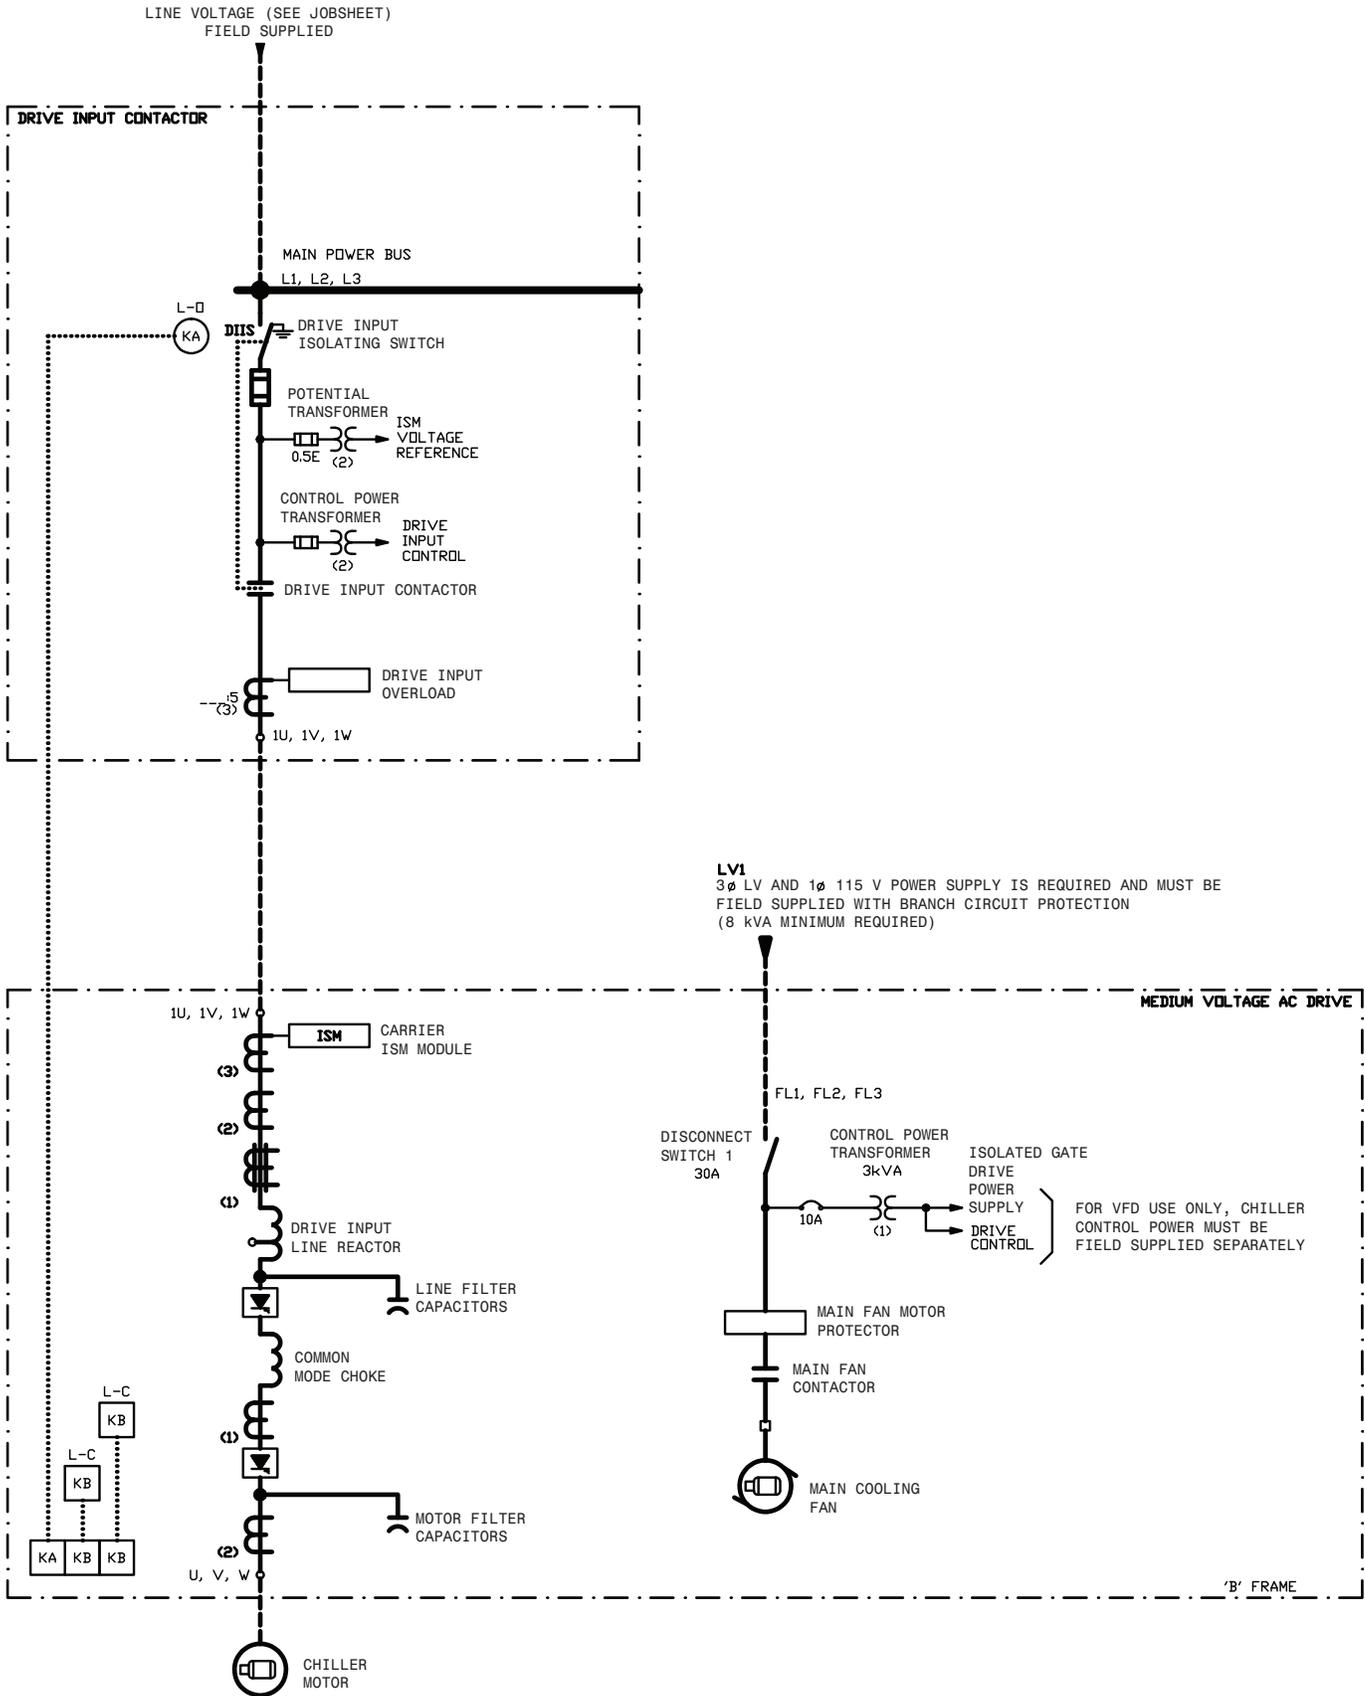

NOTE: See Legend on page 67.

Fig. 35 — 19XR Typical Field Wiring with Free-Standing Starter (Medium Voltage VFD)

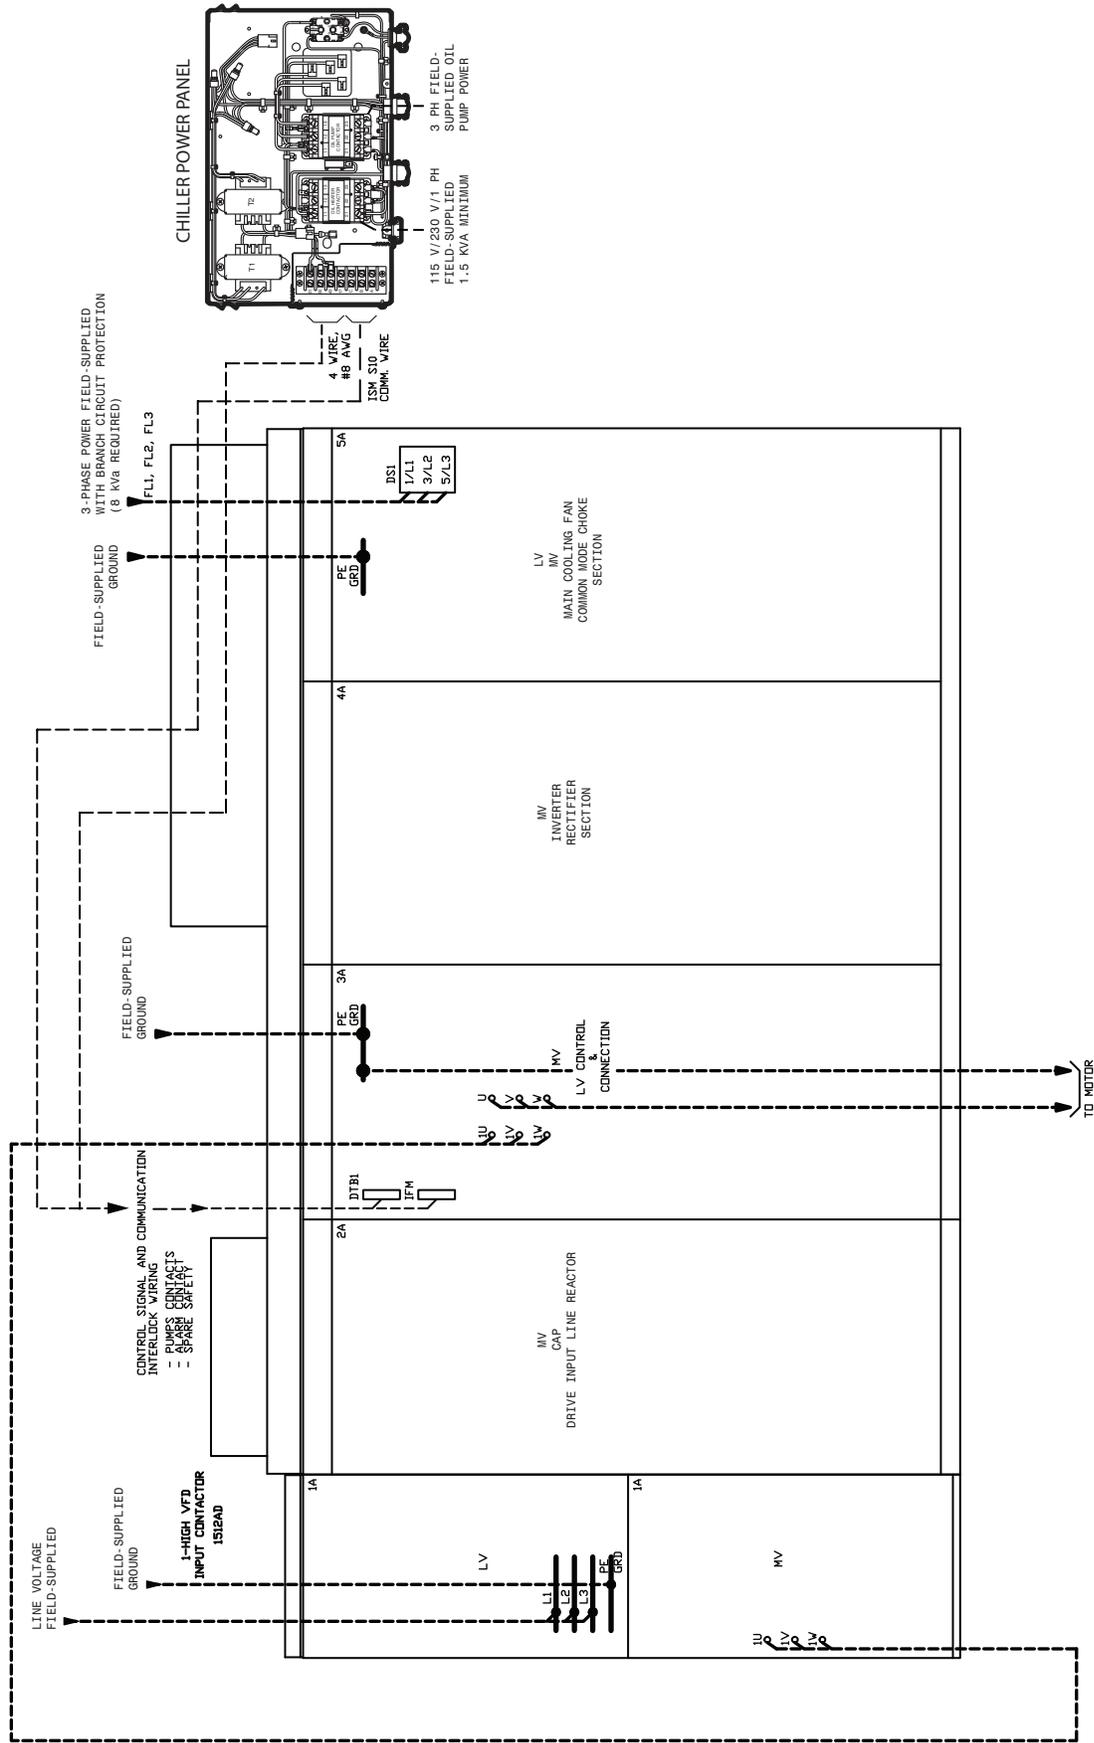

NOTE: See Legend on page 67.

Fig. 35 — 19XR Typical Field Wiring with Free-Standing Starter (Medium Voltage VFD) (cont)

LEGEND FOR FIG. 35 19XR with Free-Standing Starter (Medium Voltage VFD)

| | | | |
|---|--|---|---|
| AWG | — American Wire Gage | | |
| CBx | — Circuit Breaker |  | SWITCHES AND INPUT DEVICES |
| DI | — Drive Input Contactor |  | Contact Normally Open (Make) |
| DIC | — Drive Input Control Relay | | Contact Normally Closed (Break) |
| DICR1 | — Drive Input Contactor Pilot Relay | | OUTPUT DEVICES |
| DIIS | — Drive Input Isolating Switch |  | Fan (3 Phase Induction Motor) |
| DIOLx | — Drive Input Overload Auxiliary Relay |  | Induction Machine |
| DITB | — Drive Input Contactor Terminal Blocks | | |
| DSx | — Disconnect Switch | | |
| FLT | — Fault Relay | | |
| GRD | — Ground | | |
| HPR | — High Pressure Relay | | |
| IFM | — Interface Module | | |
| ISM | — Integrated Starter Module | | |
| L-C | — Locked Closed | | |
| L-O | — Locked Open | | |
| LV | — Low Voltage | | |
| LVx | — External Low Voltage Supply | | |
| MSRXx | — Monitoring Safety Relay Auxiliary Relay x | | |
| MV | — Medium Voltage | | |
| PE | — Earth Ground | | |
| PP | — Carrier Power Panel | | |
| RUN | — Run Relay | | |
| SS | — Surge Suppressor | | |
| VFD | — Variable Frequency Drive | | |
| WRN | — Warning Relay | | |
| ∠66 | Carrier ISM to be programmed by Carrier before start-up. Relay contacts shown <u>without</u> signal power applied. |  | POWER ELECTRONIC DEVICES |
| ∠104 | Located in drive low voltage control section. Wire with #12 AWG. | | Symmetrical Gate-Commutated Thyristor and Gate Driver Board |
| | WIRING | | MISCELLANEOUS |
|  | Factory Wiring |  | Note Number Indicator |
|  | Field Wiring |  | Contact Location Description |
|  | Mechanically Connected | | |
|  | Conductor, Crossing of Paths or Conductors Not Connected |  | Relay Location Description |
|  | Conductor, Junction of Connected Paths, Conductors or Wires | | |
|  | Conductor, Separable or Jacks Engaged |  | Key Interlock on Isolation Switch |
|  | Terminal |  | Key Interlock on MV Door |
|  | Terminal (Rockwell Automation use only) |  | Multiple Barrel Key Interlock on Isolation Switch |
|  | Terminal Blocks |  | Multiple Barrel Key Interlock on MV Door |
|  | — Barrier |  | Transfer Block |
|  | Wired To/From Destination | | |

See Notes on page 68.

NOTES FOR FIG. 35 19XR with Free-Standing Starter (Medium Voltage VFD)

I. GENERAL

- 1.0 Variable Frequency Drive (VFD) shall be designed and manufactured in accordance with Carrier Engineering Requirement Z-416.
- 1.1 All field-supplied conductors, devices, and the field installation wiring, termination of conductors and devices, must be in compliance with all applicable codes and job specifications.

⚠ CAUTION

To prevent damage to machine, do NOT punch holes or drill into the top surface of the VFD enclosure for field wiring. Field wiring knockouts are provided on the top and side of the VFD enclosure for field wiring connections.

- 1.2 The routing of field-installed conduit and conductors and the location of field-installed devices must not interfere with equipment access or the reading, adjusting, or servicing of any component.
- 1.3 Equipment installation and all starting and control devices, must comply with details in equipment submittal drawings and literature.
- 1.4 Contacts and switches are shown in the position they would assume with the circuit de-energized and chiller shutdown.
- 1.5 WARNING - Do not use aluminum conductors.**
- 1.6 Installer is responsible for any damage caused by improper wiring between VFD and machine.
- 1.7 All field-installed wiring is field-supplied.

II. POWER WIRING TO VFD

- 2.0 Provide a means of disconnecting power to VFD.
- 2.1 Lug adapters may be required if installation conditions dictate that conductors be sized beyond the minimum ampacity required. Contact VFD supplier for lug information.
- 2.2 Compressor motor and controls must be grounded by using equipment grounding lug provided inside VFD enclosure.

III. CONTROL WIRING

- 3.0 Field-supplied control conductors to be at least 18 AWG or larger.
- 3.1 Optional Ice build start/terminate device contacts, optional remote start/stop device contacts and optional spare safety device contacts (devices not supplied by Carrier), must have 24 VAC rating. MAX current is 60 mA, nominal current is 10 mA. Switches with gold plated bifurcated contacts are recommended.
- 3.2 Remove jumper wire between ISM J2-1 and ISM J2-2 before connecting auxiliary safeties between these terminals.
- 3.3 Each integrated contact output can control loads (VA) for evaporator pump, condenser pump, tower fan low, tower fan high, and alarm annunciator devices rated 5 amps at 115 VAC and up to 3 amps at 277 VAC.

⚠ CAUTION

Control wiring for Carrier to start pumps and tower fan motors and establish flows must be provided to assure machine protection. If primary pump, tower fan, and flow control is by other means, also provide parallel means for control by Carrier. Failure to do so could result in machine freeze-up or overpressure.

Do not use control transformers in the control center as the power source for external or field-supplied contactor coils, actuator motors or any other loads.

- 3.4 Do not route control wiring carrying 30 v or less within a conduit which has wires carrying 50 v or higher or along side wires carrying 50 v or higher.
- 3.5 Control wiring between VFD and power panel must be separate shielded cables with minimum rating 600 v, 80 C. Ground shield at VFD.
- 3.6 If optional pumpout/oil pump circuit breaker is not supplied within the starter enclosure, it must be located within sight of machine with wiring routed to suit.
- 3.7 When providing conductors for oil pump motor and oil heater power, refer to sizing data on label located on the chiller power panel, equipment submittal documentation or equipment product data catalog.
- 3.8 Spare 4-20 mA output signal is designed for controllers with a non-grounded 4-20 mA input signal and a maximum input impedance of 500 ohms.

IV. POWER WIRING BETWEEN FREE-STANDING VFD AND COMPRESSOR MOTOR

- 4.0 Medium voltage (over 600 volts) compressor motors have (3) terminals. Connections are $\frac{9}{16}$ -in. threaded stud. A compression lug with a single $\frac{9}{16}$ -in. diameter hole can be connected directly to the stud or 3 adapters are supplied for connecting a NEMA lug. Use suitable connectors and insulation for high voltage alternating current cable terminations (these items are not supplied by Carrier). Compressor motor starter must have nameplate stamped as to conforming with Carrier Engineering requirement "Z-416."
- 4.1 Power conductor rating must meet minimum unit nameplate voltage and compressor motor RLA. Refer to the label located on the side of the chiller control panel, equipment submittal documentation or equipment product data catalog for conductor sizing data. (Conductor as defined below may be a single lead or multiple smaller ampacity leads in parallel for the purpose of carrying the equivalent or higher current of a single larger lead.)
When (3) conductors are used:
Minimum ampacity per conductor = 1.25 x compressor RLA
When (6) conductors are used:
Minimum ampacity per conductor = 1.25 x compressor RLA/2
- 4.2 When more than one conduit is used to run conductors from VFD to compressor motor terminal box, an equal number of leads from each phase (conductor) must be in each conduit to prevent excessive heating. (For example, conductors to motor terminals 1, 2, and 3 in one conduit, and to 1, 2, and 3 in another conduit).
- 4.4 Compressor motor power conductors may enter terminal box through top, left side or bottom left using holes cut by contractor to suit conduit. Flexible conduit should be used for the last few feet to the terminal box for unit vibration isolation. Use of stress cones may require an oversize (special) motor terminal box (not supplied by Carrier).
- 4.3 Compressor motor frame to be grounded in accordance with the National Electrical Code (NFPA-70) and applicable codes. Means for grounding compressor motor is a #4 AWG to 500 MCM pressure connector, supplied and located in the lower left side corner of the compressor motor terminal box.
- 4.5 Do not allow motor terminals to support weight of wire cables. Use cable supports and strain reliefs as required.
- 4.6 Use backup wrench when tightening lead connectors to motor terminal studs. Torque to 30-35 ft-lb max.
- 4.7 Do not exceed 100 ft. maximum power cable length between the VFD and motor terminals without consulting Carrier for special requirements.


LEGEND FOR FIG. 36
19XR with Free-Standing Low Voltage VFD

| REFERENCE NUMBER | EXPLANATION |
|-----------------------|--|
| 1 | 3 Phase Under/Over Voltage |
| | Phase Loss/Imbalance/Reversal |
| | Motor Overload Protection |
| | Frequency Shift |
| | kW Transducer/kW Hours/Demand kW |
| | Single Cycle Dropout |
| | Motor/Starter Overcurrent |
| | Control Power Transformer (3KVA) (Integral) |
| | Controls and Oil Heater Circuit Breaker (integral) |
| | Oil Pump Circuit Breaker (Integral) |
| | Phase to Ground Fault Protection |
| | 3 Phase Analog Volts/Amps Meter Package |
| | Power Factor Correction Package |
| | Lightning/Surge Arrestor Package |
| | Line Reactor (See Fig. 30) |
| | Passive Line Filter |
| | 12 Pulse Input Section |
| Run Indicating Light | |
| Emergency Stop Switch | |
| 2 | Compressor Motor Starter Branch Disconnect |
| A | Evaporator Liquid Pump Starter Disconnect |
| B | Evaporator Liquid Pump Motor Starter |
| C | Condenser Liquid Pump Starter Disconnect |
| D | Condenser Liquid Pump Motor Starter |
| E | Cooling Tower Fan Motor Starter Disconnect (Low Fan/#1) |
| F | Cooling Tower Fan Motor Starter (Low Fan/#1) |
| G | Cooling Tower Fan Motor Starter Disconnect (High Fan/#2) |
| H | Cooling Tower Fan Motor Starter (High Fan/#2) |
| J | Spare Safety Devices [N.C.] See Note 3.1 |
| K | Remote Start/Stop Device [N.O] See Note 3.1 |
| L | Remote Alarm See Note 3.3 |
| M | Remote Annunciator See Note 3.3 |
| N | Lug Adapters See Note 2.1 |
| P | Ice Build Start/Terminate Device See Note 3.1 |
| Q | Lead Connectors See Note 4.0 |
| R | 6 Lead to 3 Lead Jumpers See Note 4.0 |

See Notes on page 72.

COMPRESSOR MOTOR TERMINAL BOX

| 19XR COMPRESSOR | MOTOR TERMINAL BOX SIZE |
|-------------------|---|
| FRAME 2 & FRAME 3 | 19-9/16" SQ. X 22-1/8" DEEP (APPROX. INSIDE DIMENSIONS) |
| FRAME 4 | 29-7/8" SQ. X 19-7/8" DEEP (APPROX. INSIDE DIMENSIONS) |
| FRAME 5 | 30-1/2" SQ. X 20" DEEP (APPROX. INSIDE DIMENSIONS) |

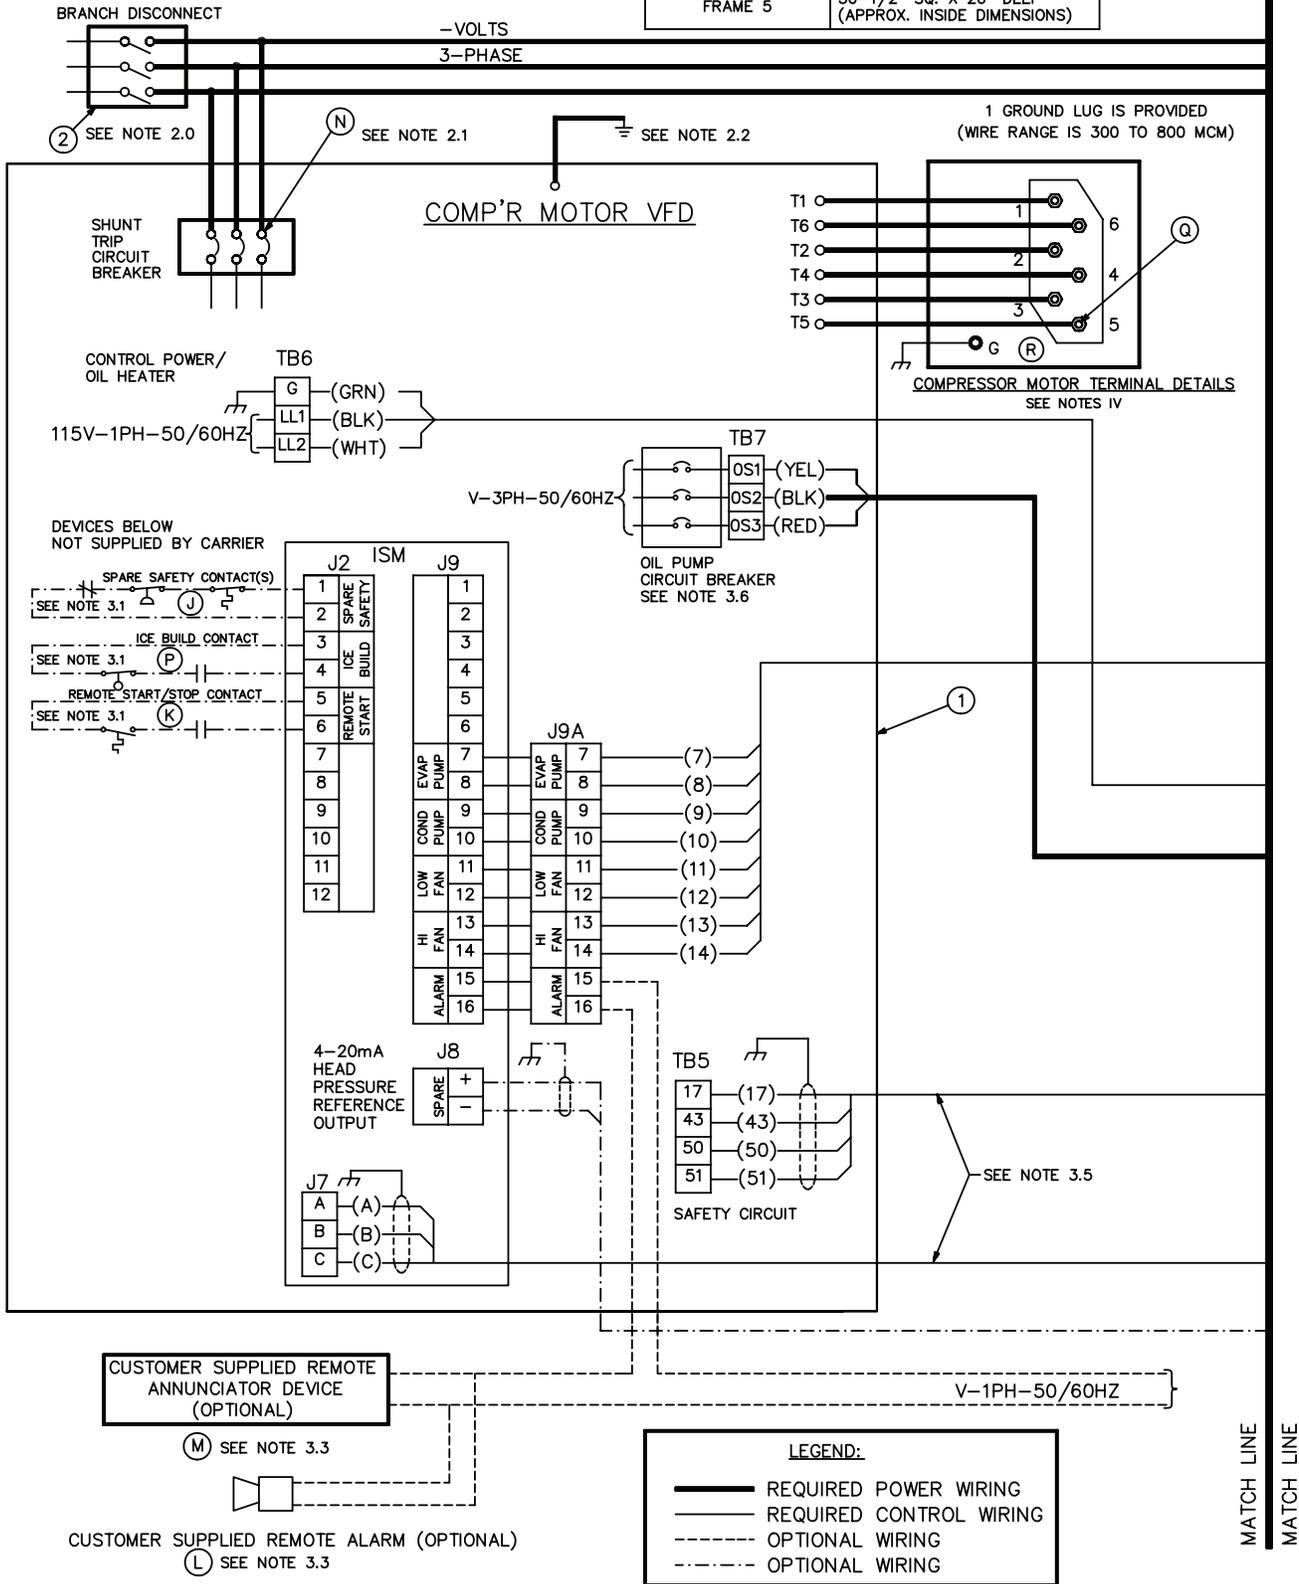

NOTE: See Legend on page 69.

Fig. 36 — 19XR Typical Field Wiring with Free-Standing Low Voltage VFD

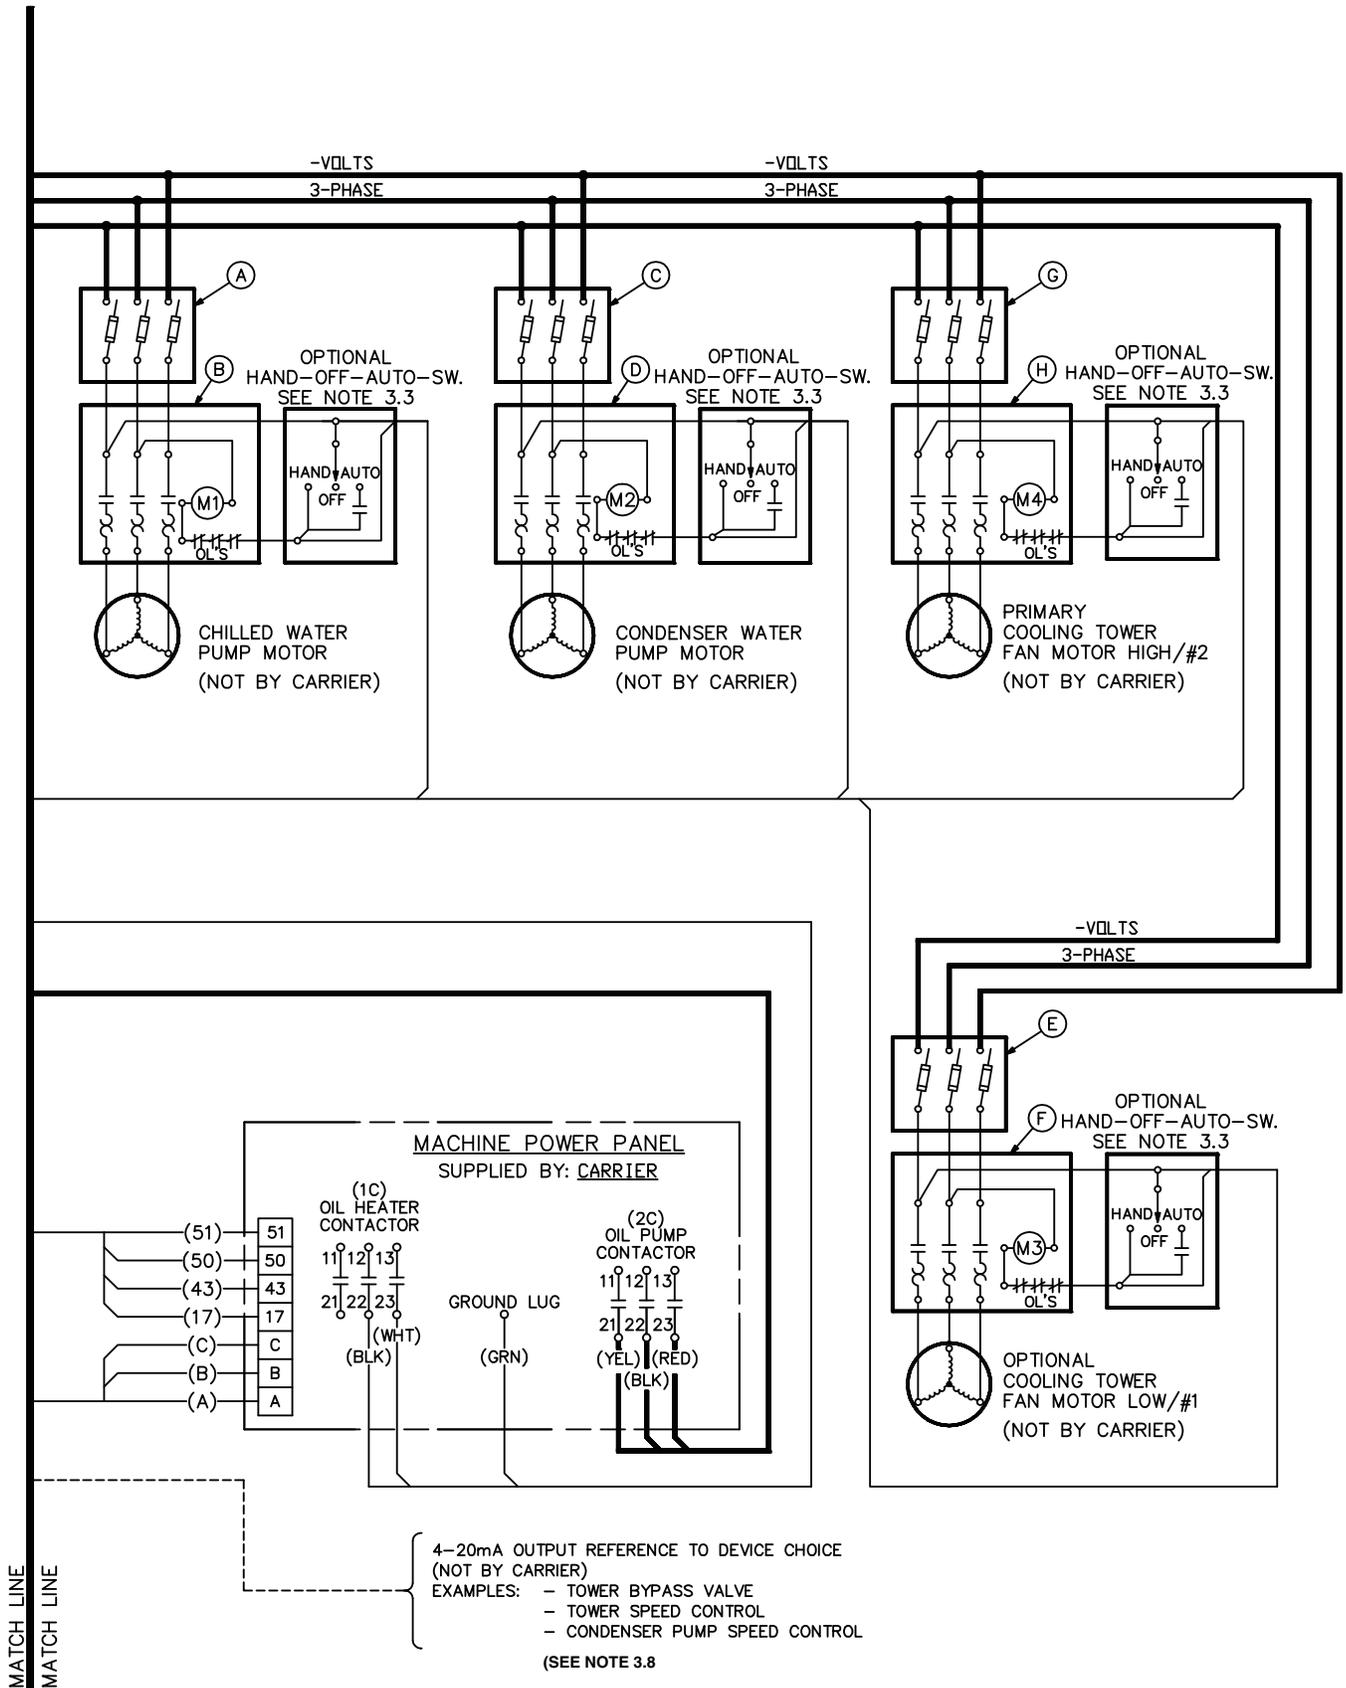


Fig. 36 — 19XR Typical Field Wiring with Free-Standing Low Voltage VFD (cont)

NOTES FOR FIG. 36 19XR with Free-Standing Low Voltage VFD

I. GENERAL

- 1.0 Variable frequency drive (VFD) shall be designed and manufactured in accordance with Carrier Engineering Requirement Z-416.
- 1.1 All field-supplied conductors, devices, and the field-installation wiring, termination of conductors and devices, must be in compliance with all applicable codes and job specifications.

⚠ CAUTION

To prevent damage to machine, do NOT punch holes or drill into the top surface of the VFD enclosure for field wiring. Knockouts are provided on the side of the VFD enclosure for field wiring connections.

- 1.2 The routing of field-installed conduit and conductors and the location of field-installed devices must not interfere with equipment access or the reading, adjusting, or servicing of any component.
- 1.3 Equipment installation and all starting and control devices, must comply with details in equipment submittal drawings and literature.
- 1.4 Contacts and switches are shown in the position they would assume with the circuit de-energized and the chiller shut down.
- 1.5 WARNING — Do not use aluminum conductors.**
- 1.6 Installer is responsible for any damage caused by improper wiring between VFD and machine.
- 1.7 All field-installed wiring is field-supplied.

II. POWER WIRING TO VFD

- 2.0 Provide a local means of disconnecting power to VFD.
- 2.1 Lug adapters may be required if installation conditions dictate that conductors be sized beyond the minimum ampacity required. Refer to VFD dimensional drawings for lug information.
- 2.2 Compressor motor and controls must be grounded by using equipment grounding lugs provided inside VFD enclosure.

III. CONTROL WIRING

- 3.0 Field-supplied control conductors to be at least 18 AWG or larger.
- 3.1 Optional ice build start/terminate device contacts, optional remote start/stop device contacts and optional spare safety device contacts, must have 24 VAC rating. MAX current is 60 mA, nominal current is 10 mA. Switches with gold plated bifurcated contacts are recommended.
- 3.2 Remove jumper wire between J2-1 and J2-2 before connecting auxiliary safeties between these terminals.
- 3.3 Each integrated contact output can control loads (VA) for evaporator pump, condenser pump, tower fan low, tower fan high, and alarm annunciator devices rated 5 amps at 115 VAC and up to 3 amps at 277 VAC.

⚠ CAUTION

Control wiring for Carrier to start pumps and tower fan motors and establish flows must be provided to assure machine protection. If primary pump, tower fan, and flow control is by other means, also provide parallel means for control by Carrier. Failure to do so could result in machine freeze-up or overpressure.

Do not use control transformers in the control center as the power source for external or field-supplied contactor coils, actuator motors or any other loads.

- 3.4 Do not route control wiring carrying 30 v or less within a conduit which has wires carrying 50 v or higher or along side wires carrying 50 v or higher.

- 3.5 Control wiring between VFD and power panel must be separate shielded cables with minimum rating 600 v, 80 C. Ground shield at VFD.
- 3.6 If optional pumpout/oil pump circuit breaker is not supplied within the starter enclosure, it must be located within sight of machine with wiring routed to suit.
- 3.7 When providing conductors for oil pump motor and oil heater power, refer to sizing data on label located on the chiller power panel, equipment submittal documentation or equipment product data catalog.
- 3.8 Spare 4-20 mA output signal is designed for controllers with a non-grounded 4-20 mA input signal and a maximum input impedance of 500 ohms.

IV. POWER WIRING BETWEEN FREE-STANDING VFD AND COMPRESSOR MOTOR

- 4.0 Low voltage (600 v or less) compressor motors have (6) $\frac{5}{8}$ in. terminal studs with 19XR frame 2 and 3 compressor or (6) $\frac{7}{8}$ -in. terminal studs with 19XR frame 4 and 5 compressor (lead connectors not supplied by Carrier). Either 3 or 6 leads must be run between compressor motor and VFD, depending on the size of the conductors or the type of motor starter employed. If only 3 leads are utilized, jumper motor terminals as follows: 1 to 6, 2 to 4, 3 to 5. Center to center distance between frame 2 and 3 compressor terminals is $3\text{-}\frac{5}{32}$ inches. Center to center distance between frame 4 and 5 compressor terminals is $4\text{-}\frac{13}{16}$ inches. Compressor motor VFD must have nameplate stamped as to conforming with Carrier Engineering requirement "Z-416."

- 4.1 Power conductor rating must meet minimum unit nameplate voltage and compressor motor RLA. Refer to the label located on the side of the chiller control panel, equipment submittal documentation or equipment product data catalog for conductor sizing data. (Conductor as defined below may be a single lead or multiple smaller ampacity leads in parallel for the purpose of carrying the equivalent or higher current of a single larger lead.)

When (3) conductors are used:

Minimum ampacity per conductor = $1.25 \times \text{compressor RLA}$

When (6) conductors are used:

Minimum ampacity per conductor = $1.25 \times \text{compressor RLA} / 2$.

- 4.2 When more than one conduit is used to run conductors from VFD to compressor motor terminal box, an equal number of leads from each phase (conductor) must be in each conduit to prevent excessive heating. (For example, conductors to motor terminals 1, 2, and 3 in one conduit, and conductors to motor terminals 4, 5, and 6 in another).
- 4.3 Compressor motor power conductors may enter terminal box through top, left side or bottom left using holes cut by contractor to suit conduit. Flexible conduit should be used for the last few feet to the terminal box for unit vibration isolation. Use of stress cones or 12 conductors larger than 500 MCM may require an oversize (special) motor terminal box (not supplied by Carrier). Lead connections between 3-phase motors and VFD must not be insulated until Carrier personnel have checked compressor and oil pump rotations.
- 4.4 Compressor motor frame to be grounded in accordance with the National Electrical Code (NFPA-70) and applicable codes. Means for grounding compressor motor is a pressure connector for #4 AWG to wire, supplied and located in the lower left side corner of the compressor motor terminal box.
- 4.5 Do not allow motor terminals to support weight of wire cables. Use cable supports and strain reliefs as required.
- 4.6 Use backup wrench when tightening lead connectors to motor terminal studs. Torque to 45 lb-ft max.
- 4.7 Do not exceed 100 ft. maximum power cable length between the VFD and motor terminals without consulting Carrier for special requirements.

Connect Power Wires to Oil Pump Starter — See Fig. 37. Connect power wires to oil pump starter mounted in machine power panel. Use separate fused disconnect or circuit breaker as shown on job wiring diagrams and Fig. 37. Check that power supply voltage agrees with oil pump voltage. Follow correct phasing for proper motor rotation.

CAUTION

Do not punch holes or drill into the top surface of either power panel. Knockouts are provided in the bottom of the power panels for wiring connections. Damage to machine could result.

Connect Power Wires to Oil Heater Contactor — Connect control power wiring between the oil heater contactor terminals and terminals LL1 and LL2 on the field wiring strip in the compressor motor starter. Refer to Fig. 38 and wiring label on the machine power panel for units without split ring diffuser. Refer to Fig. 39 for units with split ring diffuser.

WARNING

Voltage to terminals LL1 and LL2 (of each circuit) comes from a control transformer in a starter built to Carrier specifications. Do not connect an outside source of control power to the compressor motor starter (terminals LL1 and LL2 of each circuit). An outside power source will produce dangerous voltage at the line side of the starter, because supplying voltage at the transformer secondary terminals produces input level voltage at the transformer primary terminals. Severe injury could result.

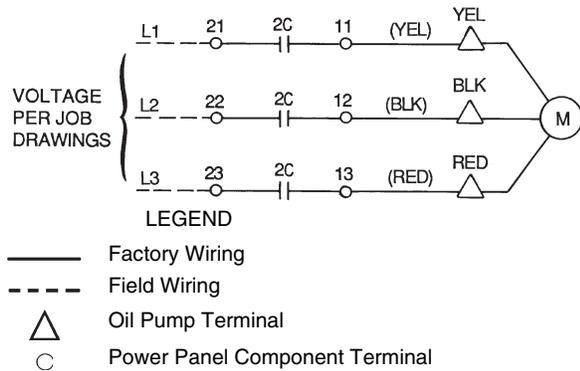


Fig. 37 — Oil Pump Wiring

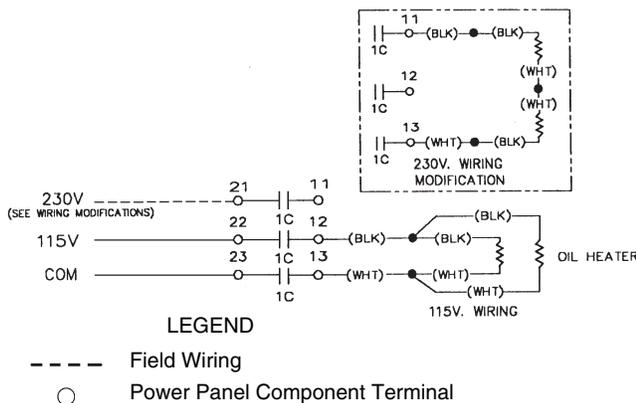


Fig. 38 — Oil Heater and Control Power Wiring (Units without Split Ring Diffuser)

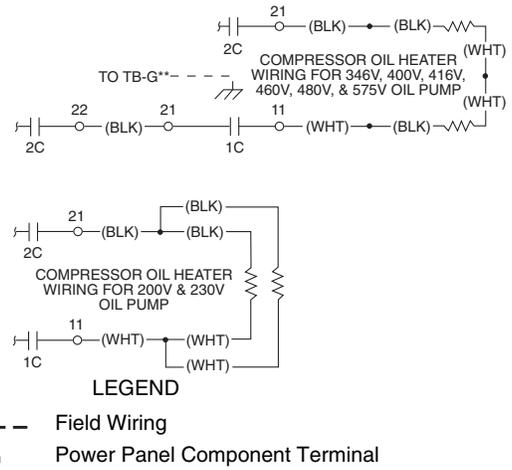


Fig. 39 — Oil Heater and Control Power Wiring (Units with Split Ring Diffuser)

Connect Wiring from Starter to Power Panel — Connect control wiring from main motor starter to the machine power panel. All control wiring must use shielded cable. Also, connect the communications cable. Refer to the job wiring diagrams for cable type and cable number. Make sure the control circuit is grounded in accordance with applicable electrical codes and instructions on machine control wiring label.

CARRIER COMFORT NETWORK INTERFACE — The Carrier Comfort Network® (CCN) communication bus wiring is supplied and installed by the electrical contractor. It consists of shielded, 3-conductor cable with drain wire.

The system elements are connected to the communication bus in a daisy chain arrangement. The positive pin of each system element communication connector must be wired to the positive pins of the system element on either side of it. The negative pins must be wired to the negative pins. The signal ground pins must be wired to the signal ground pins. See Fig. 27 for location of the CCN network connections on the terminal strip labeled CCN.

NOTE: Conductors and drain wire must be 20 AWG (American Wire Gage) minimum stranded, tinned copper. Individual conductors must be insulated with PVC, PVC/nylon, vinyl, Teflon*, or polyethylene. An aluminum/polyester 100% foil shield and an outer jacket of PVC, PVC/nylon, chrome vinyl, or Teflon with a minimum operating temperature range of -4 F to 140 F (-20 C to 60 C) is required. See table below for cables that meet the requirements.

| MANUFACTURER | CABLE NO. |
|--------------|--------------|
| ALPHA | 2413 or 5463 |
| AMERICAN | A22503 |
| BELDEN | 8772 |
| COLUMBIA | 02525 |

When connecting the CCN communication bus to a system element, a color code system for the entire network is recommended to simplify installation and checkout. The following color code is recommended:

| SIGNAL TYPE | CCN BUS CONDUCTOR INSULATION COLOR | CCN NETWORK INTERFACE (CONTROL PANEL) |
|-------------|------------------------------------|---------------------------------------|
| + GROUND | Red | + |
| - | White | G |
| | Black | - |

If a cable with a different color scheme is selected, a similar color code should be adopted for the entire network.

*Teflon is a registered trademark of DuPont.

At each system element, the shields of its communication bus cables must be tied together. If the communication bus is entirely within one building, the resulting continuous shield must be connected to ground at only one single point. See Fig. 27. If the communication bus cable exits from one building and enters another, the shields must be connected to ground at the lightning suppressor in each building where the cable enters or exits the building (one point only).

To connect the 19XR chiller to the network, proceed as follows (see Fig. 27):

1. Route wire through knockout in back of control panel.
2. Strip back leads.
3. Crimp one no. 8 size spring spade terminal on each conductor.
4. Attach red to “+” terminal and white to “G” terminal and black to “-” terminal of CCN Network interface located in the control panel.

OPTIONAL UPC OPEN CONTROLLER WIRING — The optional UPC Open controller communicates using BACnet* on an MS/TP network segment communications at 9600 bps, 19.2 kbps, 38.4 kbps, or 76.8 kbps.

Wire the controllers on an MS/TP network segment in a daisy-chain configuration. Wire specifications for the cable are 22 AWG (American Wire Gage) or 24 AWG, low-capacitance, twisted, stranded, shielded copper wire. The maximum length is 2000 ft.

Install a BT485 terminator on the first and last controller on a network segment to add bias and prevent signal distortions due to echoing. See Fig. 40-42.

To wire the UPC Open controller to the BAS network:

1. Pull the screw terminal connector from the controller's BAS Port.
2. Check the communications wiring for shorts and grounds.
3. Connect the communications wiring to the BAS port's screw terminals labeled Net +, Net -, and Shield.

NOTE: Use the same polarity throughout the network segment.

4. Insert the power screw terminal connector into the UPC Open controller's power terminals if they are not currently connected.
5. Verify communication with the network by viewing a module status report. To perform a module status report using the BACview† keypad/display unit, press and hold the “FN” key then press the “.” Key.

To install a BT485 terminator, push the BT485, on to the BT485 connector located near the BACnet connector.

NOTE: The BT485 terminator has no associated polarity.

To order a BT485 terminator, consult Commercial Products i-Vu® Open Control System Master Prices.

MS/TP Wiring Recommendations — Recommendations are shown in Tables 12 and 13. The wire jacket and UL temperature rating specifications list two acceptable alternatives. The Halar** specification has a higher temperature rating and a tougher outer jacket than the SmokeGard†† specification, and it is appropriate for use in applications where the user is concerned about abrasion. The Halar jacket is also less likely to crack in extremely low temperatures.

NOTE: Use the specified type of wire and cable for maximum signal integrity.

* BACnet is a registered trademark of ASHRAE (American Society of Heating, Refrigerating, and Air-Conditioning Engineers).

† BACview is a registered trademark of Automated Logic Corporation.

** Halar is a registered trademark of Solvay Plastics.

†† SmokeGard is a trademark of AlphaGary-Mexichem Corp.

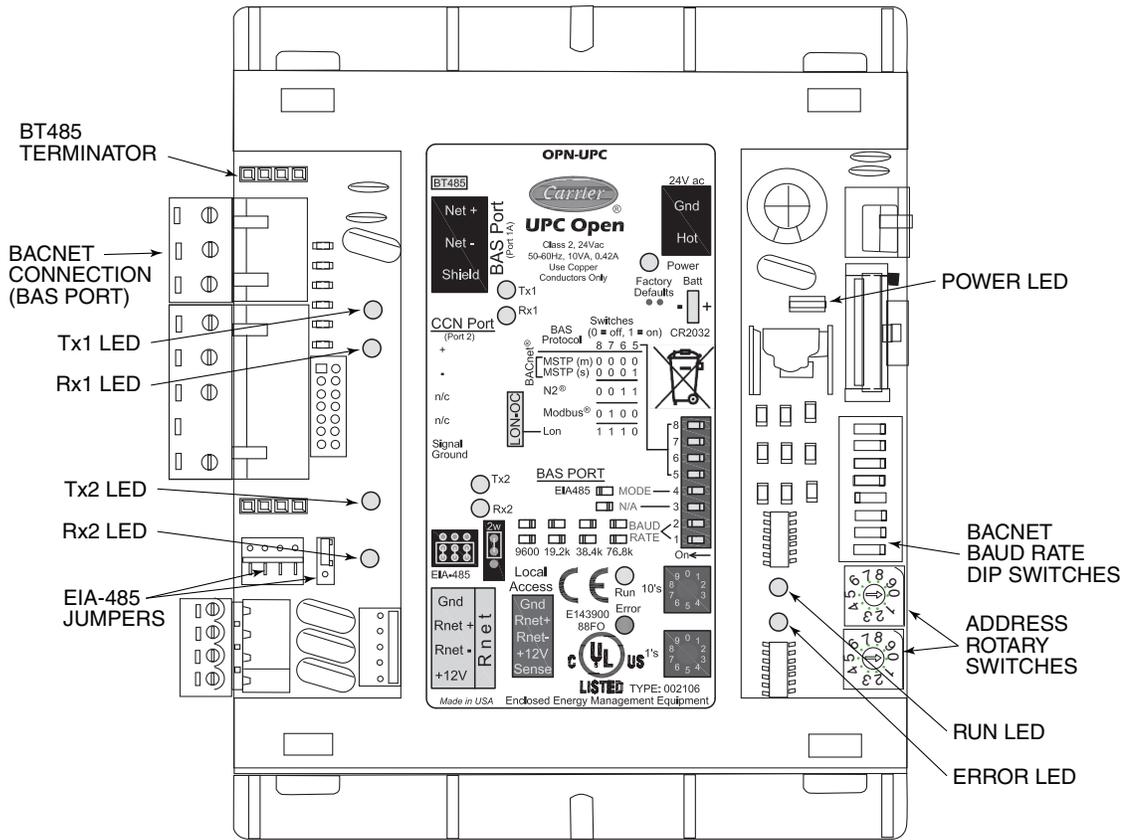


Fig. 40 — UPC Open Controller

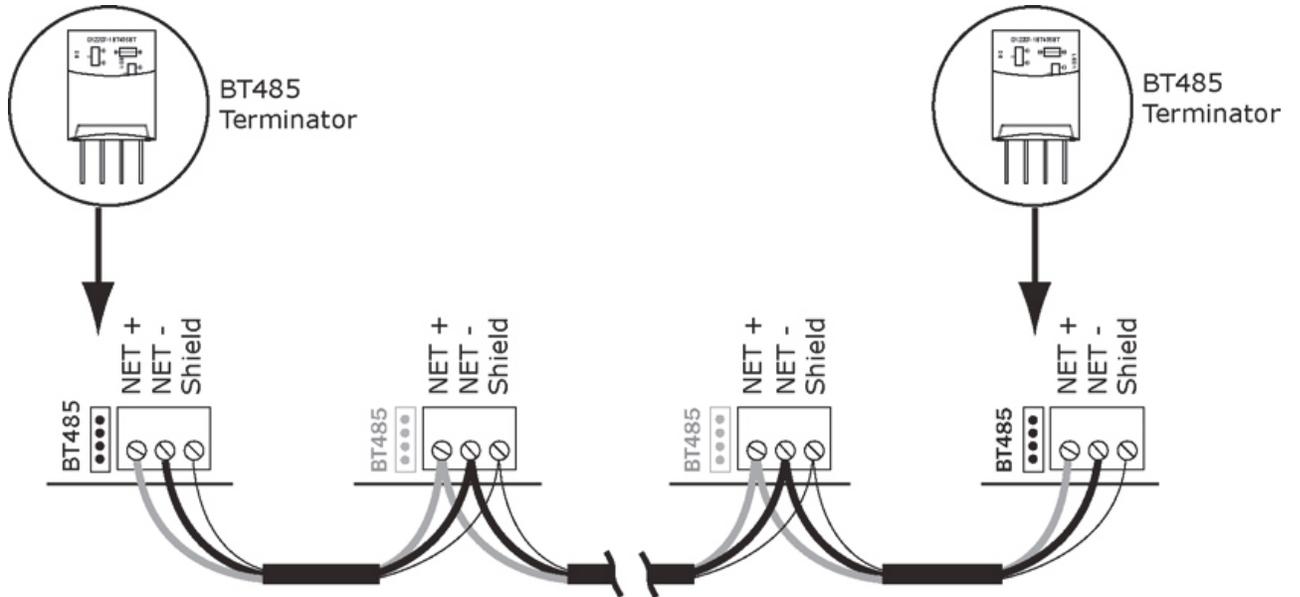


Fig. 41 — Network Wiring

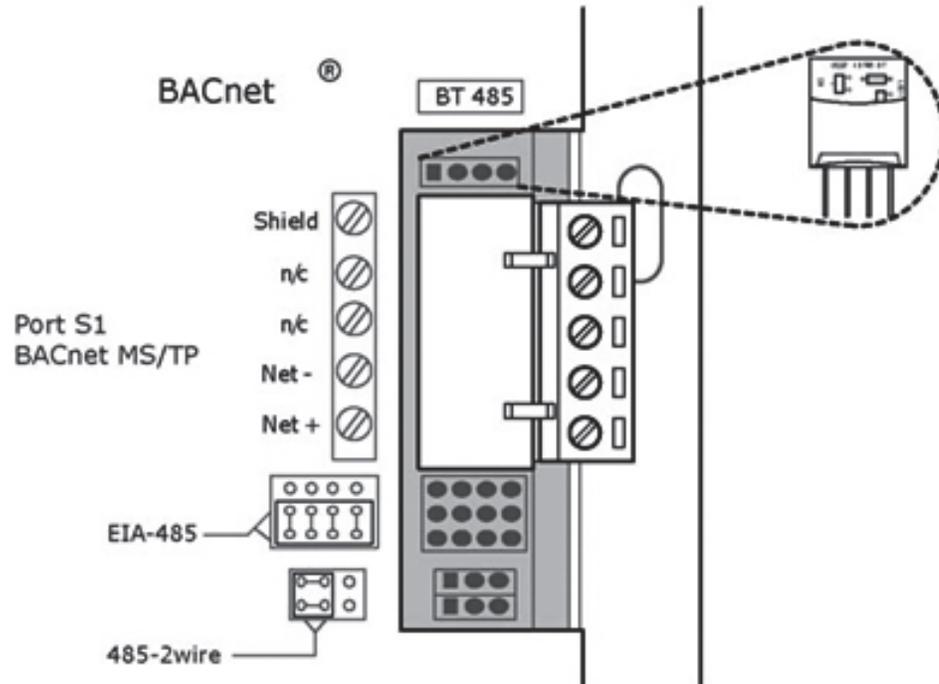


Fig. 42 — BT485 Terminator Installation

Table 12 — MS/TP Wiring Recommendations

| SPECIFICATION | RECOMMENDATION |
|---------------------------------|---|
| CABLE | Single twisted pair, low capacitance, CL2P, 22 AWG (7x30), TC foam FEP, plenum rated cable |
| CONDUCTOR | 22 or 24 AWG stranded copper (tin plated) |
| INSULATION | Foamed FEP 0.015 in. (0.381 mm) wall 0.060 in. (1.524 mm) O.D. |
| COLOR CODE | Black/White |
| TWIST LAY | 2 in. (50.8 mm) lay on pair 6 twists/foot (20 twists/meter) nominal |
| SHIELDING | Aluminum/Mylar shield with 24 AWG TC drain wire |
| JACKET | SmokeGard Jacket (SmokeGard PVC) 0.021 in. (0.5334 mm) wall 0.175 in. (4.445 mm) O.D. Halar Jacket (E-CTFE) 0.010 in. (0.254 mm) wall 0.144 in. (3.6576 mm) O.D. |
| DC RESISTANCE | 15.2 Ohms/1000 feet (50 Ohms/km) nominal |
| CAPACITANCE | 12.5 pF/ft (41 pF/meter) nominal conductor to conductor |
| CHARACTERISTIC IMPEDANCE | 100 Ohms nominal |
| WEIGHT | 12 lb/1000 feet (17.9 kg/km) |
| UL TEMPERATURE RATING | SmokeGard 167°F (75°C) Halar -40 to 302°F (-40 to 150°C) |
| VOLTAGE | 300 Vac, power limited |
| LISTING | UL: NEC CL2P, or better |

LEGEND

- AWG** — American Wire Gage
- CL2P** — Class 2 Plenum Cable
- DC** — Direct Current
- FEP** — Fluorinated Ethylene Polymer
- NEC** — National Electrical Code
- O.D.** — Outside Diameter
- TC** — Tinned Copper
- UL** — Underwriters Laboratories

Table 13 — Open System Wiring Specifications and Recommended Vendors

| WIRING SPECIFICATIONS | | RECOMMENDED VENDORS AND PART NUMBERS | | | |
|-------------------------------|---|--------------------------------------|--------|----------|----------------------------|
| WIRE TYPE | DESCRIPTION | CONNECT AIR INTERNATIONAL | BELDEN | RMCORP | CONTRACTORS WIRE AND CABLE |
| MS/TP NETWORK (RS-485) | 22 AWG, single twisted shielded pair, low capacitance, CL2P, TC foam FEP, plenum rated. See MS/TP Installation Guide for specifications. | W221P-22227 | — | 25160PV | CLP0520LC |
| | 24 AWG, single twisted shielded pair, low capacitance, CL2P, TC foam FEP, plenum rated. See MS/TP Installation Guide for specifications. | W241P-2000F | 82841 | 25120-OR | — |
| RNET | 4 conductor, unshielded, CMP, 18 AWG, plenum rated. | W184C-2099BLB | 6302UE | 21450 | CLP0442 |

LEGEND

- AWG** — American Wire Gage
- CL2P** — Class 2 Plenum Cable
- CMP** — Communications Plenum Rated
- FEP** — Fluorinated Ethylene Polymer
- TC** — Tinned Copper

Step 6 — Install Field Insulation

⚠ CAUTION

Protect insulation from weld heat damage and weld splatter. Cover with wet canvas cover during water piping installation.

When installing insulation at the jobsite, insulate the following components:

- compressor motor
- cooler shell

- cooler tube sheets
- suction piping
- motor cooling drain
- oil reclaim piping
- oil cooler refrigerant side tubing
- refrigerant liquid line to cooler

NOTE: Insulation of the waterbox covers is applied only at the jobsite by the contractor. When insulating the covers, make sure there is access for removal of waterbox covers for servicing. See Fig. 43.

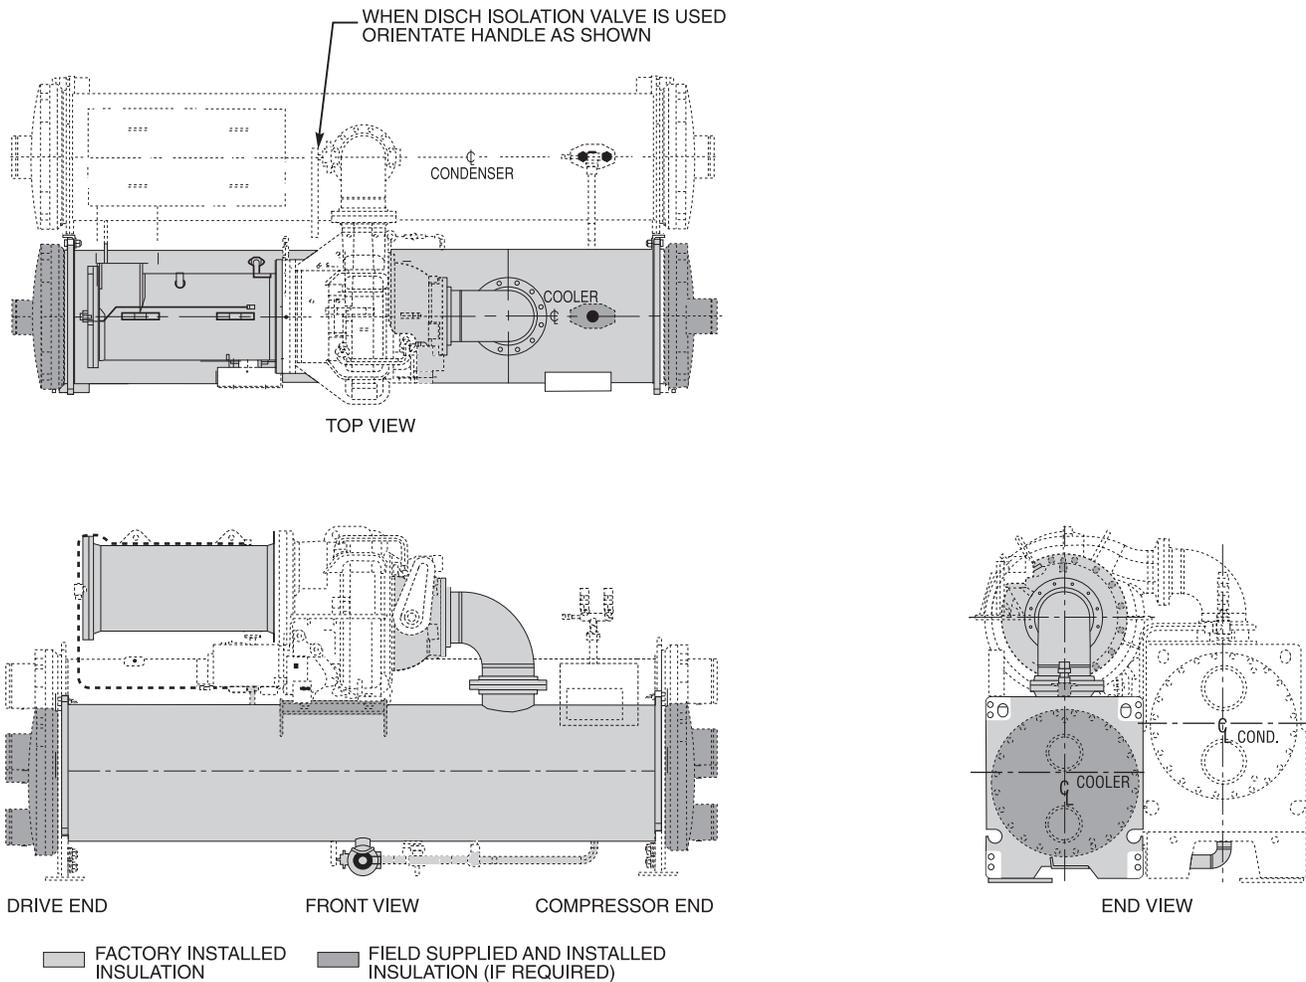


Fig. 43 — 19XR Insulation Area

INSTALLATION START-UP REQUEST CHECKLIST

NOTE: To avoid injury to personnel and damage to equipment or property when completing the procedures listed in this start-up checklist, use good judgment, follow safe practices and adhere to the safety considerations/information as outlined in preceding sections of this Installation Instructions document.

Machine Model Number: 19XR Serial Number: _____

To: _____

Date _____

Project Name _____

Attn: _____

Carrier Job Number _____

The following information provides the status of the chiller installation.

| | YES/NO (N/A) | DATE TO BE COMPLETED |
|---|-----------------|-------------------------|
| 1. The machine is level. | _____ | _____ |
| 2. The machine components are installed and connected in accordance with the installation instructions. | _____ | _____ |
| 3. The isolation package and grouting (if necessary) are installed. | _____ | _____ |
| 4. The relief valves are piped to the atmosphere. | _____ | _____ |
| 5. All piping is installed and supported. Direction of flow is indicated in accordance with the installation instructions and job prints. | | |
| a. Chilled water piping | _____ | _____ |
| b. Condenser water piping | _____ | _____ |
| c. Waterbox drain piping | _____ | _____ |
| d. Pumpout unit condenser piping (if installed) | _____ | _____ |
| e. Other _____ | _____ | _____ |
| 6. Gages are installed as called for on the job prints required to establish design flow for the cooler and condenser. | | |
| a. Water pressure gages IN and OUT | _____ | _____ |
| b. Water temperature gages IN and OUT | _____ | _____ |
| 7. The machine's starter wiring is complete. The wiring is installed per installation instructions and certified prints. | | |
| a. Power wiring to compressor motor. (Motor leads will not be taped until the Carrier technician megger tests the motor.) | _____ | _____ |
| b. Oil pump wiring | _____ | _____ |
| c. Oil heater/control wiring | _____ | _____ |
| d. Carrier controls can independently energize water pumps and tower fan. | _____ | _____ |
| e. Line side voltage is within $\pm 10\%$ of chiller nameplate voltage. | _____ | _____ |
| f. Other _____ | _____ | _____ |
| 8. The motor starter has not been supplied by Carrier. It has been installed according to the manufacturer's instructions. | _____ | _____ |
| 9. The motor starter has not been supplied by Carrier and it has been checked for proper operation. | _____ | _____ |

Manufacturer reserves the right to discontinue, or change at any time, specifications or designs without notice and without incurring obligations.

