


Wiring Diagrams

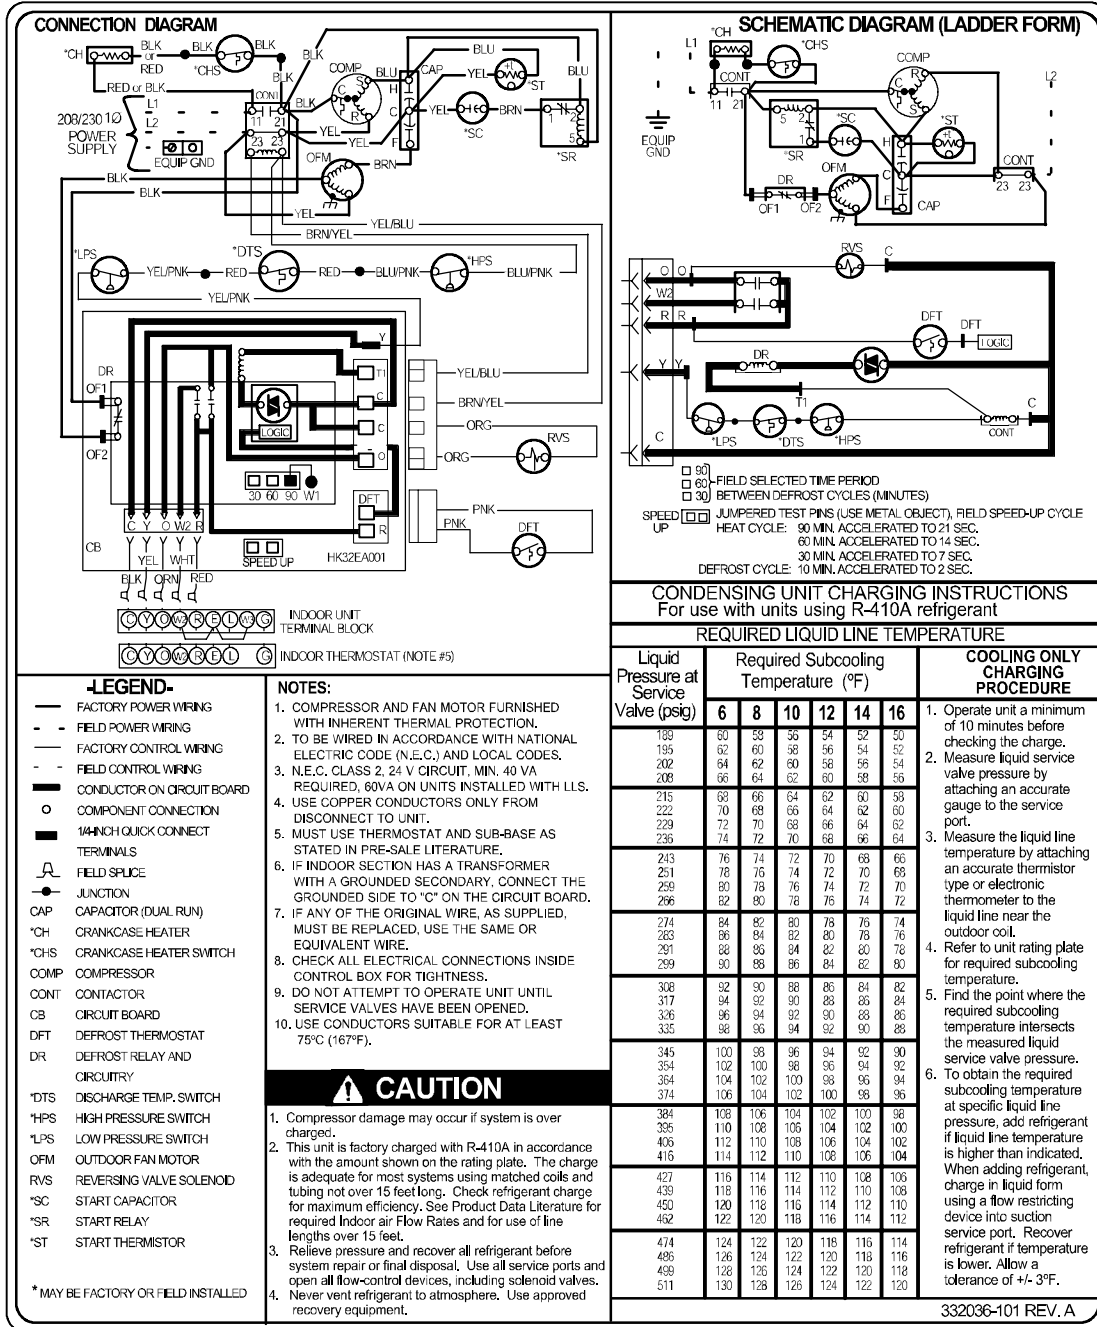

LEGEND

- FACTORY POWER WIRING
- - - FIELD POWER WIRING
- FACTORY CONTROL WIRING
- - - FIELD CONTROL WIRING
- CONDUCTOR ON CIRCUIT BOARD
- COMPONENT CONNECTION
- ▬ 1/4-INCH QUICK CONNECT
- ⊕ TERMINALS
- ⊕ FIELD SPURCE
- JUNCTION
- CAP CAPACITOR (DUAL RUN)
- *CH CRANKCASE HEATER
- *CHS CRANKCASE HEATER SWITCH
- COMP COMPRESSOR
- CONT CONTACTOR
- CB CIRCUIT BOARD
- *SR START RELAY AND CIRCUITRY
- *DTS DISCHARGE TEMP. SWITCH
- *HPS HIGH PRESSURE SWITCH
- *LPS LOW PRESSURE SWITCH
- OFM OUTDOOR FAN MOTOR
- RVS REVERSING VALVE SOLENOID
- *SC START CAPACITOR
- *SR START RELAY
- *ST START THERMISTOR

* MAY BE FACTORY OR FIELD INSTALLED

NOTES:

- COMPRESSOR AND FAN MOTOR FURNISHED WITH INHERENT THERMAL PROTECTION.
- TO BE WIRED IN ACCORDANCE WITH NATIONAL ELECTRIC CODE (N.E.C.) AND LOCAL CODES.
- N.E.C. CLASS 2, 24 V CIRCUIT, MIN. 40 VA REQUIRED, 60VA ON UNITS INSTALLED WITH LLS.
- USE COPPER CONDUCTORS ONLY FROM DISCONNECT TO UNIT.
- MUST USE THERMOSTAT AND SUB-BASE AS STATED IN PRE-SALE LITERATURE.
- IF INDOOR SECTION HAS A TRANSFORMER WITH A GROUNDED SECONDARY, CONNECT THE GROUNDED SIDE TO "C" ON THE CIRCUIT BOARD.
- IF ANY OF THE ORIGINAL WIRE, AS SUPPLIED, MUST BE REPLACED, USE THE SAME OR EQUIVALENT WIRE.
- CHECK ALL ELECTRICAL CONNECTIONS INSIDE CONTROL BOX FOR TIGHTNESS.
- DO NOT ATTEMPT TO OPERATE UNIT UNTIL SERVICE VALVES HAVE BEEN OPENED.
- USE CONDUCTORS SUITABLE FOR AT LEAST 75°C (167°F).

CAUTION

- Compressor damage may occur if system is over charged.
- This unit is factory charged with R-410A in accordance with the amount shown on the rating plate. The charge is adequate for most systems using matched coils and tubing not over 15 feet long. Check refrigerant charge for maximum efficiency. See Product Data Literature for required Indoor Air Flow Rates and for use of line lengths over 15 feet.
- Relieve pressure and recover all refrigerant before system repair or final disposal. Use all service ports and open all flow-control devices, including solenoid valves.
- Never vent refrigerant to atmosphere. Use approved recovery equipment.

332036-101 REV. A

Fig. 1 – Wiring Diagram — Model sizes 18 - 48, 208/230-1

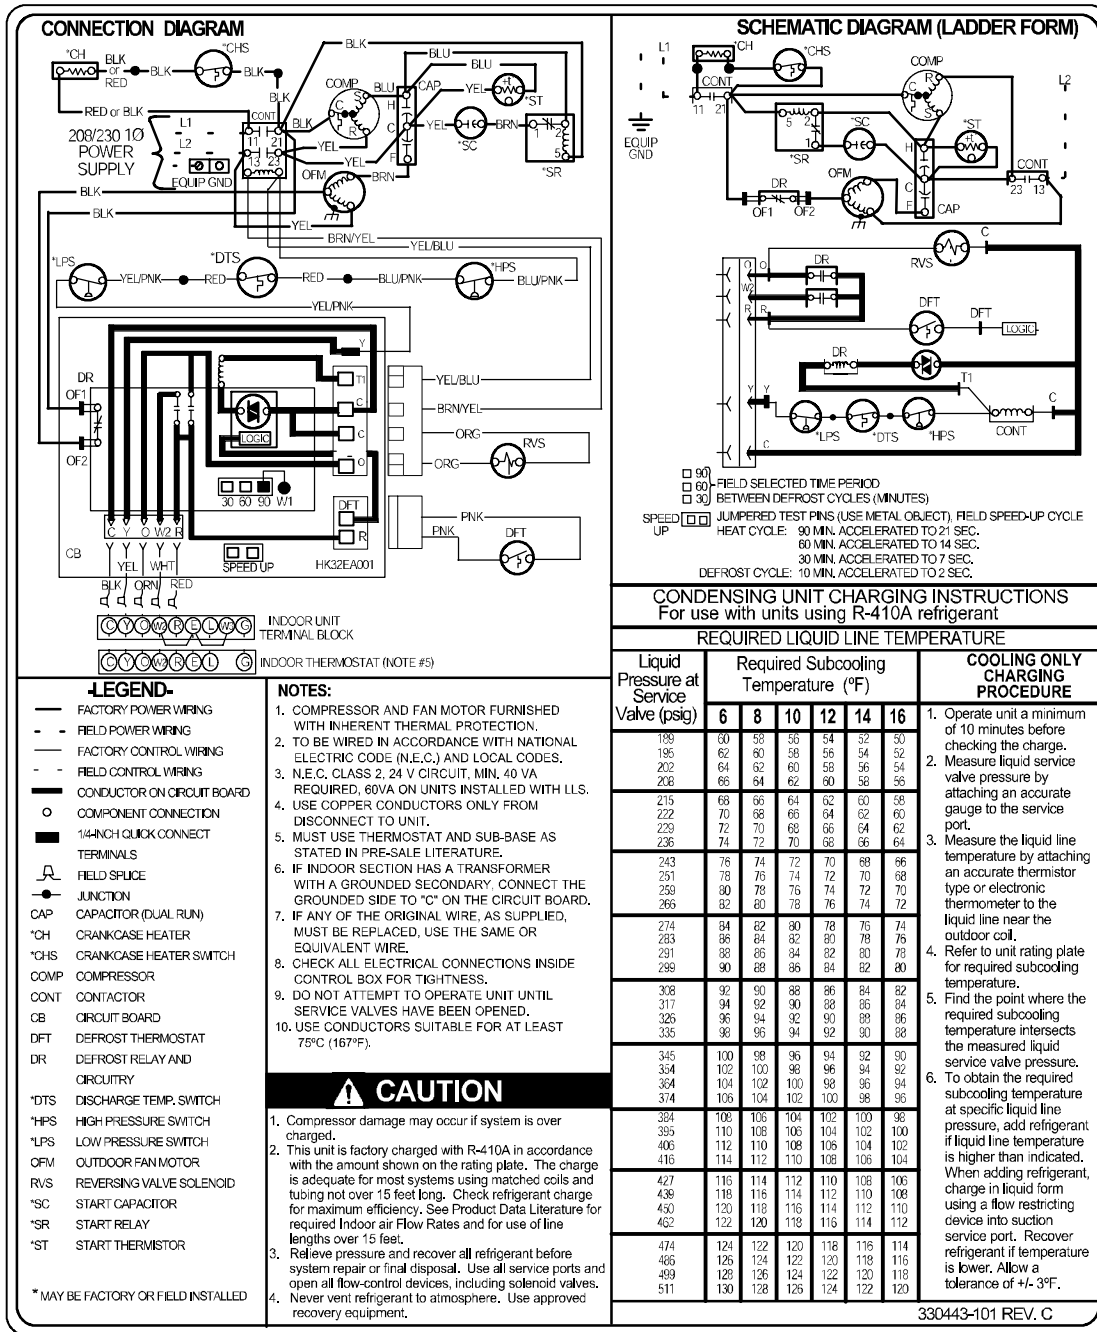


Fig. 2 – Wiring Diagram — Model size 60, 208/230-1